



TOYOTA

moving forward ▶

YARIS SEDAN

*2008
Quick Reference Guide*

2008 YARIS Sedan

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Yaris.

! A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Yaris operations. Every Yaris owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in yellow throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.


All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX


Item	Page no.
OVERVIEW	
Engine maintenance	7
Fuel tank door release and cap	6
Hood release	7
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry	6
Trunk release	6
FEATURES/OPERATIONS	
Air Conditioning/Heating	13
Audio	12-13
Automatic Transmission	8
Bottle holders-Rear seat	15
Clock	14
Cruise control	14
Cup holders	15
Light control-Instrument panel	14
Lights & turn signals	11
Parking brake	9
Power outlet	13
Seat adjustments-Front	9
Seat adjustments-Rear	10
Seats-Head restraints	10
Tilt steering wheel	8
Windows-Power	9
Windshield wipers & washers	11
SAFETY AND EMERGENCY FEATURES	
Door locks-Power	16
Doors-Child safety locks	16
Seat belts	16
Seat belts-Shoulder belt anchor	17
Spare tire & tools	17
Trunk-Internal release	17
Tire Pressure Warning System	16

OVERVIEW

Instrument panel

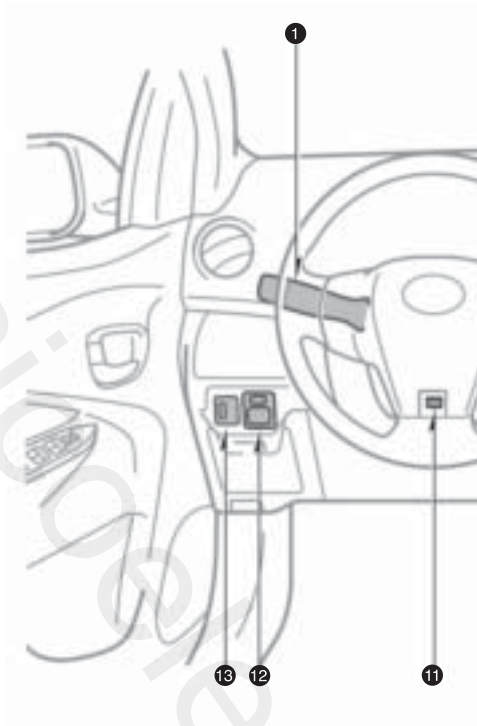

- ① Headlight, turn signal and front fog* light controls
- ② Wiper and washer controls
- ③ Audio system
- ④ Emergency flasher switch
- ⑤ "AIR BAG ON" and "AIR BAG OFF" indicator
- ⑥ Front passenger seat belt reminder light
- ⑦ Air Conditioning controls
- ⑧ AUX adapter*

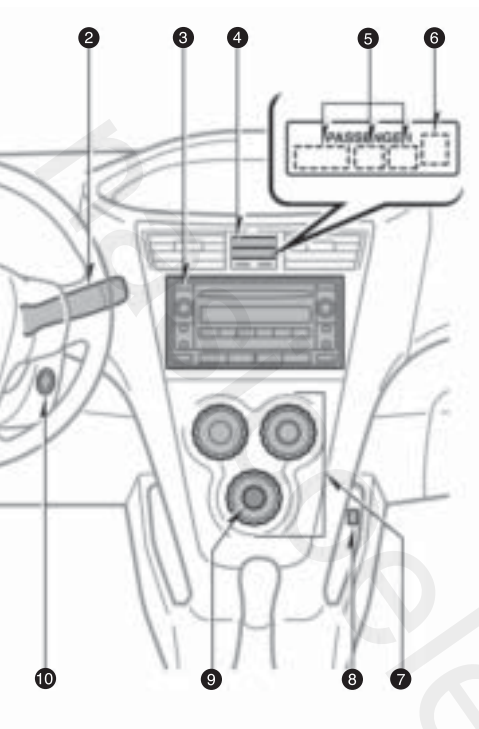


- 9 Rear window defogger switch*
- 10 Engine switch
- 11 Tilt steering lock release lever
- 12 Power rearview mirror control switches*
- 13 Instrument panel light control

* If equipped


OVERVIEW

Instrument cluster

With tachometer

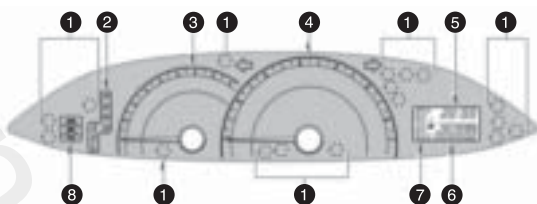

Without tachometer

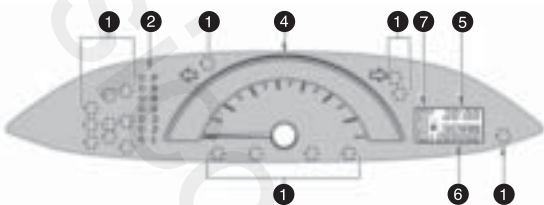



- ❶ Service indicator and reminder
- ❷ Gear shift position indicator*
- ❸ Tachometer
- ❹ Speedometer
- ❺ Clock
- ❻ Odometer and two trip meters
- ❼ Fuel gauge
- ❽ Door indicator


* If equipped

Indicator symbols

BRAKE Brake system warning¹



 
 











 Driver seat belt reminder¹
(alarm will sound if speed is over 12 mph)

 Front passenger seat belt reminder¹
(alarm will sound if speed is over 12 mph)

 Charging system warning¹

¹ For details, refer to “If a warning light turns on or a warning buzzer sounds...,” Section 5-2, 2008 Owner’s Manual.

  
² For details, refer to “If your vehicle overheats,” Section 5-2, 2008 Owner’s Manual

	Malfunction/Check Engine indicator ¹
	Low engine oil pressure warning ¹
	Open door warning ¹
	Door indicator ¹
	Airbag SRS warning ¹
	Low windshield washer fluid level warning ¹
P/S	Electric power steering system warning ¹
	Low fuel level warning ¹
MAINT REQD	Engine oil replacement reminder ¹
AIR BAG 	"AIR BAG ON" indicator
AIR BAG OFF	"AIR BAG OFF" indicator
	Headlight low beam indicator
	Headlight high beam indicator
	Front fog light indicator
	Turn signal indicator
	High engine coolant temperature warning ¹
	Low engine coolant temperature indicator ²
CRUISE	Cruise control indicator ³
ABS	Anti-lock Brake System warning ¹
	Tire Pressure Warning ¹

³ If this light flashes, refer to "Cruise control," Section 2-4, 2008 Owner's Manual.


OVERVIEW

Fuel tank door release and cap

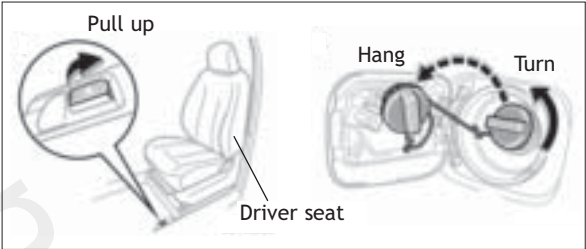

NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine "CHECK" indicator may illuminate.

Keyless entry (if equipped)

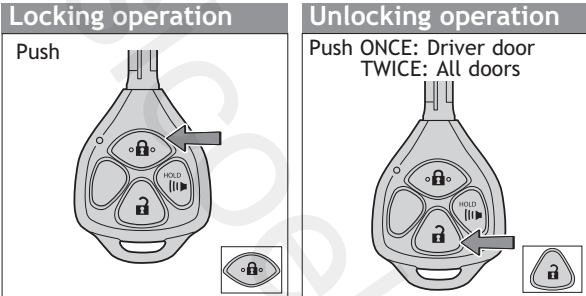

NOTE: After unlocking, if a door is not opened within 30 seconds, all doors will relock for safety.

Panic button




Trunk release



Hood release



Engine maintenance

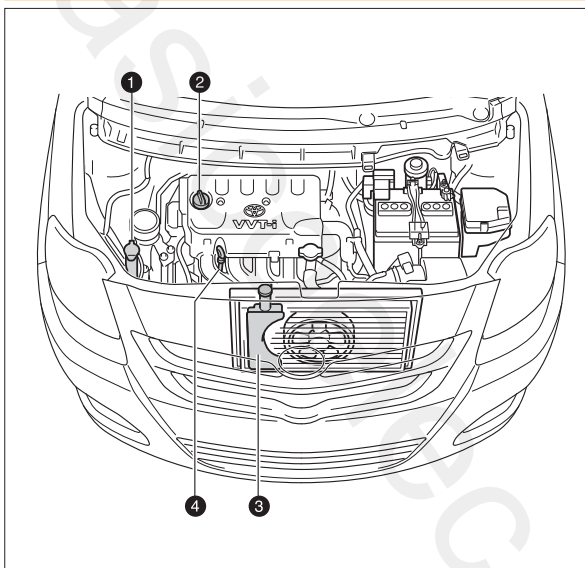


- ① Windshield washer fluid tank
- ② Engine oil filler cap
- ③ Engine coolant reservoir
- ④ Engine oil level dipstick

Note: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Owner's Warranty Information Booklet," "Scheduled Maintenance Guide" or "Owner's Manual Supplement."

FEATURES/OPERATIONS


Automatic Transmission (if equipped)

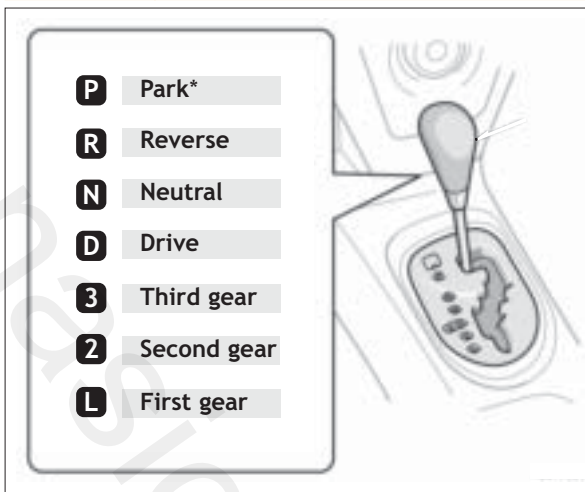

* The engine switch must be ON, and the brake pedal depressed to shift from "Park."

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.


Tilt steering wheel

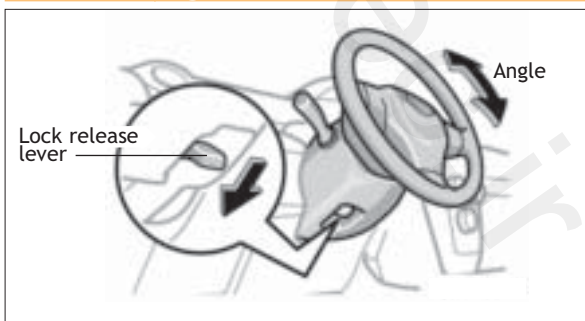


Hold wheel, push lever down, set angle and return lever.

Note: Do not attempt to adjust while the vehicle is in motion.

Parking brake

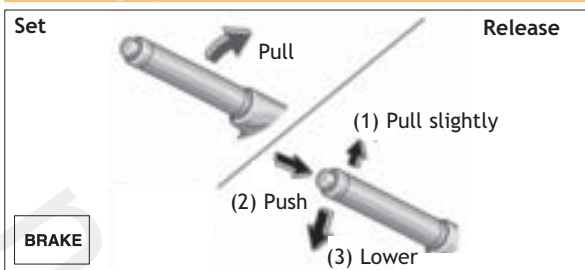

Windows-Power (if equipped)

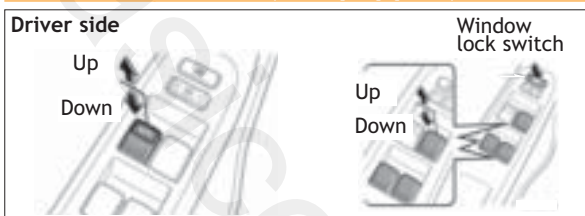


Window operation

Automatic operation (driver side only) Push the switch completely down and release to fully open. To stop window midway, lightly pull the switch up.


Window lock switch Deactivates all passenger windows. Driver's window remains operable.

Seat adjustments-Front

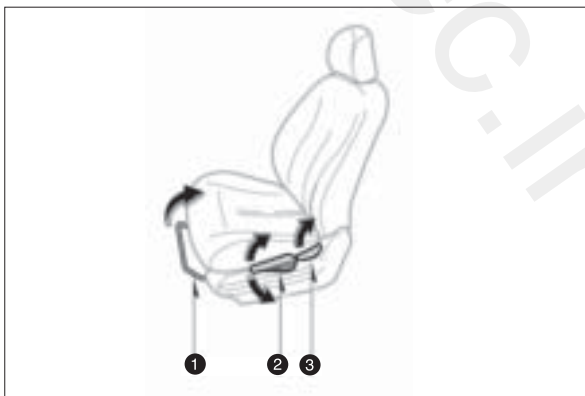


- 1 Position
- 2 Height crank (driver side only)
- 3 Seatback angle

Seats-Head restraints

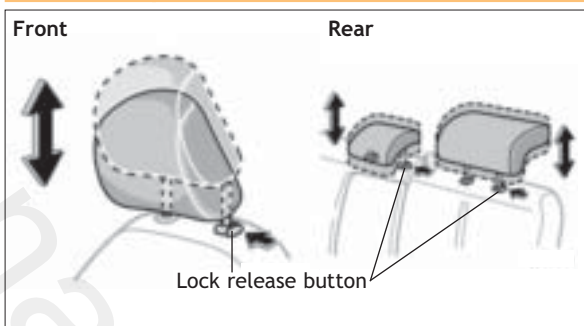

Seat adjustments-Rear (fold-down type)

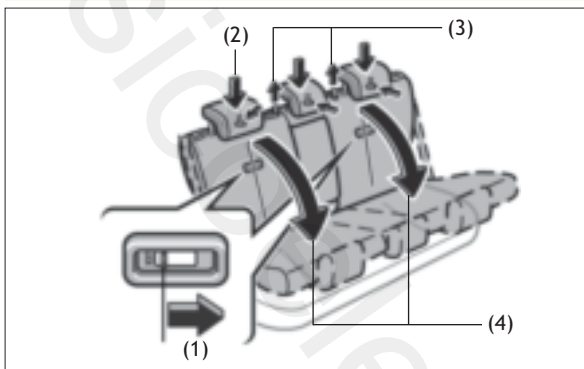


To fold down the rear seatback

- (1) Slide the seatback security lock to the right unlock position from the trunk room.
- (2) Lower the seat headrests.
- (3) Pull the lock release knob up.
- (4) Fold the seatback down.



Refer to the *Owner's Manual* for more details.

Lights & turn signals


Headlights

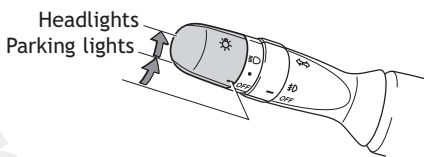

Low beam

 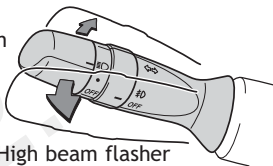

Turn signals

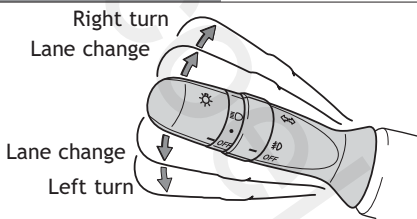

Front fog lights (if equipped)



Turn

Front fog lights turn on only when the headlights are on low beam.

Windshield wipers & washers



Single wipe

Interval wipe

Slow


Fast

Pull to wash and wipe


FEATURES/OPERATIONS

Audio

Type 1

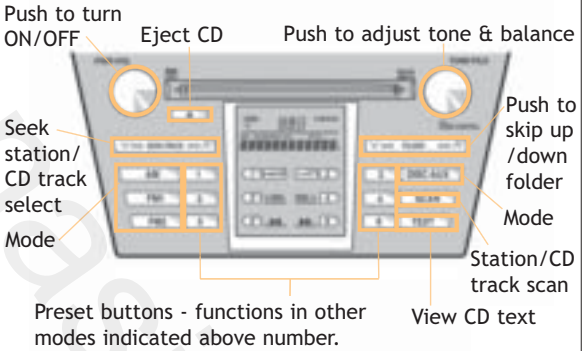

Type 2

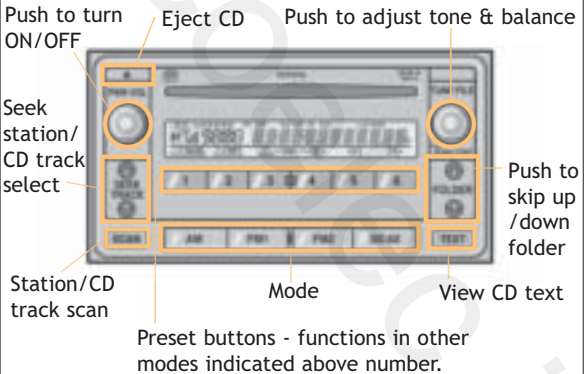

CD PLAYER

To scan tracks on a disc Push and hold "SCAN." Push again to hold selection.

RADIO

To preset stations Tune in the desired station and hold down a preset button (1-6) until you hear a beep. Push desired preset button (1-6) to select.


To scan stations Push "SCAN." Push and hold to scan preset stations. Push again to hold selection.


 
AUX audio jack (if equipped)



By inserting a mini plug of a commercially available component into the AUX audio jack, you can listen to music from a portable audio device through the vehicle's speaker system.


Air Conditioning/Heating

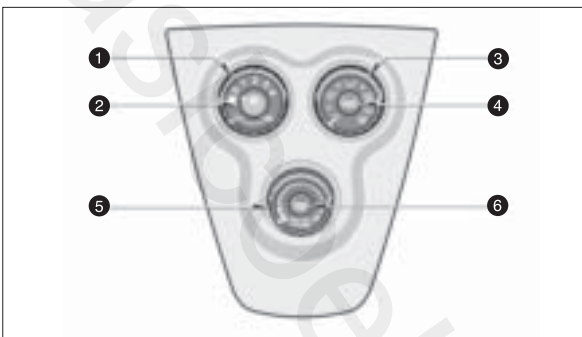

- 1 Fresh or recirculated cabin air
- 2 Fan speed
- 3 Airflow vent
In "  " or "  " mode, use fresh air to reduce window fogging.
- 4 Air Conditioning ON/OFF
- 5 Temperature
- 6 Rear defogger*

* If equipped

Power outlet (if equipped)

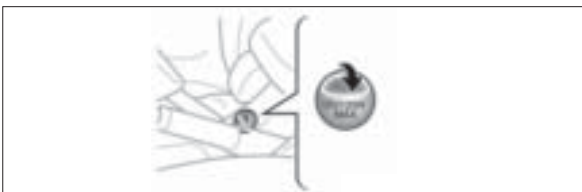


Designed for 12V car accessories. Key must be in the "ACC" or "ON" position to be used.


FEATURES/OPERATIONS

Cruise control (if equipped)

Turning system ON/OFF

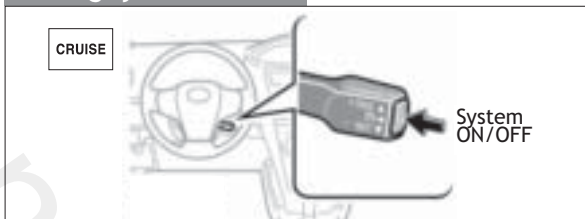

Functions

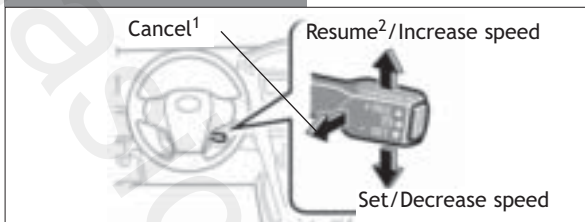


¹ The set speed may also be cancelled by depressing the brake pedal.


² Unless vehicle speed drops below 10 mph, the set speed may be resumed once vehicle exceeds 25 mph.

Refer to the *Owner's Manual* for more details.

Light control-Instrument panel

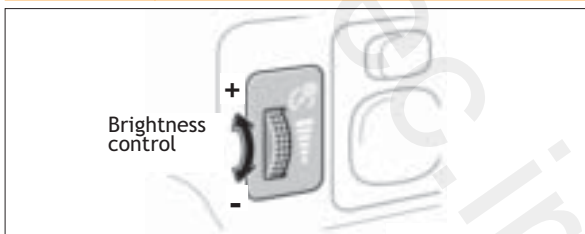

Clock

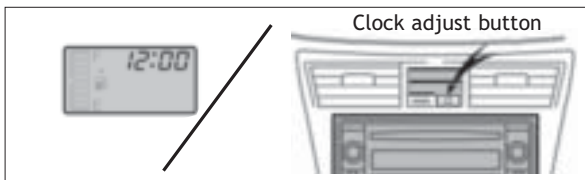

Refer to the *Owner's Manual* for more details.

Cup holders

Front



Rear

Rear console box



Rear seat armrest*




* If equipped

Bottle holders-Rear seat




SAFETY AND EMERGENCY FEATURES

Door locks-Power (if equipped)

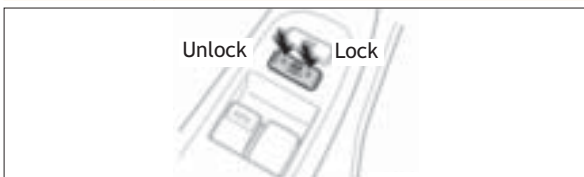


Doors-Child safety locks

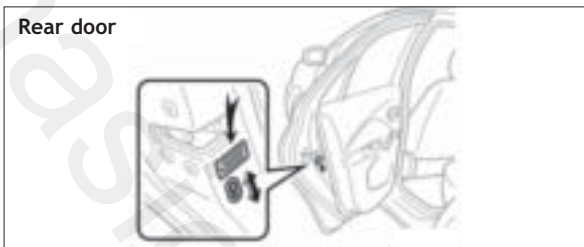

Moving the lever to "LOCK" will allow the door to be opened only from the outside.

Seat belts

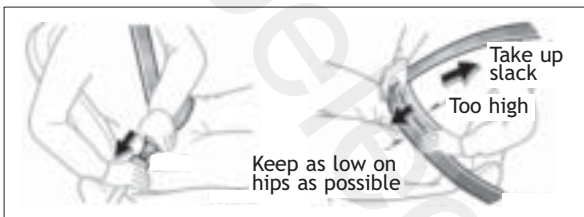

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.


To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

Tire Pressure Warning System

If tire pressure becomes critically low on any of the tires (excluding the spare), indicator will illuminate. Correctly adjusting tire inflation will turn off the light after a few minutes. If the light does not turn off, have the system checked by your Toyota dealer.


Refer to the *Owner's Manual* for more details.

Seat belts-Shoulder belt anchor

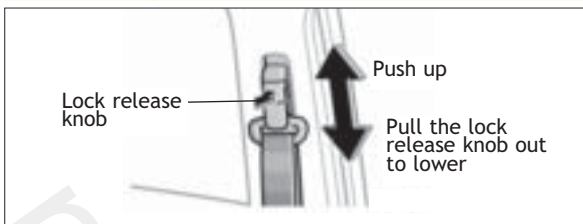

Spare tire & tools

Tool location

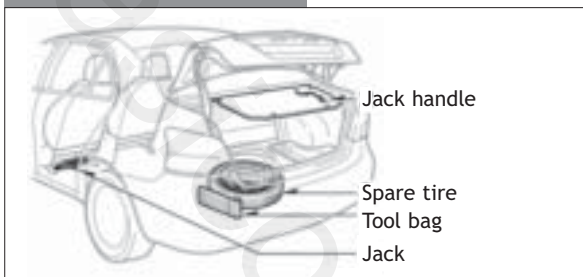


Removing the spare tire



Loosen and remove the bolt.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

Trunk-Internal release

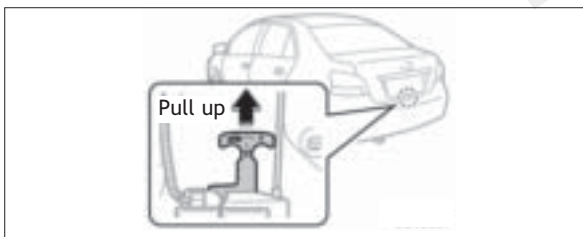



Customer Experience Center
1-800-331-4331