

SECTION **WW**
WIPER & WASHER

CONTENTS

BASIC INSPECTION	3	BCM (BODY CONTROL MODULE) : Diagnosis Procedure	21
DIAGNOSIS AND REPAIR WORKFLOW	3	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)	21
Work Flow	3	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) : Diagnosis Procedure	21
FUNCTION DIAGNOSIS	5	FRONT WIPER MOTOR LO CIRCUIT	23
FRONT WIPER AND WASHER SYSTEM	5	Component Function Check	23
System Diagram	5	Diagnosis Procedure	23
System Description	5	FRONT WIPER MOTOR HI CIRCUIT	25
Component Parts Location	8	Component Function Check	25
Component Description	8	Diagnosis Procedure	25
HEADLAMP WASHER SYSTEM	10	FRONT WIPER AUTO STOP SIGNAL CIRCUIT	27
System Diagram	10	Component Function Check	27
System Description	10	Diagnosis Procedure	27
Component Parts Location	11	FRONT WIPER MOTOR GROUND CIRCUIT ...	29
Component Description	11	Diagnosis Procedure	29
DIAGNOSIS SYSTEM (BCM)	12	WASHER SWITCH	30
COMMON ITEM	12	Description	30
COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)	12	Component Inspection	30
WIPER	13	HEADLAMP WASHER RELAY	31
WIPER : CONSULT-III Function (BCM - WIPER)...	13	Component Inspection	31
DIAGNOSIS SYSTEM (IPDM E/R)	15	HEADLAMP WASHER CIRCUIT	32
Diagnosis Description	15	Component Function Check	32
CONSULT-III Function (IPDM E/R)	17	Diagnosis Procedure	32
COMPONENT DIAGNOSIS	20	FRONT WIPER AND WASHER SYSTEM	35
WIPER AND WASHER FUSE, FUSIBLE LINK	20	Wiring Diagram - FRONT WIPER AND WASHER SYSTEM -	35
Description	20	HEADLAMP WASHER SYSTEM	39
Diagnosis Procedure	20	Wiring Diagram -HEADLAMP WASHER SYSTEM-	39
POWER SUPPLY AND GROUND CIRCUIT	21		
BCM (BODY CONTROL MODULE)	21		

A
B
C
D
E
F
G
H
I
J
K
WW
M
N
O
P

ECU DIAGNOSIS	42	Precaution for Procedure without Cowl Top Cover...	96
BCM (BODY CONTROL MODULE)	42	ON-VEHICLE REPAIR	97
Reference Value	42	HEADLAMP WASHER NOZZLE AND TUBE ...	97
Wiring Diagram - BCM -	65	Exploded View	97
Fail-safe	71	Hydraulic Layout	97
DTC Inspection Priority Chart	73	Removal and Installation	97
DTC Index	74	Inspection	98
IPDM E/R (INTELLIGENT POWER DISTRI- BUTION MODULE ENGINE ROOM)	76	WASHER TANK	99
Reference Value	76	Exploded View	99
Wiring Diagram - IPDM E/R -	84	Removal and Installation	99
Fail-safe	87	WASHER PUMP	100
DTC Index	89	Exploded View	100
SYMPTOM DIAGNOSIS	90	Removal and Installation	100
FRONT WIPER AND WASHER SYSTEM		HEADLAMP WASHER PUMP	101
SYMPTOMS	90	Exploded View	101
Symptom Table	90	Removal and Installation	101
NORMAL OPERATING CONDITION	92	FRONT WASHER NOZZLE AND TUBE	102
Description	92	Hydraulic Layout	102
FRONT WIPER DOES NOT OPERATE	93	Removal and Installation	102
Description	93	Inspection and Adjustment	102
Diagnosis Procedure	93	FRONT WIPER ARM	105
HEADLAMP WASHER DOES NOT OPER- ATE	95	Exploded View	105
Description	95	Removal and Installation	105
Diagnosis Procedure	95	Adjustment	105
PRECAUTION	96	FRONT WIPER DRIVE ASSEMBLY	107
PRECAUTIONS	96	Exploded View	107
Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TEN- SIONER"	96	Removal and Installation	107
		Disassembly and Assembly	108
		FRONT WIPER AND WASHER SWITCH	109
		Exploded View	109

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >


BASIC INSPECTION

DIAGNOSIS AND REPAIR WORKFLOW

Work Flow

INFOID:000000003761571

OVERALL SEQUENCE

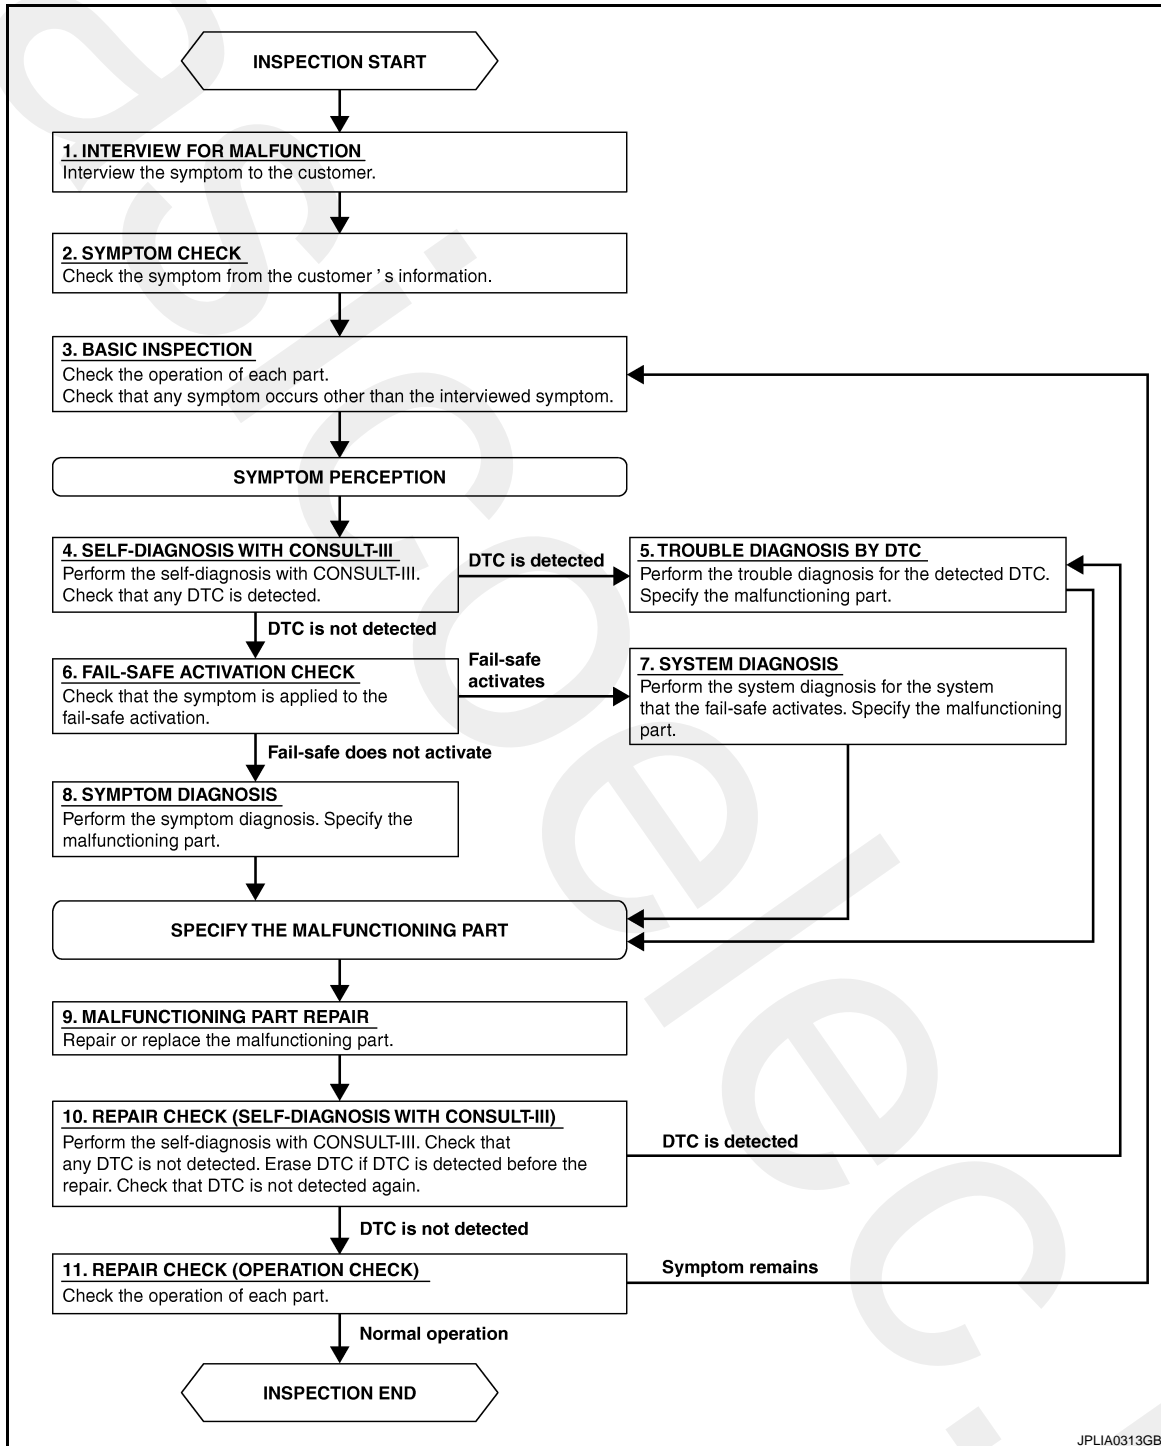

DETAILED FLOW

1. INTERVIEW FOR MALFUNCTION

Interview the symptom to the customer.

DIAGNOSIS AND REPAIR WORKFLOW

< BASIC INSPECTION >

>> GO TO 2.

2. SYMPTOM CHECK

Check the symptom from the customer's information.

>> GO TO 3.

3. BASIC INSPECTION

Check the operation of each part. Check that any symptom occurs other than the interviewed symptom.

>> GO TO 4.

4. SELF-DIAGNOSIS WITH CONSULT-III

Perform the self-diagnosis with CONSULT-III. Check that any DTC is detected.

Is any DTC detected?

YES >> GO TO 5.

NO >> GO TO 6.

5. TROUBLE DIAGNOSIS BY DTC

Perform the trouble diagnosis for the detected DTC. Specify the malfunctioning part.

>> GO TO 9.

6. FAIL-SAFE ACTIVATION CHECK

Check that the symptom is applied to the fail-safe activation.

Does the fail-safe activate?

YES >> GO TO 7.

NO >> GO TO 8.

7. SYSTEM DIAGNOSIS

Perform the system diagnosis for the system that the fail-safe activates. Specify the malfunctioning part.

>> GO TO 9.

8. SYMPTOM DIAGNOSIS

Perform the symptom diagnosis. Specify the malfunctioning part.

>> GO TO 9.

9. MALFUNCTION PART REPAIR

Repair or replace the malfunctioning part.

>> GO TO 10.

10. REPAIR CHECK (SELF-DIAGNOSIS WITH CONSULT-III)

Perform the self-diagnosis with CONSULT-III. Check that any DTC is not detected. Erase DTC if DTC is detected before the repair. Check that DTC is not detected again.

Is any DTC detected?

YES >> GO TO 5.

NO >> GO TO 11.

11. REPAIR CHECK (OPERATION CHECK)

Check the operation of each part.

Does it operate normally?

YES >> INSPECTION END

NO >> GO TO 3.


FRONT WIPER AND WASHER SYSTEM

< FUNCTION DIAGNOSIS >

FUNCTION DIAGNOSIS

FRONT WIPER AND WASHER SYSTEM

System Diagram

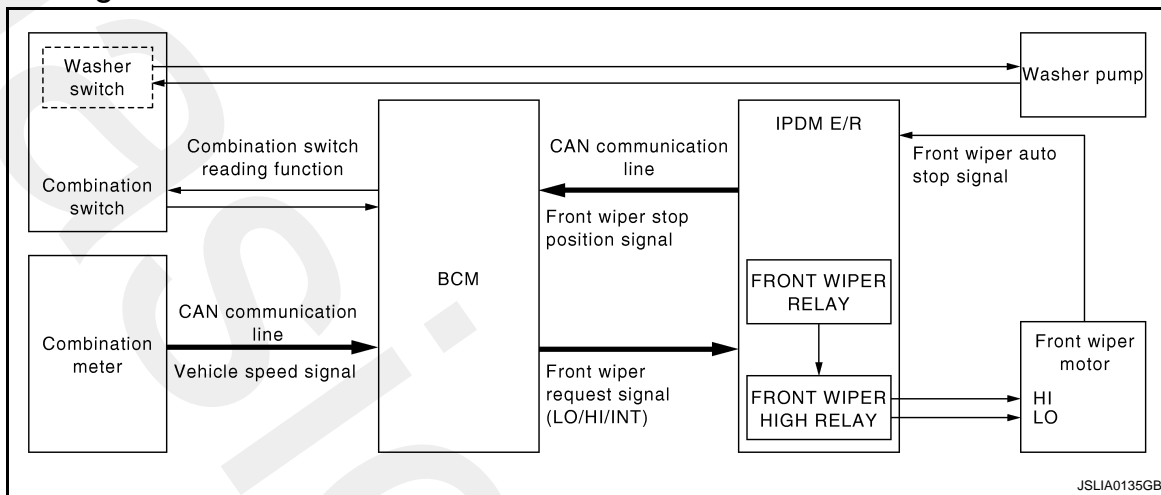

System Description

INFOID:000000003774861

OUTLINE

The front wiper is controlled by each function of BCM and IPDM E/R.

Control by BCM

- Combination switch reading function
- Front wiper control function

Control by IPDM E/R

- Front wiper control function
- Relay control function

FRONT WIPER BASIC OPERATION

- BCM detects the combination switch condition by the combination switch reading function.
- BCM transmits the front wiper request signal to IPDM E/R with CAN communication depending on each operating condition of the front wiper.
- IPDM E/R turns ON/OFF the integrated front wiper relay and the front wiper high relay according to the front wiper request signal. IPDM E/R provides the power supply to operate the front wiper HI/LO operation.

FRONT WIPER LO OPERATION

- BCM transmits the front wiper request signal (LO) to IPDM E/R with CAN communication according to the front wiper LO operating condition.

Front wiper LO operating condition

- Ignition switch ON
- Front wiper switch LO or front wiper switch MIST (while pressing)
- IPDM E/R turns ON the integrated front wiper relay according to the front wiper request signal (LO).

FRONT WIPER HI OPERATION

- BCM transmits the front wiper request signal (HI) to IPDM E/R with CAN communication according to the front wiper HI operating condition.

Front wiper HI operating condition

- Ignition switch ON
- Front wiper switch HI
- IPDM E/R turns ON the integrated front wiper relay and the front wiper high relay according to the front wiper request signal (HI).

FRONT WIPER INT OPERATION (LINKED WITH VEHICLE SPEED)

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

FRONT WIPER AND WASHER SYSTEM

< FUNCTION DIAGNOSIS >

- BCM transmits the front wiper request signal (INT) to IPDM E/R with CAN communication according to the front wiper INT operation condition and the intermittent operation delay interval judged value.

Front wiper INT operating condition


- Ignition switch ON
- Front wiper switch INT

Intermittent operation delay interval judgment

- BCM calculates the intermittent operation delay interval from the following
- Vehicle speed signal (received from the combination meter with CAN communication)
- Wiper intermittent dial position

Wiper intermittent dial position	Intermittent operation interval	Intermittent operation delay Interval (s)			
		Vehicle speed			
		0 – 5 km/h (0 – 3.1 MPH)	5 – 35 km/h (3.1 – 21.7 MPH)	35 – 65 km/h (21.7 – 40.4 MPH)	65 km/h (40.4 MPH) or more
1	Short ↑	0.8	0.6	0.4	0.24
2		4	3	2	1.2
3		10	7.5	5	3
4		16	12	8	4.8
5	↓ Long	24	18	12	7.2
6		32	24	16	9.6
7		42	31.5	21	12.6

- IPDM E/R turns the integrated front wiper relay ON so that the front wiper is operated only once according to the front wiper request signal (INT).
- BCM detects stop position/except stop position of the front wiper motor according to the front wiper stop position signal received from IPDM E/R with CAN communication.
- BCM transmits the front wiper request signal (INT) again after the intermittent operation delay interval after the front wiper motor is stopped.

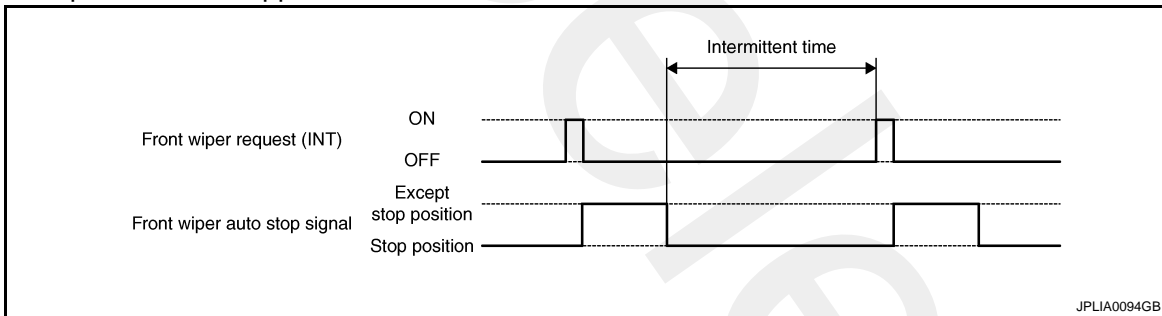


FRONT WIPER AUTO STOP OPERATION

- BCM stops transmitting the front wiper request signal when the front wiper switch is turned OFF.
- IPDM E/R detects the front wiper stop position signal from the front wiper motor and detects the front wiper motor position (stop position/except stop position).

FRONT WIPER AND WASHER SYSTEM

< FUNCTION DIAGNOSIS >

- When the front wiper request signal is stopped, IPDM E/R turns ON the front wiper relay until the front wiper motor returns to the stop position.

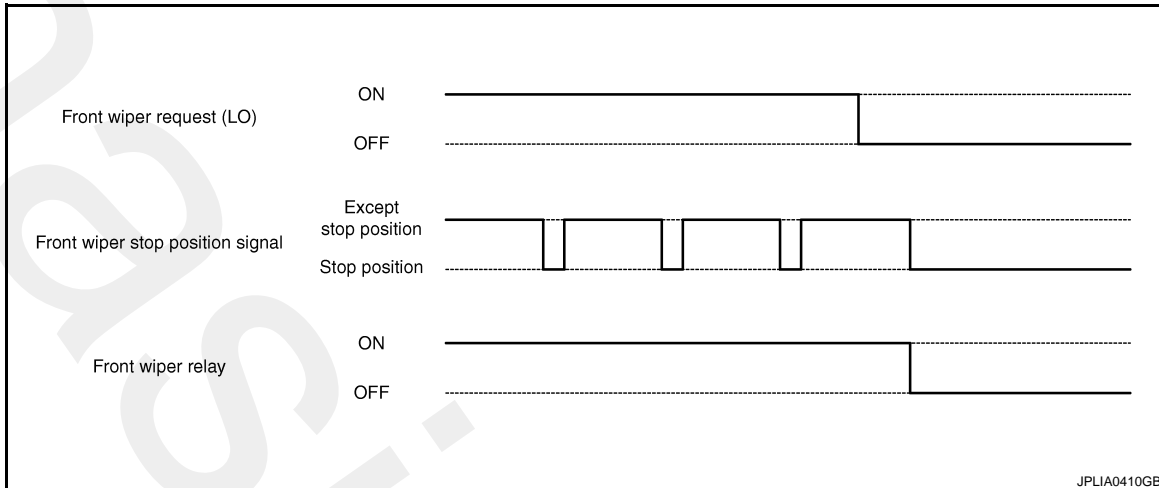

NOTE:

- BCM stops the transmitting of the front wiper request signal when the ignition switch is OFF.
- IPDM E/R turns the front wiper relay OFF when the ignition switch is OFF.

FRONT WIPER OPERATION LINKED WITH WASHER

- BCM transmits the front wiper request signal (LO) to IPDM E/R with CAN communication according to the washer linked operating condition of the front wiper.
- BCM transmits the front wiper request signal (LO) so that the front wiper operates approximately 3 times when the front washer switch OFF is detected.

Washer linked operating condition of front wiper

- Ignition switch ON
- Front washer switch ON (0.4 second or more)
- IPDM E/R turns ON the integrated front wiper relay according to the front wiper request signal (LO).
- The washer pump is grounded through the combination switch with the front washer switch ON.

FRONT WIPER FAIL-SAFE OPERATION

IPDM E/R performs the fail-safe function when the front wiper auto stop circuit is malfunctioning. Refer to [PCS-31. "Fail-safe"](#).

A
B
C
D
E
F
G
H
I
J
K

WW


M
N
O
P

FRONT WIPER AND WASHER SYSTEM

< FUNCTION DIAGNOSIS >

Component Parts Location

INFOID:000000003774862

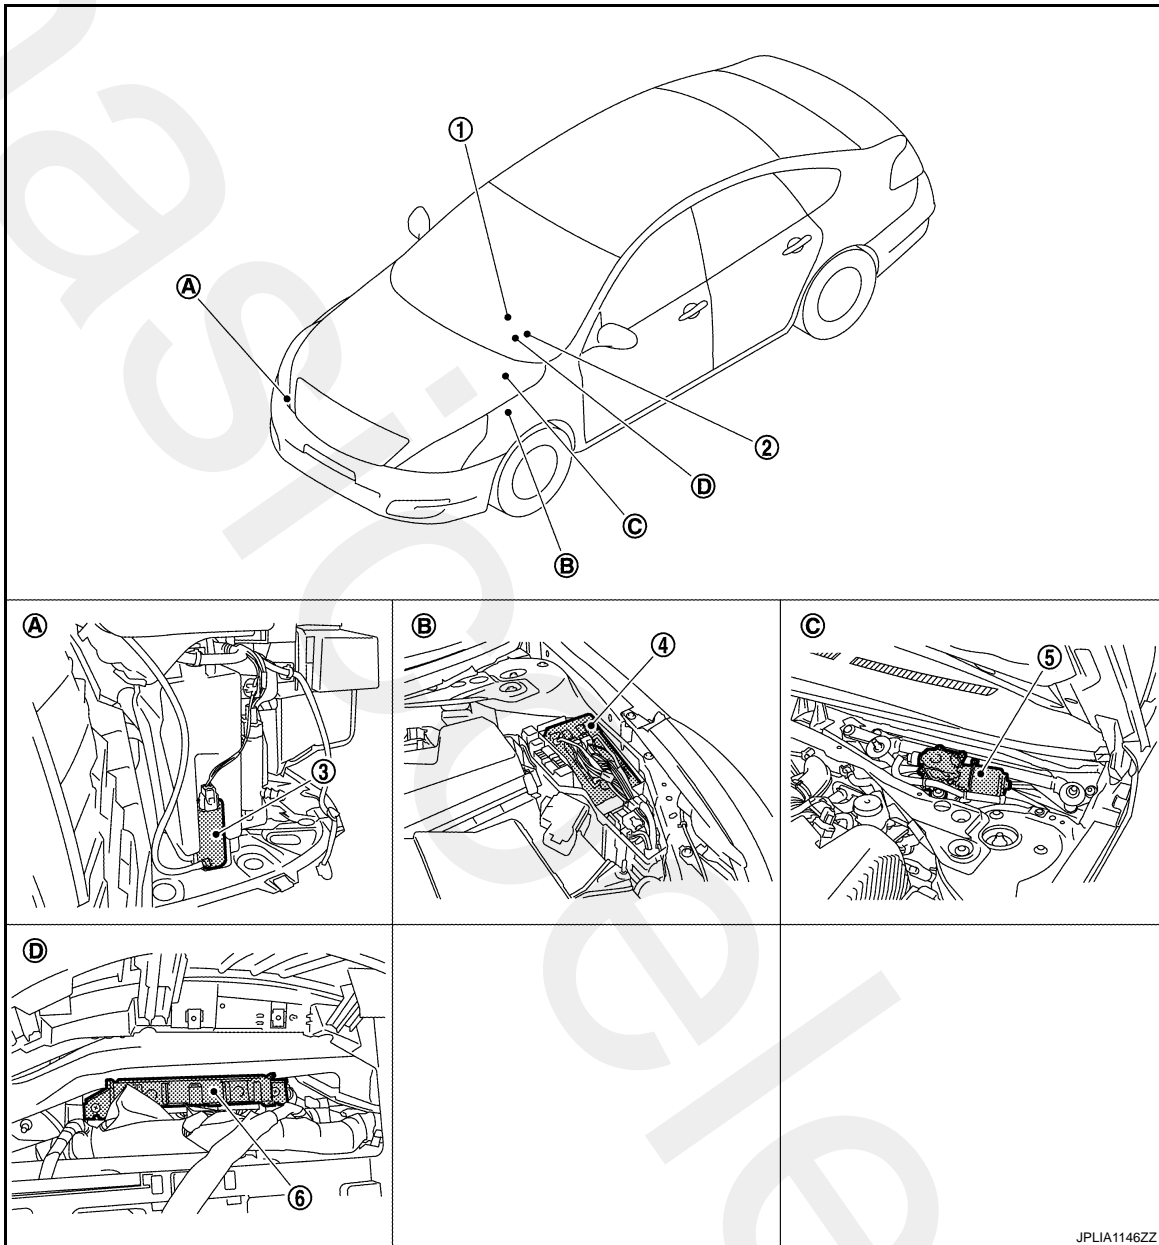

JPLIA1146ZZ

- | | | |
|-------------------------------|----------------------------|---------------------------------------|
| 1. Combination switch | 2. Combination meter | 3. Washer pump |
| 4. IPDM E/R | 5. Front wiper motor | 6. BCM |
| A. Radiator core support (RH) | B. Engine room (left side) | C. Cowl top, left side of engine room |
| D. Behind combination meter | | |

Component Description

INFOID:000000003774863

Part	Description
BCM	<ul style="list-style-type: none"> Judges each switch status by the combination switch reading function. Requests (with CAN communication) the front wiper relay and the front wiper high relay ON to IPDM E/R.
IPDM E/R	<ul style="list-style-type: none"> Controls the integrated relay according to the request (with CAN communication) from BCM. Performs the auto stop control of the front wiper.

FRONT WIPER AND WASHER SYSTEM

< FUNCTION DIAGNOSIS >

Part	Description
Combination switch (Wiper & washer switch)	Refer to BCS-8, "System Diagram" .
Combination meter	Transmits the vehicle speed signal to BCM with CAN communication.

A

B

C

D

E

F

G

H

I

J

K

WW

M

N

O


P

HEADLAMP WASHER SYSTEM

< FUNCTION DIAGNOSIS >

HEADLAMP WASHER SYSTEM

System Diagram

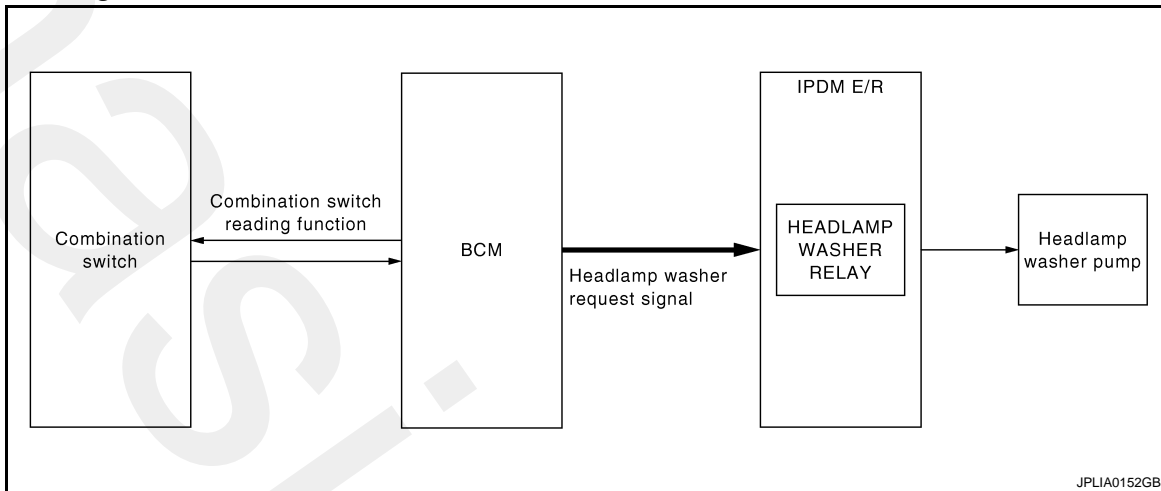

System Description

INFOID:000000003771164

OUTLINE

The headlamp washer is controlled by each function of BCM and IPDM E/R.

Control by BCM


- Combination switch reading function
- Headlamp washer control function

Control by IPDM E/R

- Relay control function

HEADLAMP WASHER BASIC OPERATION

- BCM detects the combination switch condition by the combination switch reading function.
- BCM transmits the headlamp washer request signal to IPDM E/R with CAN communication depending on each operating condition of the headlamp washer.

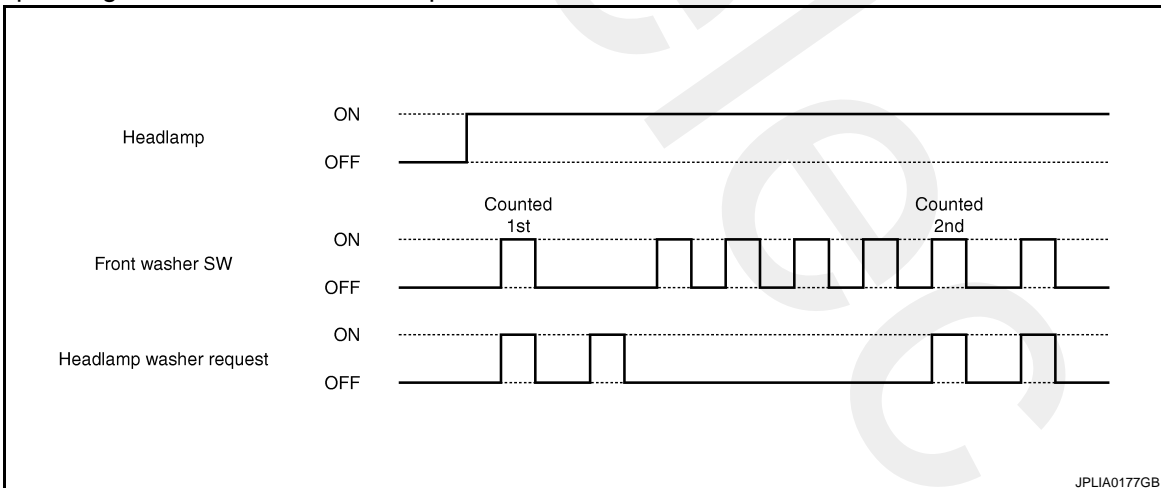

Operating conditions (The first time)

- Ignition switch ON
- Headlamps ON (PASS excluded)
- Front washer switch ON at first time.

Operating conditions (From the second time)

- Ignition switch ON
- Headlamps ON (PASS excluded)
- Front washer switch ON at fifth time after the first time.


HEADLAMP WASHER SYSTEM

< FUNCTION DIAGNOSIS >

- IPDM E/R turns ON/OFF the headlamp washer relay by receiving the headlamp washer request signal, and controls the headlamp washer twice.

Component Parts Location

INFOID:000000003771165

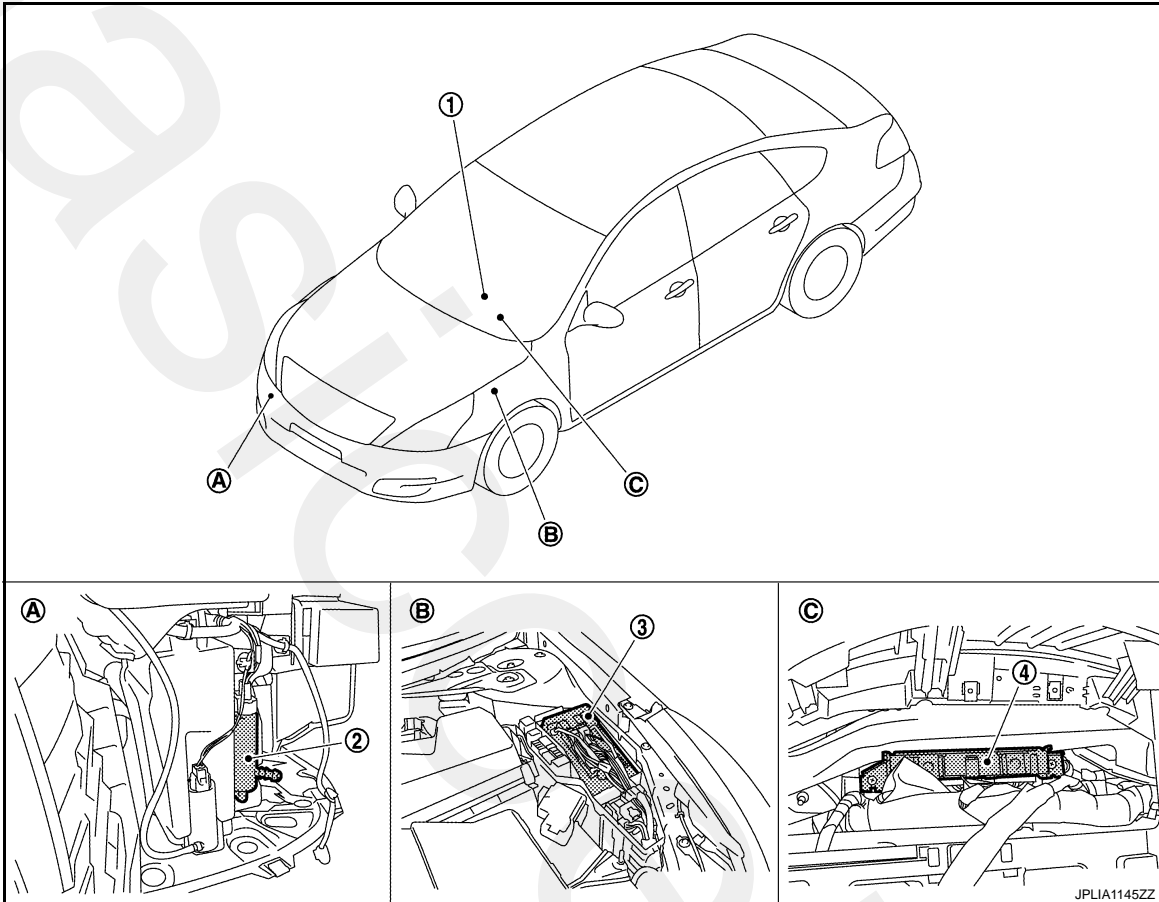

- | | | |
|-----------------------|-------------------------------|----------------------------|
| 1. Combination switch | 2. Headlamp washer pump | 3. IPDM E/R |
| 4. BCM | A. Radiator core support (RH) | B. Engine room (left side) |
| | C. Behind combination meter | |

Component Description

INFOID:000000003771166

Part	Description
BCM	<ul style="list-style-type: none"> • Judges each switch status by the combination switch reading function. • Requests (with CAN communication) the headlamp washer relay ON to IPDM E/R.
IPDM E/R	Controls the integrated relay according to the request (with CAN communication) from BCM.
Combination switch (Wiper & washer switch)	Refer to BCS-8. "System Diagram" .

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

DIAGNOSIS SYSTEM (BCM)

COMMON ITEM

COMMON ITEM : CONSULT-III Function (BCM - COMMON ITEM)

INFOID:000000003941291

APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with BCM.

Diagnosis mode	Function Description
Work Support	Changes the setting for each system function.
Self Diagnostic Result	Displays the diagnosis results judged by BCM.
CAN Diag Support Monitor	Monitors the reception status of CAN communication viewed from BCM. Refer to CONSULT-III operation manual.
Data Monitor	The BCM input/output signals are displayed.
Active Test	The signals used to activate each device are forcibly supplied from BCM.
Ecu Identification	The BCM part number is displayed.
Configuration	<ul style="list-style-type: none"> • Read and save the vehicle specification. • Write the vehicle specification when replacing BCM.

SYSTEM APPLICATION

BCM can perform the following functions for each system.

NOTE:

It can perform the diagnosis modes except the following for all sub system selection items.

×: Applicable item

System	Sub system selection item	Diagnosis mode		
		Work Support	Data Monitor	Active Test
Door lock	DOOR LOCK	×	×	×
Rear window defogger	REAR DEFOGGER		×	×
Warning chime	BUZZER		×	×
Interior room lamp timer	INT LAMP	×	×	×
Exterior lamp	HEAD LAMP	×	×	×
Wiper and washer	WIPER	×	×	×
Turn signal and hazard warning lamps	FLASHER	×	×	×
—	AIR CONDITONER*			
<ul style="list-style-type: none"> • Intelligent Key system • Engine start system 	INTELLIGENT KEY	×	×	×
Combination switch	COMB SW		×	
Body control system	BCM	×		
NVIS - NATS	IMMU		×	×
Interior room lamp battery saver	BATTERY SAVER	×	×	×
Trunk lid opener system	TRUNK		×	×
Vehicle security system	THEFT ALM	×	×	×
—	RETAINED PWR*		×	
Signal buffer system	SIGNAL BUFFER		×	×
—	TPMS (AIR PRESSURE MONITOR)*	×	×	×

NOTE:

*: This item is displayed, but is not used.

FREEZE FRAME DATA (FFD) AND IGN COUNTER

Freeze Frame Data

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

The BCM records the following condition at the moment a particular DTC is detected.

- Vehicle Speed
- Odo/Trip Meter
- Vehicle Condition (BCM detected condition)

CONSULT screen terms	Description
SLEEP>LOCK	While turning BCM status from low power consumption mode to normal mode (Power supply position is "LOCK".)
SLEEP>OFF	While turning BCM status from low power consumption mode to normal mode (Power supply position is "OFF".)
LOCK>ACC	While turning power supply position from "LOCK" to "ACC"
ACC>ON	While turning power supply position from "ACC" to "IGN"
RUN>ACC	While turning power supply position from "RUN" to "ACC" (Vehicle is stopping and selector lever is except P position.)
CRANK>RUN	While turning power supply position from "CRANKING" to "RUN" (From cranking up the engine to run it)
RUN>URGENT	While turning power supply position from "RUN" to "ACC" (Emergency stop operation)
ACC>OFF	While turning power supply position from "ACC" to "OFF"
OFF>LOCK	While turning power supply position from "OFF" to "LOCK"
OFF>ACC	While turning power supply position from "OFF" to "ACC"
ON>CRANK	While turning power supply position from "IGN" to "CRANKING"
OFF>SLEEP	While turning BCM status from normal mode (Power supply position is "OFF".) to low power consumption mode
LOCK>SLEEP	While turning BCM status from normal mode (Power supply position is "LOCK".) to low power consumption mode
LOCK	Power supply position is "LOCK" (Ignition switch OFF with steering is locked.)
OFF	Power supply position is "OFF" (Ignition switch OFF with steering is unlocked.)
ACC	Power supply position is "ACC" (Ignition switch ACC)
ON	Power supply position is "IGN" (Ignition switch ON with engine stopped)
ENGINE RUN	Power supply position is "RUN" (Ignition switch ON with engine running)
CRANKING	Power supply position is "CRANKING" (At engine cranking)

IGN Counter

IGN counter indicates the number of times that ignition switch is turned ON after DTC is detected.

- The number is 0 when a malfunction is detected now.
- The number increases like 1 → 2 → 3...38 → 39 after returning to the normal condition whenever ignition switch OFF → ON.
- The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

WIPER

WIPER : CONSULT-III Function (BCM - WIPER)

INFOID:000000003761581

WORK SUPPORT

Service item	Setting item	Description
WIPER SPEED SETTING	On*	With vehicle speed (Front wiper intermittent time linked with the vehicle speed and wiper intermittent dial position)
	Off	Without vehicle speed (Front wiper intermittent time linked with the wiper intermittent dial position)

*:Factory setting

NOTE:

When performed "RESET SETTING VALUE" on "Work Support (BCM - BCM)", set "WIPER SPEED SETTING" on "Work Support (BCM -WIPER)" to "On".

DIAGNOSIS SYSTEM (BCM)

< FUNCTION DIAGNOSIS >

DATA MONITOR

Monitor Item [Unit]	Description
PUSH SW [Off/On]	The switch status input from push-button ignition switch.
VEH SPEED 1 [km/h]	Displays the value of the vehicle speed signal received from combination meter with CAN communication.
FR WIPER HI [Off/On]	Status of each switch judged by BCM using the combination switch reading function
FR WIPER LOW [Off/On]	
FR WASHER SW [Off/On]	
FR WIPER INT [Off/On]	
FR WIPER STOP [Off/On]	Displays the status of the front wiper stop position signal received from IPDM E/R with CAN communication.
INT VOLUME [1 - 7]	Status of each switch judged by BCM using the combination switch reading function
H/L WASH SW [Off/On]	Status of the switch input from headlamp washer switch

ACTIVE TEST

Test item	Operation	Description
FRONT WIPER	Hi	Transmits the front wiper request signal (HI) to IPDM E/R with CAN communication to operate the front wiper HI operation.
	Lo	Transmits the front wiper request signal (LO) to IPDM E/R with CAN communication to operate the front wiper LO operation.
	INT	Transmits the front wiper request signal (INT) to IPDM E/R with CAN communication to operate the front wiper INT operation.
	Off	Stops transmitting the front wiper request signal to stop the front wiper operation.
HEADLAMP WASHER	On	Transmits the headlamp washer request signal to IPDM E/R with CAN communication to operate the headlamp washer operation.

DIAGNOSIS SYSTEM (IPDM E/R)

< FUNCTION DIAGNOSIS >

DIAGNOSIS SYSTEM (IPDM E/R)

Diagnosis Description

INFOID:000000003941292

AUTO ACTIVE TEST

Description

In auto active test mode, the IPDM E/R sends a drive signal to the following systems to check their operation.

- Oil pressure warning lamp
- Front wiper (LO, HI)
- Parking lamps
- License plate lamps
- Tail lamps
- Front fog lamps
- Headlamps (LO, HI)
- A/C compressor (magnet clutch)
- Cooling fan

Operation Procedure

1. Close the hood and lift the wiper arms from the windshield. (Prevent windshield damage due to wiper operation)
NOTE:
When auto active test is performed with hood opened, sprinkle water on windshield beforehand.
2. Turn ignition switch OFF.
3. Turn the ignition switch ON, and within 20 seconds, press the driver door switch 10 times. Then turn the ignition switch OFF.
CAUTION:
Close passenger door.
4. Turn the ignition switch ON within 10 seconds. After that the horn sounds once and the auto active test starts.
5. The oil pressure warning lamp starts blinking when the auto active test starts.
6. After a series of the following operations is repeated 3 times, auto active test is completed.

NOTE:

When auto active test mode has to be cancelled halfway through test, turn ignition switch OFF.

CAUTION:

- If auto active test mode cannot be actuated, check door switch system. Refer to [DLK-57, "Component Function Check"](#).
- Do not start the engine.

Inspection in Auto Active Test Mode


When auto active test mode is actuated, the following 5 steps are repeated 3 times.

Operation sequence	Inspection location	Operation
A	Oil pressure warning lamp	Blinks continuously during operation of auto active test
1	Front wiper	LO for 5 seconds → HI for 5 seconds
2	<ul style="list-style-type: none">• Parking lamps• License plate lamps• Tail lamps• Front fog lamps	10 seconds
3	Headlamps	LO ↔ HI 5 times
4	A/C compressor (magnet clutch)	ON ↔ OFF 5 times
5	Cooling fan	LO for 5 seconds → MID for 3 seconds → HI for 2 seconds

DIAGNOSIS SYSTEM (IPDM E/R)

< FUNCTION DIAGNOSIS >

Concept of auto active test

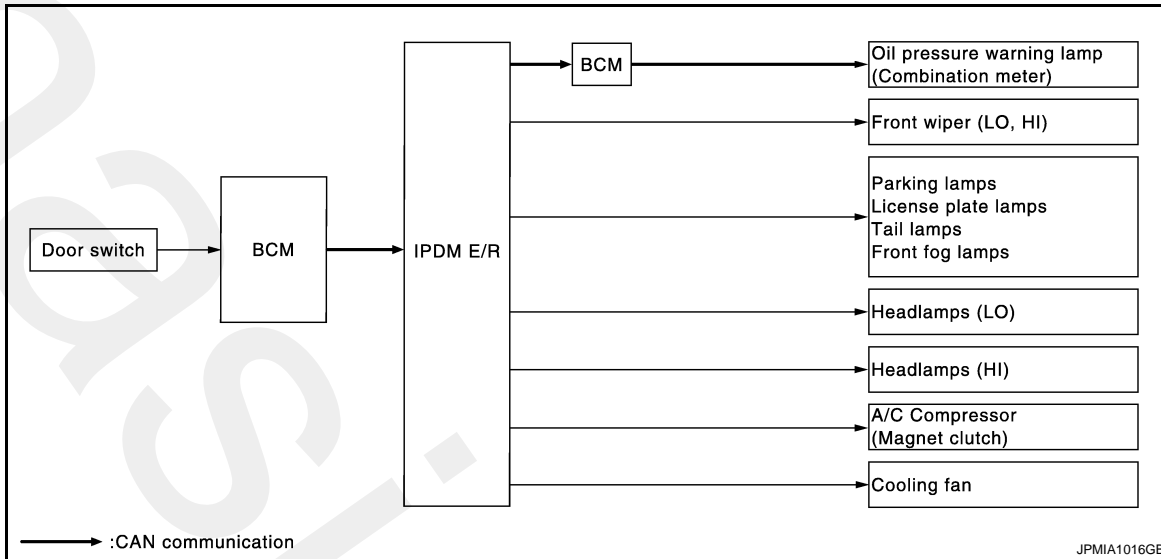

- IPDM E/R starts the auto active test with the door switch signals transmitted by BCM via CAN communication. Therefore, the CAN communication line between IPDM E/R and BCM is considered normal if the auto active test starts successfully.
- The auto active test facilitates troubleshooting if any systems controlled by IPDM E/R cannot be operated.

Diagnosis chart in auto active test mode

Symptom	Inspection contents	Possible cause
Any of the following components do not operate <ul style="list-style-type: none"> • Parking lamps • License plate lamps • Tail lamps • Front fog lamps • Headlamp (HI, LO) • Front wiper 	Perform auto active test. Does the applicable system operate?	YES BCM signal input circuit
		NO <ul style="list-style-type: none"> • Lamp or motor • Lamp or motor ground circuit • Harness or connector between IPDM E/R and applicable system • IPDM E/R
A/C compressor does not operate	Perform auto active test. Does the magnet clutch operate?	YES <ul style="list-style-type: none"> • A/C amp. signal input circuit • CAN communication signal between A/C amp. and ECM • CAN communication signal between ECM and IPDM E/R
		NO <ul style="list-style-type: none"> • Magnet clutch • Harness or connector between IPDM E/R and magnet clutch • IPDM E/R
Oil pressure warning lamp does not operate	Perform auto active test. Does the oil pressure warning lamp blink?	YES <ul style="list-style-type: none"> • Harness or connector between IPDM E/R and oil pressure switch • Oil pressure switch • IPDM E/R
		NO <ul style="list-style-type: none"> • CAN communication signal between IPDM E/R and BCM • CAN communication signal between BCM and combination meter • Combination meter

DIAGNOSIS SYSTEM (IPDM E/R)

< FUNCTION DIAGNOSIS >

Symptom	Inspection contents		Possible cause
Cooling fan does not operate	Perform auto active test. Does the cooling fan operate?	YES	<ul style="list-style-type: none"> ECM signal input circuit CAN communication signal between ECM and IPDM E/R
		NO	<ul style="list-style-type: none"> Harness or connector between IPDM E/R and cooling fan motor Harness or connector between IPDM E/R and cooling fan relay Cooling fan motor Cooling fan relay IPDM E/R

CONSULT-III Function (IPDM E/R)

INFOID:000000003941293

APPLICATION ITEM

CONSULT-III performs the following functions via CAN communication with IPDM E/R.

Diagnosis mode	Description
Ecu Identification	Allows confirmation of IPDM E/R part number.
Self Diagnostic Result	Displays the diagnosis results judged by IPDM E/R.
Data Monitor	Displays the real-time input/output data from IPDM E/R input/output data.
Active Test	IPDM E/R can provide a drive signal to electronic components to check their operations.
CAN Diag Support Monitor	The results of transmit/receive diagnosis of CAN communication can be read.

SELF DIAGNOSTIC RESULT

Refer to [WW-89, "DTC Index"](#).

DATA MONITOR

Monitor item

Monitor Item [Unit]	MAIN SIGNALS	Description
MOTOR FAN REQ [1/2/3/4]	×	Displays the value of the cooling fan speed request signal received from ECM via CAN communication.
AC COMP REQ [Off/On]	×	Displays the status of the A/C compressor request signal received from ECM via CAN communication.
TAIL&CLR REQ [Off/On]	×	Displays the status of the position light request signal received from BCM via CAN communication.
HL LO REQ [Off/On]	×	Displays the status of the low beam request signal received from BCM via CAN communication.
HL HI REQ [Off/On]	×	Displays the status of the high beam request signal received from BCM via CAN communication.
FR FOG REQ [Off/On]	×	Displays the status of the front fog light request signal received from BCM via CAN communication.
FR WIP REQ [Stop/1LOW/Low/Hi]	×	Displays the status of the front wiper request signal received from BCM via CAN communication.
WIP AUTO STOP [STOP P/ACT P]	×	Displays the status of the front wiper auto stop signal judged by IPDM E/R.
WIP PROT [Off/BLOCK]	×	Displays the status of the front wiper fail-safe operation judged by IPDM E/R.
IGN RLY1 -REQ [Off/On]		Displays the status of the ignition switch ON signal received from BCM via CAN communication.

DIAGNOSIS SYSTEM (IPDM E/R)

< FUNCTION DIAGNOSIS >

Monitor Item [Unit]	MAIN SIG- NALS	Description
IGN RLY [Off/On]	×	Displays the status of the ignition relay judged by IPDM E/R.
PUSH SW [Off/On]		Displays the status of the push-button ignition switch judged by IPDM E/R.
INTER/NP SW [Off/On]		Displays the status of the shift position judged by IPDM E/R.
ST RLY CONT [Off/On]		Displays the status of the starter relay status signal received from BCM via CAN communication.
IHBT RLY -REQ [Off/On]		Displays the status of the starter control relay signal received from BCM via CAN communication.
ST/INH RLY [Off/ ST /INH/UNKWN]		Displays the status of the starter relay and starter control relay judged by IPDM E/R.
DETENT SW [Off/On]		Displays the status of the control device (detention switch) judged by IPDM E/R.
S/L RLY -REQ [Off/On]		Displays the status of the steering lock relay signal received from BCM via CAN communication.
S/L STATE [LOCK/UNLOCK/UNKWN]		Displays the status of the steering lock judged by IPDM E/R.
DTRL REQ [Off]		NOTE: The item is indicated, but not monitored.
OIL P SW [Open/Close]		Displays the status of the oil pressure switch judged by IPDM E/R.
HOOD SW [Off/On]		Displays the status of the hood switch judged by IPDM E/R.
HL WASHER REQ [Off]		Display the status of the headlamp washer request signal received from BCM via CAN communication.
THFT HRN REQ [Off/On]		Displays the status of the theft warning horn request signal received from BCM via CAN communication.
HORN CHIRP [Off/On]		Displays the status of the horn reminder signal received from BCM via CAN communication.
CRNRNG LMP REQ [Off]		NOTE: The item is indicated, but not monitored.

ACTIVE TEST

Test item

Test item	Operation	Description
CORNERING LAMP	Off	NOTE: The item is indicated, but cannot be tested.
	LH	
	RH	
HORN	On	Operates horn relay for 20 ms.
FRONT WIPER	Off	OFF
	Lo	Operates the front wiper relay.
	Hi	Operates the front wiper relay and front wiper high relay.
MOTOR FAN	1	OFF
	2	Operates the cooling fan relay-1.
	3	Operates the cooling fan relay-2.
	4	Operates the cooling fan relay-2 and cooling fan relay-3.
HEAD LAMP WASHER	On	Operates the headlamp washer relay for 1 s.

DIAGNOSIS SYSTEM (IPDM E/R)

< FUNCTION DIAGNOSIS >

Test item	Operation	Description
EXTERNAL LAMPS	Off	OFF
	TAIL	Operates the tail lamp relay.
	Lo	Operates the headlamp low relay.
	Hi	Operates the headlamp low relay and ON/OFF the headlamp high relay at 1 second intervals.
	Fog	Operates the front fog lamp relay.

A

B

C

D

E

F

G

H

I

J

K

WW

M

N

O

P

WIPER AND WASHER FUSE, FUSIBLE LINK

< COMPONENT DIAGNOSIS >

COMPONENT DIAGNOSIS

WIPER AND WASHER FUSE, FUSIBLE LINK

Description

INFOID:000000003761584

Fuse, fusible link list

Unit	Location	No.	Capacity
Front wiper motor	IPDM E/R	60	30 A
Washer pump	IPDM E/R	47	10 A
Headlamp washer pump	Fuse and fusible link block	J	40 A

Diagnosis Procedure

INFOID:000000003761585

1.CHECK FUSES

Check that the following fuses and fusible link are not fusing.

Unit	Location	No.	Capacity
Front wiper motor	IPDM E/R	60	30 A
Washer pump	IPDM E/R	47	10 A
Headlamp washer pump	Fuse and fusible link block	J	40 A

Is the fuse fusing?

- YES >> Replace the fuse or fusible link with a new one after repairing the applicable circuit.
- NO >> The fuse is normal.

POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

POWER SUPPLY AND GROUND CIRCUIT

BCM (BODY CONTROL MODULE)

BCM (BODY CONTROL MODULE) : Diagnosis Procedure

INFOID:000000003941294

1. CHECK FUSE AND FUSIBLE LINK

Check that the following fuse and fusible link are not blown.

Signal name	Fuse and fusible link No.
Battery power supply	I
	10

Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

2. CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect BCM connectors.
3. Check voltage between BCM harness connector and ground.

Terminals		Voltage (Approx.)
(+)	(-)	
BCM		Ground Battery voltage
Connector	Terminal	
M118	1	
M119	11	

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3. CHECK GROUND CIRCUIT

Check continuity between BCM harness connector and ground.

BCM		Ground	Continuity
Connector	Terminal		
M119	13		Existed

Does continuity exist?

YES >> INSPECTION END

NO >> Repair harness or connector.

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM) : Diagnosis Procedure

INFOID:000000003941295

1. CHECK FUSES AND FUSIBLE LINK

Check that the following IPDM E/R fuses or fusible links are not blown.

POWER SUPPLY AND GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

Signal name	Fuses and fusible link No.
Battery power supply	E
	50
	51

Is the fuse fusing?

YES >> Replace the blown fuse or fusible link after repairing the affected circuit if a fuse or fusible link is blown.

NO >> GO TO 2.

2.CHECK POWER SUPPLY CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check voltage between IPDM E/R harness connector and ground.

Terminals		Voltage (Approx.)
(+)	(-)	
IPDM E/R		Battery voltage
Connector	Terminal	
E9	1	

Is the measurement value normal?

YES >> GO TO 3.

NO >> Repair harness or connector.

3.CHECK GROUND CIRCUIT

Check continuity between IPDM E/R harness connectors and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E10	12		Existed
E11	41		

Does continuity exist?

YES >> INSPECTION END

NO >> Repair harness or connector.

FRONT WIPER MOTOR LO CIRCUIT

< COMPONENT DIAGNOSIS >

FRONT WIPER MOTOR LO CIRCUIT

Component Function Check

INFOID:000000003761586

1. CHECK FRONT WIPER LO OPERATION

⊗ IPDM E/R AUTO ACTIVE TEST

1. Start IPDM E/R auto active test. Refer to [PCS-11, "Diagnosis Description"](#).
2. Check that the front wiper operates at the LO operation.

Ⓜ CONSULT-III ACTIVE TEST

1. Select "FRONT WIPER" of IPDM E/R active test item.
2. With operating the test item, check front wiper operation.

Lo : Front wiper (LO) operation

Off : Stop the front wiper.

Is front wiper (LO) operation normally?

- YES >> Front wiper motor LO circuit is normal.
NO >> Refer to [WW-23, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000003761587

1. CHECK FRONT WIPER MOTOR (LO) OUTPUT VOLTAGE

Ⓜ CONSULT-III ACTIVE TEST

1. Turn the ignition switch OFF.
2. Disconnect front wiper motor connector.
3. Turn the ignition switch ON.
4. Select "FRONT WIPER" of IPDM E/R active test item.
5. With operating the test item, check voltage between IPDM E/R harness connector and ground.

Terminals		Test item	Voltage (Approx.)
(+)	(-)		
IPDM E/R		FRONT WIPER	Battery voltage
Connector	Terminal		
E10	4		
		Lo	Battery voltage
		Off	0 V

Is the measurement value normal?

- YES >> GO TO 2.
NO >> Replace IPDM E/R.

2. CHECK FRONT WIPER MOTOR (LO) OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front wiper motor harness connector.

IPDM E/R		Front wiper motor		Continuity
Connector	Terminal	Connector	Terminal	
E10	4	E12	3	Existed

Does continuity exist?

- YES >> GO TO 3.
NO >> Repair the harness or connector.

3. CHECK FRONT WIPER MOTOR (LO) SHORT CIRCUIT

Check continuity between IPDM E/R harness connector and ground.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

FRONT WIPER MOTOR LO CIRCUIT

< COMPONENT DIAGNOSIS >

IPDM E/R		Ground	Continuity
Connector	Terminal		
E10	4		Not existed

Does continuity exist?

YES >> Repair the harness or connector.

NO >> Replace front wiper motor.

FRONT WIPER MOTOR HI CIRCUIT

< COMPONENT DIAGNOSIS >

FRONT WIPER MOTOR HI CIRCUIT

Component Function Check

INFOID:000000003761588

1. CHECK FRONT WIPER HI OPERATION

⊗ IPDM E/R AUTO ACTIVE TEST

1. Start IPDM E/R auto active test. Refer to [PCS-11, "Diagnosis Description"](#).
2. Check that the front wiper operates at the HI operation.

Ⓜ CONSULT-III ACTIVE TEST

1. Select "FRONT WIPER" of IPDM E/R active test item.
2. With operating the test item, check front wiper operation.

Hi : Front wiper (HI) operation

Off : Stop the front wiper.

Is front wiper (HI) operation normally?

- YES >> Front wiper motor HI circuit is normal.
NO >> Refer to [WW-25, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000003761589

1. CHECK FRONT WIPER MOTOR (HI) OUTPUT VOLTAGE

Ⓜ CONSULT-III ACTIVE TEST

1. Turn the ignition switch OFF.
2. Disconnect front wiper motor connector.
3. Turn the ignition switch ON.
4. Select "FRONT WIPER" of IPDM E/R active test item.
5. With operating the test item, check voltage between IPDM E/R harness connector and ground.

Terminals		Test item	Voltage (Approx.)
(+)	(-)		
IPDM E/R		FRONT WIPER	Battery voltage
Connector	Terminal		
E10	5	Hi	Battery voltage
		Off	0 V

Is the measurement value normal?

- YES >> GO TO 2.
NO >> Replace IPDM E/R.

2. CHECK FRONT WIPER MOTOR (HI) OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front wiper motor harness connector.

IPDM E/R		Front wiper motor		Continuity
Connector	Terminal	Connector	Terminal	
E10	5	E12	5	Existed

Does continuity exist?

- YES >> GO TO 3.
NO >> Repair the harness or connector.

3. CHECK FRONT WIPER MOTOR (HI) SHORT CIRCUIT

Check continuity between IPDM E/R harness connector and ground.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

FRONT WIPER MOTOR HI CIRCUIT

< COMPONENT DIAGNOSIS >

IPDM E/R		Ground	Continuity
Connector	Terminal		
E10	5		Not existed

Does continuity exist?

YES >> Repair the harness or connector.

NO >> Replace front wiper motor.

FRONT WIPER AUTO STOP SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

FRONT WIPER AUTO STOP SIGNAL CIRCUIT

Component Function Check

INFOID:000000003761590

1. CHECK FRONT WIPER (AUTO STOP) SIGNAL

CONSULT-III DATA MONITOR

1. Select "WIP AUTO STOP" of IPDM E/R data monitor item.
2. Operate the front wiper.
3. Check that "WIP AUTO STOP" changes to "STOP P" and "ACT P" linked with the front wiper operation.

Monitor item	Condition	Monitor status
WIP AUTO STOP	Front wiper motor	Stop position
		Except stop position
		STOP P
		ACT P

Is the status of item normal?

- YES >> Front wiper auto stop signal circuit is normal.
NO >> Refer to [WW-27, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000003761591

1. CHECK FRONT WIPER MOTOR (AUTO STOP) OUTPUT VOLTAGE

1. Turn the ignition switch OFF.
2. Disconnect front wiper motor connector.
3. Turn the ignition switch ON.
4. Check voltage between IPDM E/R harness connector and ground.

Terminals		Voltage (Approx.)
(+)	(-)	
IPDM E/R		Ground
Connector	Terminal	
E10	16	
		Battery voltage

Is the measurement value normal?

- YES >> GO TO 3.
NO >> GO TO 2.

2. CHECK FRONT WIPER MOTOR (AUTO STOP) SHORT CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E10	16		Not existed

Does continuity exist?

- YES >> Repair the harness or connector.
NO >> Replace IPDM E/R.

3. CHECK FRONT WIPER MOTOR (AUTO STOP) CIRCUIT CONTINUITY

1. Turn the ignition switch OFF.
2. Disconnect IPDM E/R connector.
3. Check continuity between IPDM E/R harness connector and front wiper motor harness connector.

FRONT WIPER AUTO STOP SIGNAL CIRCUIT

< COMPONENT DIAGNOSIS >

IPDM E/R		Front wiper motor		Continuity
Connector	Terminal	Connector	Terminal	
E10	16	E12	4	Existed

Does continuity exist?

- YES >> Replace front wiper motor.
NO >> Repair the harness or connector.

FRONT WIPER MOTOR GROUND CIRCUIT

< COMPONENT DIAGNOSIS >

FRONT WIPER MOTOR GROUND CIRCUIT

Diagnosis Procedure

INFOID:000000003761592

1. CHECK FRONT WIPER MOTOR (GND) OPEN CIRCUIT

1. Turn the ignition switch OFF.
2. Disconnect front wiper motor connector.
3. Check continuity between front wiper motor harness connector and ground.

Front wiper motor		Ground	Continuity
Connector	Terminal		Existed
E12	2		

Does continuity exist?

- YES >> Front wiper motor ground circuit is normal.
NO >> Repair the harness or connector.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

WASHER SWITCH


< COMPONENT DIAGNOSIS >

WASHER SWITCH

Description

INFOID:000000003761593

Washer switch is integrated with combination switch.

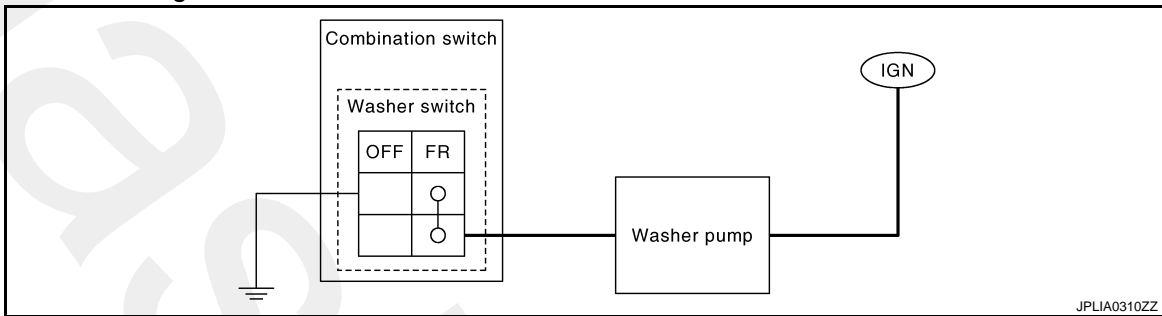

Component Inspection

INFOID:000000003761594

1. CHECK WIPER SWITCH

1. Turn the ignition switch OFF.
2. Disconnect combination switch connector.
3. Check continuity between the combination switch terminals.

Combination switch		Condition	Continuity
Terminal			
1	6	Front washer switch ON	Existed

Does continuity exist?

- YES >> Wiper and washer switch is normal.
NO >> Replace wiper and washer switch.

HEADLAMP WASHER RELAY

< COMPONENT DIAGNOSIS >

HEADLAMP WASHER RELAY

Component Inspection

INFOID:000000003761595

1. CHECK HEADLAMP WASHER RELAY

1. Turn the ignition switch OFF.
2. Remove headlamp washer relay.
3. Apply battery voltage to headlamp washer relay between terminals 1 and 2.
4. Check continuity of headlamp washer relay.

Headlamp washer relay		Condition	Continuity
Terminal		Voltage	
3	5	Apply	Existed
		Not Apply	Not existed

Does continuity exist?

- YES >> Headlamp washer relay is normal.
NO >> Replace headlamp washer relay.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

HEADLAMP WASHER CIRCUIT

< COMPONENT DIAGNOSIS >

HEADLAMP WASHER CIRCUIT

Component Function Check

INFOID:000000003761599

1. CHECK HEADLAMP WASHER OPERATION

ⓑCONSULT-III ACTIVE TEST

1. Select "HEAD LAMP WASHER" of IPDM E/R active test item.
2. With operating the test item, check headlamp operation.

On :Headlamp washer ON operation

Off :Stop the headlamp washer.

Is headlamp washer operation normal?

- YES >> Headlamp washer circuit is normal.
NO >> Refer to [WW-32, "Diagnosis Procedure"](#).

Diagnosis Procedure

INFOID:000000003761600

1. CHECK HEADLAMP WASHER FUSIBLE LINK

1. Turn the ignition switch OFF.
2. Check that the headlamp washer 40A fusible link (#J) is not fusing.

Is the fusible link fusing?

- YES >> Replace the fusible link after repairing the applicable circuit.
NO >> GO TO 2.

2. CHECK HEADLAMP WASHER RELAY POWER SUPPLY

1. Remove headlamp washer relay.
2. Check voltage between headlamp washer harness connector and ground.

Terminals		Voltage (Approx.)	
(+)	(-)		
Headlamp washer relay		Ground	Battery voltage
Connector	Terminal		
E333	2	Ground	Battery voltage
	5		

Is the measurement value normal?

- YES >> GO TO 3.
NO >> Repair harness or connector.

3. CHECK HEADLAMP WASHER RELAY

Check headlamp washer relay. Refer to [WW-31, "Component Inspection"](#).

Is the headlamp washer relay normal?

- YES >> GO TO 4.
NO >> Replace headlamp washer relay.

4. CHECK HEADLAMP WASHER RELAY CONTROL SIGNAL OUTPUT

ⓑCONSULT-III ACTIVE TEST

1. Install headlamp washer relay.
2. Turn the ignition switch ON.
3. Select "HEAD LAMP WASHER" of IPDM E/R active test item.
4. With operating the test item, check voltage between IPDM E/R harness connector and ground.

HEADLAMP WASHER CIRCUIT

< COMPONENT DIAGNOSIS >

Terminals		Test item	Voltage (Approx.)
(+)	(-)		
IPDM E/R		HEAD LAMP WASHER	0 V
Connector	Terminal		
E10	17	On	0 V
		Off	Battery voltage

Is the measurement value normal?

YES >> GO TO 7.

Fixed at 0 V >> GO TO 5.

Fixed at battery voltage >> Replace IPDM E/R.

5. CHECK HEADLAMP WASHER RELAY CONTROL SIGNAL OPEN CIRCUIT

1. Remove headlamp washer relay.
2. Disconnect IPDM E/R harness connector.
3. Check continuity between IPDM E/R harness connector and headlamp washer relay harness connector.

IPDM E/R		Headlamp washer relay		Continuity
Connector	Terminal	Connector	Terminal	
E10	17	E333	1	Existed

Does continuity exist?

YES >> GO TO 6.

NO >> Repair the harness or connector.

6. CHECK HEADLAMP WASHER RELAY CONTROL SIGNAL SHORT CIRCUIT

Check continuity between IPDM E/R harness connector and ground.

IPDM E/R		Ground	Continuity
Connector	Terminal		
E10	17		Not existed

Does continuity exist?

YES >> Repair the harness or connector.

NO >> Replace IPDM E/R.

7. CHECK HEADLAMP WASHER PUMP OPEN CIRCUIT

1. Remove headlamp washer relay.
2. Disconnect headlamp washer pump connector.
3. Check continuity between headlamp washer relay harness connector and headlamp washer pump harness connector.

Headlamp washer relay		Headlamp washer pump		Continuity
Connector	Terminal	Connector	Terminal	
E333	3	E334	1	Existed

Does continuity exist?

YES >> GO TO 8.

NO >> Repair the harness or connector.

8. CHECK HEADLAMP WASHER PUMP (GND) OPEN CIRCUIT

Check continuity headlamp washer pump harness connector and ground.

HEADLAMP WASHER CIRCUIT

< COMPONENT DIAGNOSIS >

Headlamp washer pump		Ground	Continuity
Connector	Terminal		
E334	2		Existed

Does continuity exist?

YES >> Replace headlamp washer pump.

NO >> Repair the harness or connector.

FRONT WIPER AND WASHER SYSTEM


< COMPONENT DIAGNOSIS >

FRONT WIPER AND WASHER SYSTEM

Wiring Diagram - FRONT WIPER AND WASHER SYSTEM -

INFOID:000000003761601

FRONT WIPER AND WASHER SYSTEM

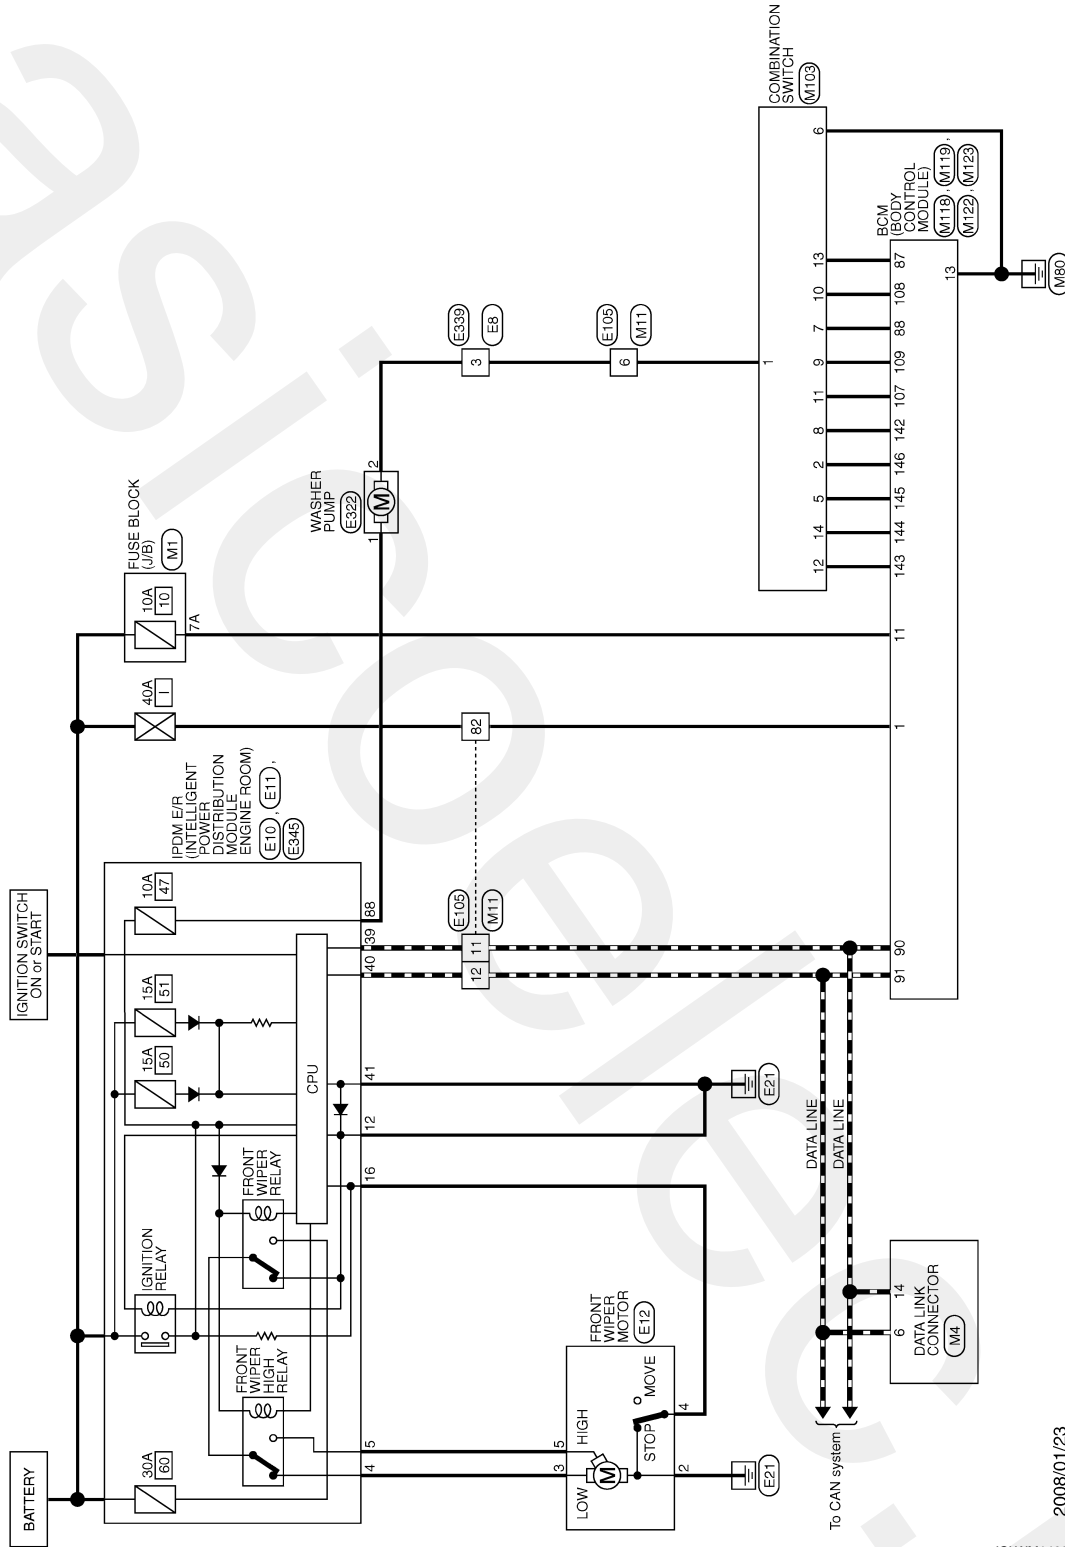

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WW

2008/01/23


JCLWM1499GE

FRONT WIPER AND WASHER SYSTEM

< COMPONENT DIAGNOSIS >

FRONT WIPER AND WASHER SYSTEM

Connector No.	E8
Connector Name	WIRE TO WIRE
Connector Type	NS12MBR-CS



Terminal No.	Color of Wire	Signal Name [Specification]
3	GR	-

Connector No.	E10
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	TH20FW-CS12-M4-1V



Terminal No.	Color of Wire	Signal Name [Specification]
4	LG	-
5	Y	-
12	B/W	-
16	R	-

Connector No.	E11
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	TH68FW-RH




Terminal No.	Color of Wire	Signal Name [Specification]
39	P	-
40	L	-
41	B	-

Connector No.	E12
Connector Name	FRONT WIPER MOTOR
Connector Type	HS05FGY



Terminal No.	Color of Wire	Signal Name [Specification]
2	B/Y	-
3	LG	-
4	R	-
5	Y	-

Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TH70MW-CS10-M3




Terminal No.	Color of Wire	Signal Name [Specification]
6	GR	-
11	P	-
12	L	-
82	LG	-

Connector No.	E22
Connector Name	WASHER PUMP
Connector Type	HS02FB-4V




Terminal No.	Color of Wire	Signal Name [Specification]
1	P	-
2	GR	-

Connector No.	E339
Connector Name	WIRE TO WIRE
Connector Type	NS12FBR-CS



Terminal No.	Color of Wire	Signal Name [Specification]
3	GR	-

Connector No.	E345
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	NS08FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
88	P	-

JCLWM1500GE

FRONT WIPER AND WASHER SYSTEM

< COMPONENT DIAGNOSIS >


FRONT WIPER AND WASHER SYSTEM

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS16FW-M2



Terminal No.	Color of Wire	Signal Name [Specification]
7A	Y/R	-

Connector No.	M4
Connector Name	DATA LINK CONNECTOR
Connector Type	BD16FW




Terminal No.	Color of Wire	Signal Name [Specification]
6	L	-
14	P	-

Connector No.	M11
Connector Name	WIRE TO WIRE
Connector Type	TH16FW-CS10-M3



Terminal No.	Color of Wire	Signal Name [Specification]
6	R/L	-
11	P	-
12	L	-
32	W/B	-

Connector No.	M103
Connector Name	COMBINATION SWITCH
Connector Type	TH16FW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
1	R/L	RR
2	G/Y	OUTPUT 4
5	LG/R	OUTPUT 3
6	B	GND
7	R/G	INPUT 3
8	LG/B	OUTPUT 5
9	R/B	INPUT 2
10	P/B	INPUT 4
11	R/W	INPUT 1
12	L/W	OUTPUT 1
13	R/Y	INPUT 5

Terminal No.	14	G/B	OUTPUT 2
--------------	----	-----	----------

Connector No.	M118
Connector Name	ECM (BODY CONTROL MODULE)
Connector Type	MD3FE-LC



Terminal No.	Color of Wire	Signal Name [Specification]
1	W/B	BAT (F/L)

Connector No.	M119
Connector Name	ECM (BODY CONTROL MODULE)
Connector Type	NS16FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
11	Y/R	BAT (FUSE)
13	B	GND

JCLWM1501GE

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


WW

FRONT WIPER AND WASHER SYSTEM

< COMPONENT DIAGNOSIS >


FRONT WIPER AND WASHER SYSTEM

Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



Terminal No.	Color of Wire	Signal Name [Specification]
87	R/Y	COMBI SW INPUT 5
88	R/G	COMBI SW INPUT 3
90	P	CAN-L
91	L	CAN-H
107	R/W	COMBI SW INPUT 1
108	P/B	COMBI SW INPUT 4
109	R/B	COMBI SW INPUT 2

Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40F6-NH



Terminal No.	Color of Wire	Signal Name [Specification]
142	LG/B	COMBI SW OUTPUT 5
143	L/W	COMBI SW OUTPUT 1
144	G/B	COMBI SW OUTPUT 2
145	LG/R	COMBI SW OUTPUT 3
146	G/Y	COMBI SW OUTPUT 4

JCLWM1502GE

HEADLAMP WASHER SYSTEM


< COMPONENT DIAGNOSIS >

HEADLAMP WASHER SYSTEM

Wiring Diagram -HEADLAMP WASHER SYSTEM-

INFOID:000000003761602

HEADLAMP WASHER

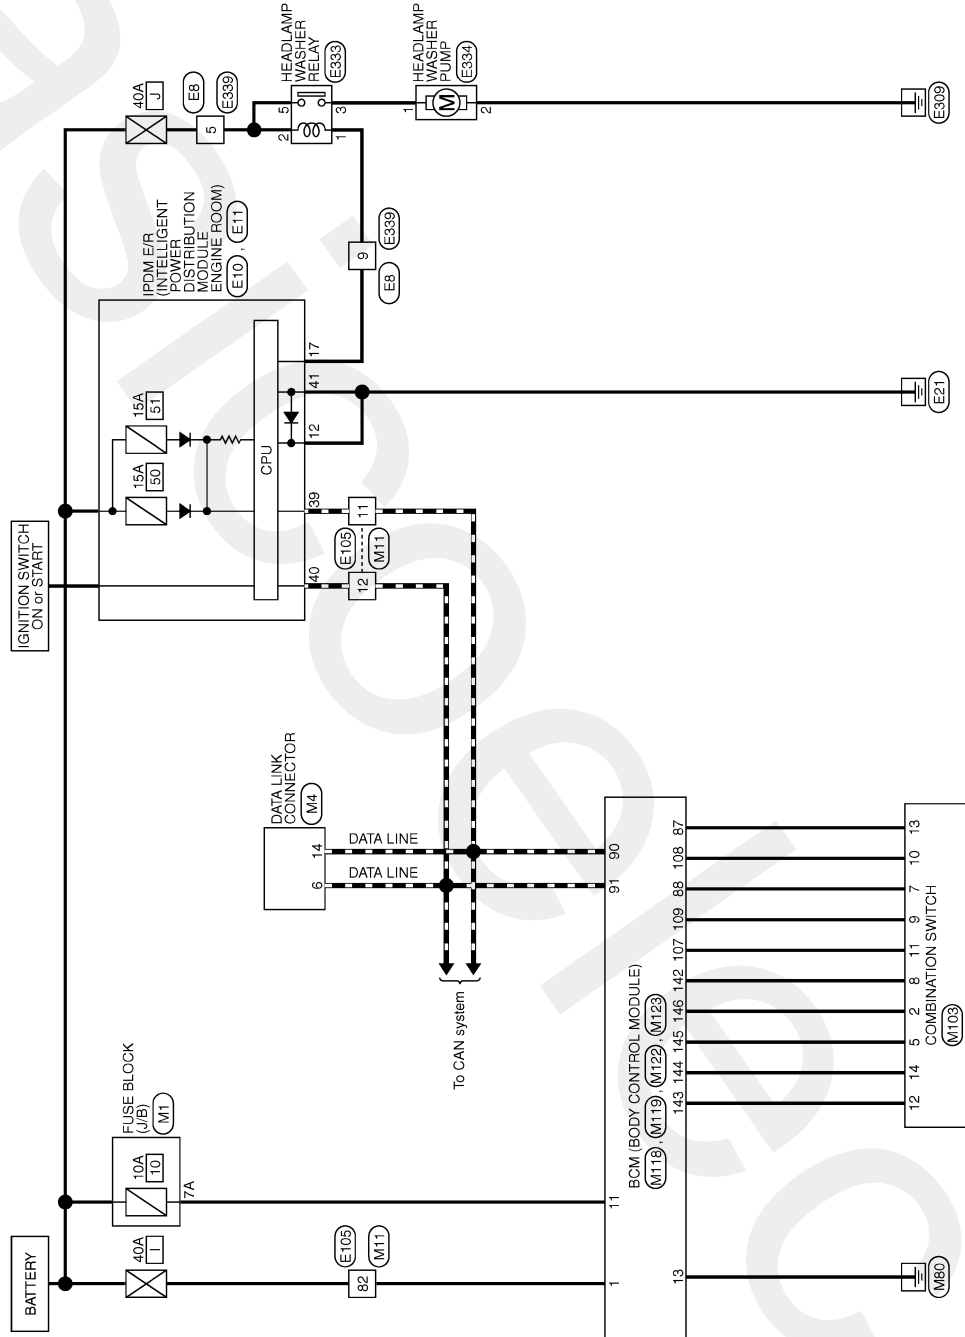

2008/01/23

JCLWM1503GE

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P


WW

HEADLAMP WASHER SYSTEM

< COMPONENT DIAGNOSIS >


HEADLAMP WASHER

Connector No.	E8
Connector Name	WIRE TO WIRE
Connector Type	NS12MBR-CS



Terminal No.	Color of Wire	Signal Name [Specification]
5	L	-
9	V	-

Connector No.	E10
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	TR42FW-CS12-M4-1V



Terminal No.	Color of Wire	Signal Name [Specification]
12	B/W	-
17	V	-

Connector No.	E11
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	TR48FW-RH1



Terminal No.	Color of Wire	Signal Name [Specification]
39	P	-
40	L	-
41	B	-

Connector No.	E105
Connector Name	WIRE TO WIRE
Connector Type	TR70MM-CS10-M3



Terminal No.	Color of Wire	Signal Name [Specification]
11	P	-
12	L	-
82	LG	-

Connector No.	E333
Connector Name	HEADLAMP WASHER RELAY
Connector Type	MS02FL-M2-LC




Terminal No.	Color of Wire	Signal Name [Specification]
1	W	-
2	O	-
3	GR	-
5	O	-

Connector No.	E334
Connector Name	HEADLAMP WASHER PUMP
Connector Type	ALZ02FB




Terminal No.	Color of Wire	Signal Name [Specification]
1	GR	-
2	B	-

Connector No.	E339
Connector Name	WIRE TO WIRE
Connector Type	NS12FBR-CS



Terminal No.	Color of Wire	Signal Name [Specification]
5	O	-
9	W	-

Connector No.	M1
Connector Name	FUSE BLOCK (J/B)
Connector Type	NS03FW-M2



Terminal No.	Color of Wire	Signal Name [Specification]
7A	Y/R	-

JCLWM1504GE

HEADLAMP WASHER SYSTEM

< COMPONENT DIAGNOSIS >

HEADLAMP WASHER

Connector No.	M14	Connector No.	M103	Connector No.	M11	Connector No.	M118
Connector Name	DATA LINK CONNECTOR	Connector Name	COMBINATION SWITCH	Connector Name	WIRE TO WIRE	Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	BD16FW	Connector Type	TH16FW-NH	Connector Type	TH17DFW-CS/D-M3	Connector Type	MS2FB-LC

Terminal No.	Color of Wire	Signal Name [Specification]
6	L	-
14	P	-

Terminal No.	Color of Wire	Signal Name [Specification]
1	W/B	BAT (F/L)

Connector No.	M19
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS16FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
11	Y/R	BAT (FUSE)
13	B	GND

Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



Terminal No.	Color of Wire	Signal Name [Specification]
87	R/Y	COMBI SW INPUT 5
88	R/G	COMBI SW INPUT 3
90	P	CAN-L
91	L	CAN-H
107	R/W	COMBI SW INPUT 1
108	P/B	COMBI SW INPUT 4
109	R/B	COMBI SW INPUT 2


Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FG-NH



Terminal No.	Color of Wire	Signal Name [Specification]
142	LG/B	COMBI SW OUTPUT 5
143	L/W	COMBI SW OUTPUT 1
144	G/B	COMBI SW OUTPUT 2
145	LG/R	COMBI SW OUTPUT 3
146	G/Y	COMBI SW OUTPUT 4

Terminal No.	Color of Wire	Signal Name [Specification]
2	G/Y	OUTPUT 4
5	LG/R	OUTPUT 3
7	R/G	INPUT 3
8	LG/B	OUTPUT 5
9	R/B	INPUT 2
10	P/B	INPUT 4
11	R/W	INPUT 1
12	L/W	OUTPUT 1
13	R/Y	INPUT 5
14	G/B	OUTPUT 2

Connector No.	M103
Connector Name	COMBINATION SWITCH
Connector Type	TH16FW-NH



Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	MS2FB-LC



Terminal No.	Color of Wire	Signal Name [Specification]
1	W/B	BAT (F/L)

JCLW1M1505GE

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

ECU DIAGNOSIS

BCM (BODY CONTROL MODULE)

Reference Value

INFOID:000000003941296

VALUES ON THE DIAGNOSIS TOOL

CONSULT-III MONITOR ITEM

Monitor Item	Condition	Value/Status
FR WIPER HI	Other than front wiper switch HI	Off
	Front wiper switch HI	On
FR WIPER LOW	Other than front wiper switch LO	Off
	Front wiper switch LO	On
FR WASHER SW	Front washer switch OFF	Off
	Front washer switch ON	On
FR WIPER INT	Other than front wiper switch INT	Off
	Front wiper switch INT	On
FR WIPER STOP	Front wiper is not in STOP position	Off
	Front wiper is in STOP position	On
INT VOLUME	Wiper intermittent dial is in a dial position 1 - 7	Wiper intermittent dial position
TURN SIGNAL R	Other than turn signal switch RH	Off
	Turn signal switch RH	On
TURN SIGNAL L	Other than turn signal switch LH	Off
	Turn signal switch LH	On
TAIL LAMP SW	Other than lighting switch 1ST and 2ND	Off
	Lighting switch 1ST or 2ND	On
HI BEAM SW	Other than lighting switch HI	Off
	Lighting switch HI	On
HEAD LAMP SW 1	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
HEAD LAMP SW 2	Other than lighting switch 2ND	Off
	Lighting switch 2ND	On
PASSING SW	Other than lighting switch PASS	Off
	Lighting switch PASS	On
AUTO LIGHT SW	Other than lighting switch AUTO	Off
	Lighting switch AUTO	On
FR FOG SW	Front fog lamp switch OFF	Off
	Front fog lamp switch ON	On
RR FOG SW	Rear fog lamp switch OFF	Off
	Rear fog lamp switch ON	On
DOOR SW-DR	Driver door closed	Off
	Driver door opened	On
DOOR SW-AS	Passenger door closed	Off
	Passenger door opened	On
DOOR SW-RR	Rear RH door closed	Off
	Rear RH door opened	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status	
DOOR SW-RL	Rear LH door closed	Off	A
	Rear LH door opened	On	
DOOR SW-BK	NOTE: The item is indicated, but not monitored.	Off	B
CDL LOCK SW	Other than power door lock switch LOCK	Off	C
	Power door lock switch LOCK	On	
CDL UNLOCK SW	Other than power door lock switch UNLOCK	Off	D
	Power door lock switch UNLOCK	On	
KEY CYL LK-SW	NOTE: The item is indicated, but not monitored.	Off	E
KEY CYL UN-SW	NOTE: The item is indicated, but not monitored.	Off	F
KEY CYL SW-TR	NOTE: The item is indicated, but not monitored.	Off	G
HAZARD SW	Hazard switch is OFF	Off	H
	Hazard switch is ON	On	
REAR DEF SW NOTE: At model with BOSE audio system this item is indicated, but is not monitored.	Rear window defogger switch is OFF	Off	I
	Rear window defogger switch is ON	On	
TR CANCEL SW	NOTE: The item is indicated, but not monitored.	Off	J
TR/BD OPEN SW	Trunk lid opener switch OFF	Off	K
	While the trunk lid opener switch is turned ON	On	
TRNK/HAT MNTR	Trunk lid closed	Off	WW
	Trunk lid opened	On	
RKE-LOCK	LOCK button of the key is not pressed	Off	M
	LOCK button of the key is pressed	On	
RKE-UNLOCK	UNLOCK button of the key is not pressed	Off	N
	UNLOCK button of the key is pressed	On	
RKE-TR/BD	TRUNK OPEN button of the key is not pressed	Off	O
	TRUNK OPEN button of the key is pressed	On	
RKE-PANIC	NOTE: The item is indicated, but not monitored.	Off	P
RKE-P/W OPEN	NOTE: The item is indicated, but not monitored.	Off	
RKE-MODE CHG	LOCK/UNLOCK button of the key is not pressed and held simultaneously	Off	
	LOCK/UNLOCK button of the key is pressed and held simultaneously	On	
OPTICAL SENSOR	Bright outside of the vehicle	Close to 5 V	
	Dark outside of the vehicle	Close to 0 V	
REQ SW -DR	Driver door request switch is not pressed	Off	
	Driver door request switch is pressed	On	
REQ SW -AS	Passenger door request switch is not pressed	Off	
	Passenger door request switch is pressed	On	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status
REQ SW -RR	NOTE: The item is indicated, but not monitored.	Off
REQ SW -RR	NOTE: The item is indicated, but not monitored.	Off
REQ SW -BD/TR	Trunk lid opener request switch is not pressed	Off
	Trunk lid opener request switch is pressed	On
PUSH SW	Push-button ignition switch (push switch) is not pressed	Off
	Push-button ignition switch (push switch) is pressed	On
IGN RLY2 -F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
CLUCH SW	NOTE: The item is indicated, but not monitored.	Off
BRAKE SW 1	The brake pedal is not depressed	On
	The brake pedal is depressed	Off
DETE/CANCL SW	Selector lever in P position	Off
	Selector lever in any position other than P	On
SFT PN/N SW	Selector lever in any position other than P and N	Off
	Selector lever in P or N position	On
S/L -LOCK	Steering is locked	Off
	Steering is unlocked	On
S/L -UNLOCK	Steering is unlocked	Off
	Steering is locked	On
S/L RELAY-F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
UNLK SEN -DR	Driver door is unlocked	Off
	Driver door is locked	On
PUSH SW -IPDM	Push-button ignition switch (push-switch) is not pressed	Off
	Push-button ignition switch (push-switch) is pressed	On
IGN RLY1 -F/B	Ignition switch in OFF or ACC position	Off
	Ignition switch in ON position	On
DETE SW -IPDM	Selector lever in P position	Off
	Selector lever in any position other than P	On
SFT PN -IPDM	Selector lever in any position other than P and N	Off
	Selector lever in P or N position	On
SFT P -MET	Selector lever in any position other than P	Off
	Selector lever in P position	On
SFT N -MET	Selector lever in any position other than N	Off
	Selector lever in N position	On
ENGINE STATE	Engine stopped	Stop
	While the engine stalls	Stall
	At engine cranking	Crank
	Engine running	Run
S/L LOCK-IPDM	Steering is locked	Off
	Steering is unlocked	On

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >


Monitor Item	Condition	Value/Status	
S/L UNLK-IPDM	Steering is unlocked	Off	A
	Steering is locked	On	
S/L RELAY-REQ	Ignition switch in OFF or ACC position	Off	B
	Ignition switch in ON position	On	
VEH SPEED 1	While driving	Equivalent to speedometer reading	C
VEH SPEED 2	While driving	Equivalent to speedometer reading	
DOOR STAT-DR	Driver door is locked	LOCK	D
	Wait with selective UNLOCK operation (5 seconds)	READY	
	Driver door is unlocked	UNLOCK	
DOOR STAT-AS	Passenger door is locked	LOCK	E
	Wait with selective UNLOCK operation (5 seconds)	READY	
	Passenger door is unlocked	UNLOCK	
ID OK FLAG	Ignition switch in ACC or ON position	Reset	F
	Ignition switch in OFF position	Set	
PRMT ENG STRT	The engine start is prohibited	Reset	G
	The engine start is permitted	Set	
PRMT RKE STRT	NOTE: The item is indicated, but not monitored.	Reset	H
KEY SW -SLOT	The key is not inserted into key slot	Off	I
	The key is inserted into key slot	On	
RKE OPE COUN1	During the operation of the key	Operation frequency of the key	J
RKE OPE COUN2	NOTE: The item is indicated, but not monitored.	—	K
CONFIRM ID ALL	The key ID that the key slot receives does not accord with any key ID registered to BCM.	Yet	
	The key ID that the key slot receives accords with any key ID registered to BCM.	Done	
CONFIRM ID4	The key ID that the key slot receives does not accord with the fourth key ID registered to BCM.	Yet	WW
	The key ID that the key slot receives accords with the fourth key ID registered to BCM.	Done	
CONFIRM ID3	The key ID that the key slot receives does not accord with the third key ID registered to BCM.	Yet	M
	The key ID that the key slot receives accords with the third key ID registered to BCM.	Done	
CONFIRM ID2	The key ID that the key slot receives does not accord with the second key ID registered to BCM.	Yet	N
	The key ID that the key slot receives accords with the second key ID registered to BCM.	Done	
CONFIRM ID1	The key ID that the key slot receives does not accord with the first key ID registered to BCM.	Yet	O
	The key ID that the key slot receives accords with the first key ID registered to BCM.	Done	P
TP 4	The ID of fourth key is not registered to BCM	Yet	
	The ID of fourth key is registered to BCM	Done	
TP 3	The ID of third key is not registered to BCM	Yet	
	The ID of third key is registered to BCM	Done	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status
TP 2	The ID of second key is not registered to BCM	Yet
	The ID of second key is registered to BCM	Done
TP 1	The ID of first key is not registered to BCM	Yet
	The ID of first key is registered to BCM	Done

TERMINAL LAYOUT

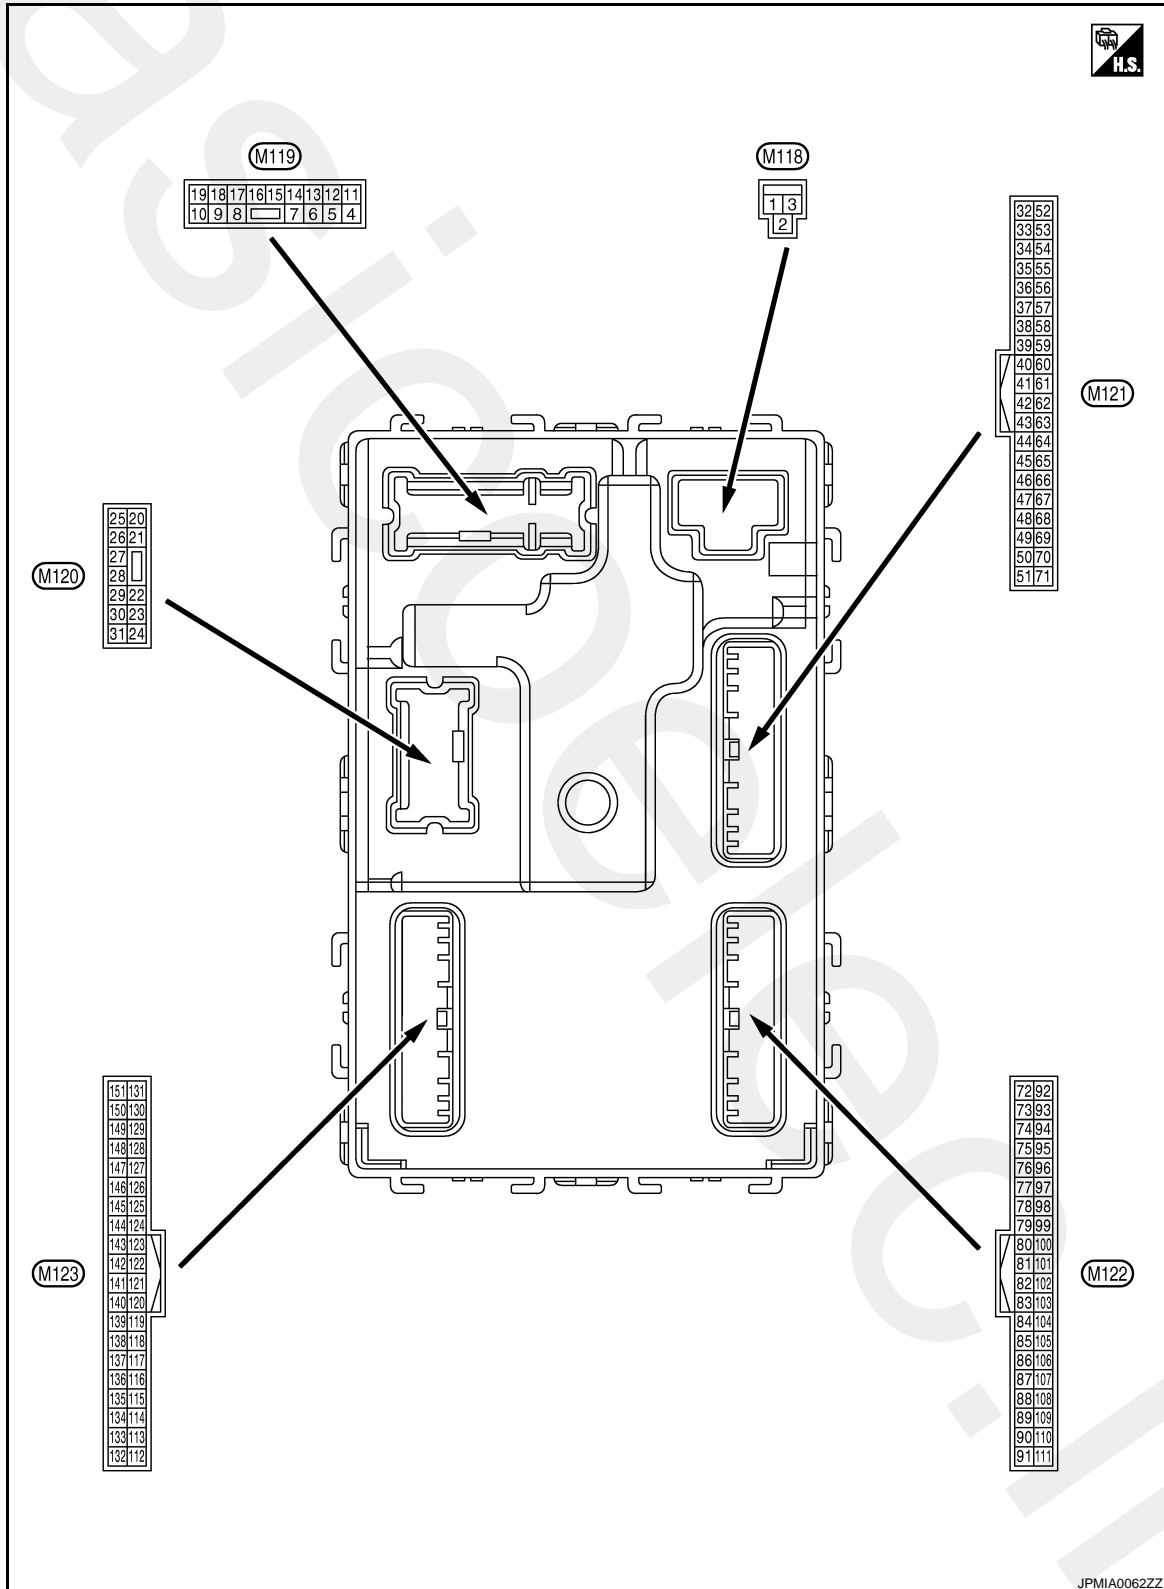


JPMIA0062ZZ

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

PHYSICAL VALUES



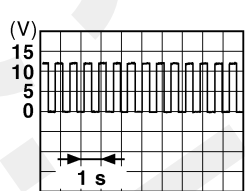
Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
1 (W/B)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (R/Y)	Ground	P/W power supply (BAT)	Output	Ignition switch OFF		Battery voltage
3 (L/W)	Ground	P/W power supply (IGN)	Output	Ignition switch ON		Battery voltage
4 (P/W)	Ground	Interior room lamp power supply	Output	Interior room lamp battery saver is activated. (Cuts the interior room lamp power supply)		0 V
				Interior room lamp battery saver is not activated. (Outputs the interior room lamp power supply)		Battery voltage
5 (G/Y)	Ground	Passenger door UNLOCK	Output	Passenger door	UNLOCK (Actuator is activated)	Battery voltage
					Other than UNLOCK (Actuator is not activated)	0 V
7 (R/W)	Ground	Step lamp	Output	Step lamp	ON	0 V
					OFF	Battery voltage
8 (V)	Ground	All doors LOCK	Output	All doors	LOCK (Actuator is activated)	Battery voltage
					Other than LOCK (Actuator is not activated)	0 V
9 (G)	Ground	Driver door UNLOCK	Output	Driver door	UNLOCK (Actuator is activated)	Battery voltage
					Other than UNLOCK (Actuator is not activated)	0 V
10 (G/Y)	Ground	Rear RH door and rear LH door UNLOCK	Output	Rear RH door and rear LH door	UNLOCK (Actuator is activated)	Battery voltage
					Other than UNLOCK (Actuator is not activated)	0 V
11 (Y/R)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
13 (B)	Ground	Ground	—	Ignition switch ON		0 V
15 (Y)	Ground	ACC indicator lamp	Output	Ignition switch	OFF (LOCK indicator is not illuminated)	Battery voltage
					ACC or ON	0 V
17 (G/B)	Ground	Turn signal RH (Front and door mirror)	Output	Ignition switch ON	Turn signal switch OFF	0 V
					Turn signal switch RH	 <p style="text-align: center;">6.5 V</p> <p style="text-align: right; font-size: small;">PKID0926E</p>

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

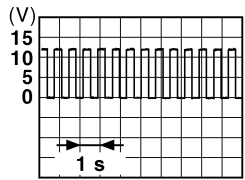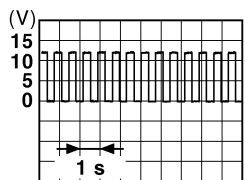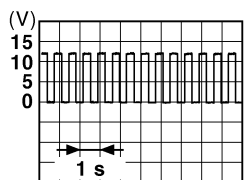Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
18 (G/Y)	Ground	Turn signal LH (Front and door mirror)	Output	Ignition switch ON	Turn signal switch OFF	0 V
				Turn signal switch LH	 <p style="text-align: center;">6.5 V</p>	
19 (Y)	Ground	Room lamp timer control	Output	Interior room lamp	OFF	Battery voltage
				ON	0 V	
20 (G/B)	Ground	Turn signal RH (Rear)	Output	Ignition switch ON	Turn signal switch OFF	0 V
				Turn signal switch RH	 <p style="text-align: center;">6.5 V</p>	
23 (R)	Ground	Trunk lid opening	Output	Trunk lid	OPEN (Trunk lid opener actuator is activated)	Battery voltage
				Other than OPEN (Trunk lid opener actuator is not activated)	0 V	
24 (G)	Ground	Rear fog lamp	Output	Rear fog lamp	OFF	0 V
				ON	Battery voltage	
25 (G/Y)	Ground	Turn signal LH (Rear)	Output	Ignition switch ON	Turn signal switch OFF	0 V
				Turn signal switch LH	 <p style="text-align: center;">6.5 V</p>	
30 (V/W)	Ground	Trunk room lamp	Output	Trunk room lamp	OFF	0 V
				ON	Battery voltage	

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >





Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
34 (B)	Ground	Trunk room antenna (-)	Output	Ignition switch OFF	<p>JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compartment	<p>JMKIA0063GB</p>
35 (W)	Ground	Trunk room antenna (+)	Output	Ignition switch OFF	<p>JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compartment	<p>JMKIA0063GB</p>
38 (L/O)	Ground	Rear bumper anten- na (-)	Output	When the trunk lid opener request switch is operat- ed with ignition switch OFF	<p>JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detec- tion area	<p>JMKIA0063GB</p>

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW






BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

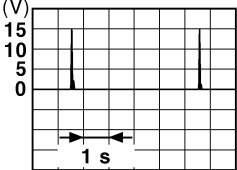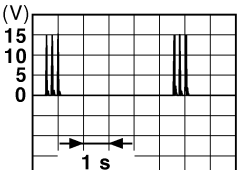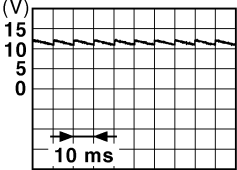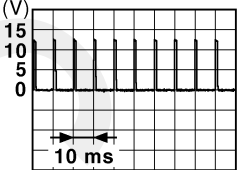Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
39 (BR/W)	Ground	Rear bumper antenna (+)	Output	When Intelligent Key is in the antenna detection area	 <small>JMKIA0062GB</small>
				When Intelligent Key is not in the antenna detection area	 <small>JMKIA0063GB</small>
47 (BR/W)	Ground	Ignition relay (IPDM E/R) control	Output	Ignition switch	OFF or ACC
				ON	Battery voltage
50 (W)	Ground	Trunk room lamp switch	Input	Trunk room lamp switch	OFF (When trunk lid closes)
				ON (When trunk lid opens)	 <small>JPMIA0011GB</small> 11.8 V
52 (R)	Ground	Starter relay control	Output	Ignition switch ON	When selector lever is in P or N position
				Ignition switch OFF	When selector lever is not in P or N position
61 (G/R)	Ground	Trunk lid request switch	Input	Trunk lid request switch	ON (Pressed)
				OFF (Not pressed)	 <small>JPMIA0016GB</small> 1.0 V
64 (GR)	Ground	Request switch buzzer	Output	Request switch buzzer	Sounding
				Not sounding	Battery voltage

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

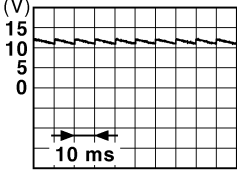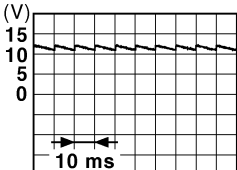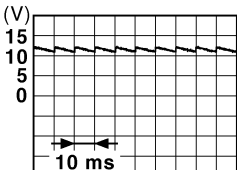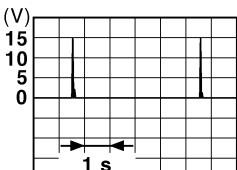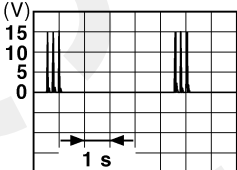Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
67 (L/R)	Ground	Trunk lid opener switch	Input	Trunk lid opener switch	Pressed	0 V
					Not pressed	 <p style="text-align: right;">JPMIA0011GB</p> <p style="text-align: center;">11.8 V</p>
68 (R/W)	Ground	Rear RH door switch	Input	Rear RH door switch	OFF (When rear RH door closes)	 <p style="text-align: right;">JPMIA0011GB</p> <p style="text-align: center;">11.8 V</p>
					ON (When rear RH door opens)	0 V
69 (R/B)	Ground	Rear LH door switch	Input	Rear LH door switch	OFF (When rear LH door closes)	 <p style="text-align: right;">JPMIA0011GB</p> <p style="text-align: center;">11.8 V</p>
					ON (When rear LH door opens)	0 V
72 (B/R)	Ground	Room antenna 2 (-) (center console)	Output	Ignition switch OFF	When Intelligent Key is in the passenger compart- ment	 <p style="text-align: right;">JMKIA0062GB</p>
					When Intelligent Key is not in the passenger compartment	 <p style="text-align: right;">JMKIA0063GB</p>

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
73 (W/R)	Ground	Room antenna 2 (+) (center console)	Output	Ignition switch OFF	<p style="text-align: right; font-size: small;">JMkia0062GB</p>
					When Intelligent Key is not in the passenger compartment
74 (B/Y)	Ground	Passenger door an- tenna (-)	Output	When the pas- senger door re- quest switch is operated with ig- nition switch OFF	<p style="text-align: right; font-size: small;">JMkia0062GB</p>
					When Intelligent Key is not in the antenna detec- tion area
75 (LG)	Ground	Passenger door an- tenna (+)	Output	When the pas- senger door re- quest switch is operated with ig- nition switch OFF	<p style="text-align: right; font-size: small;">JMkia0062GB</p>
					When Intelligent Key is not in the antenna detec- tion area

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
76 (V)	Ground	Driver door antenna (-)	Output	When the driver door request switch is operated with ignition switch OFF	<p>JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	<p>JMKIA0063GB</p>
77 (P)	Ground	Driver door antenna (+)	Output	When the driver door request switch is operated with ignition switch OFF	<p>JMKIA0062GB</p>
				When Intelligent Key is not in the antenna detection area	<p>JMKIA0063GB</p>
78 (R)	Ground	Room antenna 1 (-) (instrument panel)	Output	Ignition switch OFF	<p>JMKIA0062GB</p>
				When Intelligent Key is not in the passenger compartment	<p>JMKIA0063GB</p>

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW



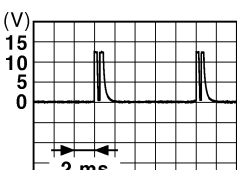

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
79 (G)	Ground	Room antenna 1 (+) (instrument panel)	Output	Ignition switch OFF	<p style="text-align: right; font-size: small;">JMkia0062GB</p>	
				When Intelligent Key is not in the passenger compartment	<p style="text-align: right; font-size: small;">JMkia0063GB</p>	
80 (G/O)	Ground	NATS antenna amp (built in key slot)	Input/ Output	During waiting	Ignition switch is pressed while inserting the key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
81 (O)	Ground	NATS antenna amp (built in key slot)	Input/ Output	During waiting	Ignition switch is pressed while inserting the key into the key slot.	Just after pressing ignition switch. Pointer of tester should move.
82 (R/B)	Ground	Ignition relay [fuse block (J/B)] control	Output	Ignition switch	OFF or ACC	0 V
				ON	Battery voltage	
83 (L/O)	Ground	Remote keyless en- try receiver commu- nication	Input/ Output	During waiting		<p style="text-align: right; font-size: small;">JMkia0064GB</p>
				When operating either button on the key		<p style="text-align: right; font-size: small;">JMkia0065GB</p>

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

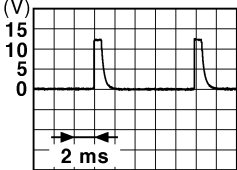Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
87 (R/Y)	Ground	Combination switch INPUT 5	Input Combination switch	All switch OFF (Wiper intermittent dial 4)	 <p>1.4 V</p>
				Front fog lamp switch ON (Wiper intermittent dial 4)	 <p>1.3 V</p>
				Rear fog lamp switch ON (Wiper intermittent dial 4)	 <p>1.2 V</p>
				Any of the conditions below with all switch OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 6 • Wiper intermittent dial 7 	 <p>1.3 V</p>

A

B

C

D

E

F

G

H

I

J

K

WW

M






N

O

P



BCM (BODY CONTROL MODULE)
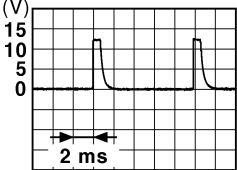
< ECU DIAGNOSIS >

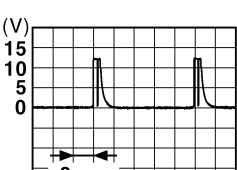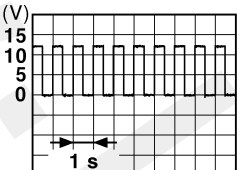Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
88 (R/G)	Ground	Combination switch INPUT 3	Input	Combination switch	All switch OFF (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">JPMA0041GB</p> <p style="text-align: center;">1.4 V</p>
					Lighting switch HI (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">JPMA0036GB</p> <p style="text-align: center;">1.3 V</p>
					Lighting switch 2ND (Wiper intermittent dial 4)	 <p style="text-align: right; font-size: small;">JPMA0037GB</p> <p style="text-align: center;">1.3 V</p>
					Any of the conditions below with all switch OFF	<ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 2 • Wiper intermittent dial 3  <p style="text-align: right; font-size: small;">JPMA0040GB</p> <p style="text-align: center;">1.3 V</p>
89 (BR)	Ground	Push-button ignition switch (push switch)	Input	Push-button ignition switch (push switch)	Pressed	0 V
					Not pressed	Battery voltage
90 (P)	Ground	CAN-L	Input/ Output	—	—	
91 (L)	Ground	CAN-H	Input/ Output	—	—	
92 (R/L)	Ground	Key slot illumination	Output	Key slot illumina- tion	OFF	Battery voltage
					Blinking	 <p style="text-align: right; font-size: small;">JPMA0015GB</p> <p style="text-align: center;">6.5 V</p>
					ON	0 V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

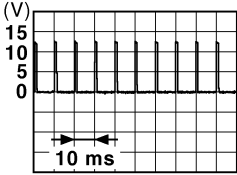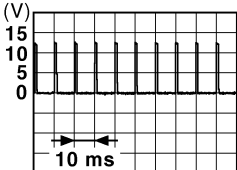

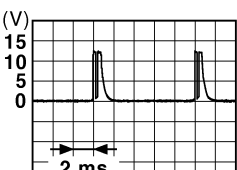
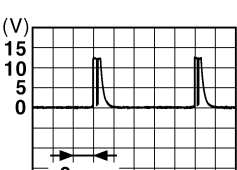
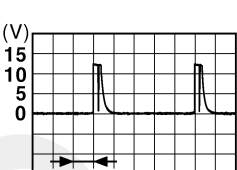
Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
93 (Y)	Ground	ON indicator lamp	Output	Ignition switch	OFF (LOCK indicator is not illuminated)	Battery voltage
					ON or ACC	0 V
95 (L)	Ground	ACC relay control	Output	Ignition switch	OFF	0 V
					ACC or ON	Battery voltage
96 (Y/R)	Ground	Control device (detection switch) power supply	Output	—		Battery voltage
97 (L/O)	Ground	Steering lock condition No. 1	Input	Steering lock	LOCK status	0 V
					UNLOCK status	Battery voltage
98 (G/R)	Ground	Steering lock condition No. 2	Input	Steering lock	LOCK status	Battery voltage
					UNLOCK status	0 V
99 (G/B)	Ground	Selector lever P position switch	Input	Selector lever	P position	0 V
					Any position other than P	Battery voltage
100 (P/L)	Ground	Passenger door request switch	Input	Passenger door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 <p style="text-align: center;">JPMA0016GB 1.0 V</p>
101 (B/W)	Ground	Driver door request switch	Input	Driver door request switch	ON (Pressed)	0 V
					OFF (Not pressed)	 <p style="text-align: center;">JPMA0016GB 1.0 V</p>
102 (Y)	Ground	Blower fan motor relay control	Output	Ignition switch	OFF or ACC	0 V
					ON	Battery voltage
103 (L/R)	Ground	Remote keyless entry receiver power supply	Output	Ignition switch OFF		Battery voltage
106 (G/Y)	Ground	Steering wheel lock unit power supply	Output	Ignition switch	OFF or ACC	Battery voltage
					ON	0 V

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW





BCM (BODY CONTROL MODULE)
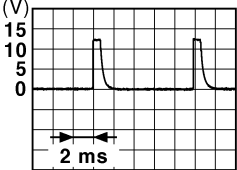
< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
107 (R/W)	Ground	Combination switch INPUT 1	Input	Combination switch (Wiper intermit- tent dial 4)	All switch OFF	 <p style="text-align: right;">JPMIA0041GB</p> <p style="text-align: center;">1.4 V</p>
					Turn signal switch LH	 <p style="text-align: right;">JPMIA0037GB</p> <p style="text-align: center;">1.3 V</p>
					Turn signal switch RH	 <p style="text-align: right;">JPMIA0036GB</p> <p style="text-align: center;">1.3 V</p>
					Front wiper switch LO	 <p style="text-align: right;">JPMIA0038GB</p> <p style="text-align: center;">1.3 V</p>
					Front washer switch ON	 <p style="text-align: right;">JPMIA0039GB</p> <p style="text-align: center;">1.3 V</p>

BCM (BODY CONTROL MODULE)
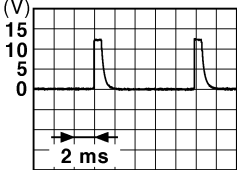
< ECU DIAGNOSIS >

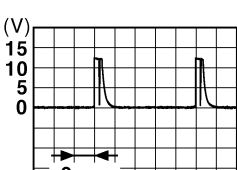

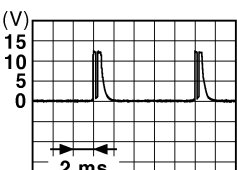
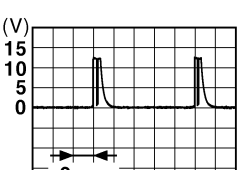
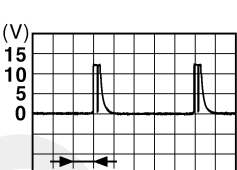
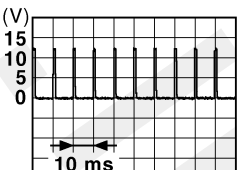
Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
108 (P/B)	Ground	Combination switch INPUT 4	Input	Combination switch	All switch OFF (Wiper intermittent dial 4)  <p style="text-align: right; font-size: small;">JPMA0041GB</p> <p style="text-align: center;">1.4 V</p>
					Lighting switch AUTO (Wiper intermittent dial 4)  <p style="text-align: right; font-size: small;">JPMA0038GB</p> <p style="text-align: center;">1.3 V</p>
					Lighting switch 1ST (Wiper intermittent dial 4)  <p style="text-align: right; font-size: small;">JPMA0036GB</p> <p style="text-align: center;">1.3 V</p>
					Any of the conditions below with all switch OFF <ul style="list-style-type: none"> • Wiper intermittent dial 1 • Wiper intermittent dial 5 • Wiper intermittent dial 6  <p style="text-align: right; font-size: small;">JPMA0039GB</p> <p style="text-align: center;">1.3 V</p>

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

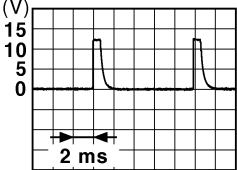Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
109 (R/B)	Ground	Combination switch INPUT 2	Input	Combination switch (Wiper intermit- tent dial 4)	All switch OFF	 <p style="text-align: right;">1.4 V</p>
					Lighting switch PASS	 <p style="text-align: right;">1.3 V</p>
					Lighting switch 2ND	 <p style="text-align: right;">1.3 V</p>
					Front wiper switch INT	 <p style="text-align: right;">1.3 V</p>
					Front wiper switch HI	 <p style="text-align: right;">1.3 V</p>
					ON	0 V
110 (G/O)	Ground	Hazard switch	Input	Hazard switch	OFF	 <p style="text-align: right;">1.1 V</p>

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >





Terminal No. (Wire color)		Description		Condition	Value (Approx.)		
+	-	Signal name	Input/ Output				
111 (L/Y)	Ground	Steering lock unit communication	Input/ Output	Steering lock	LOCK status	Battery voltage	
					LOCK or UNLOCK	<p style="text-align: right; font-size: small;">JMKIA0066GB</p>	
					For 15 seconds after UN- LOCK	Battery voltage	
					15 seconds or later after UNLOCK	0 V	
113 (P/B)	Ground	Optical sensor	Input	Ignition switch ON	When bright outside of the vehicle	Close to 5 V	
					When dark outside of the vehicle	Close to 0 V	
115 (L)	Ground	Shock sensor	Input	Ignition switch ON	OFF	0 V	
					ACC	5.0 V	
					ON	<p style="text-align: right; font-size: small;">JPMIA1034GB</p>	
					2.5 V		
116 (R/W)	Ground	Fuse check (Stop lamp switch)	Input	—	Battery voltage		
118 (O/L)	Ground	Stop lamp switch	Input	Stop lamp switch	OFF (Brake pedal is not depressed)	0 V	
					ON (Brake pedal is de- pressed)	Battery voltage	
119 (G/W)	Ground	Front door lock as- sembly driver side (unlock sensor)	Input	Driver door	LOCK status (unlock sen- sor switch OFF)	<p style="text-align: right; font-size: small;">JPMIA0012GB</p>	
						UNLOCK status (unlock sensor switch ON)	0 V
						1.1 V	
121 (Y)	Ground	Key slot switch	Input	When the key is inserted into key slot	Battery voltage		
				When the key is not inserted into key slot	0 V		
122 (V/R)	Ground	ACC feedback	Input	Ignition switch	OFF	0 V	
					ACC or ON	Battery voltage	
123 (G/W)	Ground	IGN feedback	Input	Ignition switch	OFF or ACC	0 V	
					ON	Battery voltage	

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW





BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

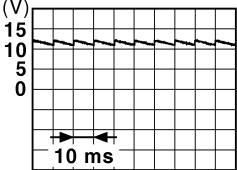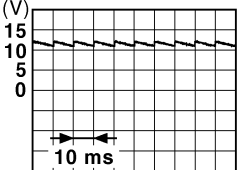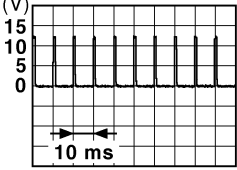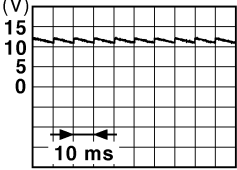Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
124 (R/B)	Ground	Passenger door switch	Input	Passenger door switch	OFF (When passenger door closes)	 <small>JPMIA0011GB</small> 11.8 V
					ON (When passenger door opens)	0 V
128 (GR)	Ground	Door lock and unlock switch LOCK	Input	Door lock and unlock switch [power window main switch or front power window switch (passenger side)]	NEUTRAL position	 <small>JPMIA0011GB</small> 11.8 V
					LOCK position	0 V
130* (GR/W)	Ground	Rear window defogger switch	Input	Ignition switch ON	Rear window defogger switch OFF	 <small>JPMIA0012GB</small> 1.1 V
					Rear window defogger switch ON	0 V
131 (GR/R)	Ground	Door lock and unlock switch UNLOCK	Input	Door lock and unlock switch [power window main switch or front power window switch (passenger side)]	NEUTRAL position	 <small>JPMIA0011GB</small> 11.8 V
					UNLOCK position	0 V
133 (W)	Ground	Push-button ignition switch illumination	Output	Push-button ignition switch illumination	ON	9.5 V
					OFF	0 V
134 (R)	Ground	LOCK indicator lamp	Output	LOCK indicator lamp	OFF	Battery voltage
					ON	0 V
137 (P)	Ground	Receiver and sensor ground	Input	Ignition switch ON		0 V
138 (V/W)	Ground	Receiver and sensor power supply output	Output	Ignition switch	OFF	0 V
					ACC or ON	5.0 V
140 (R/G)	Ground	Selector lever P/N position	Input	Selector lever	P or N position	Battery voltage
					Except P and N positions	0 V

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

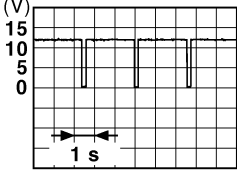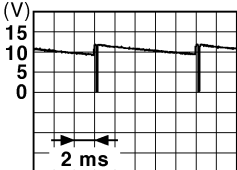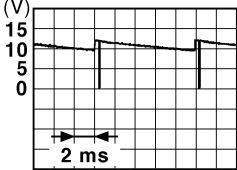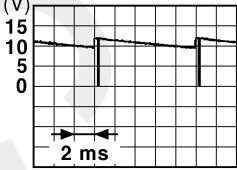Terminal No. (Wire color)		Description		Condition	Value (Approx.)	
+	-	Signal name	Input/ Output			
141 (L/O)	Ground	Security indicator	Output	Security indicator	ON	0 V
				Blinking	 <p style="text-align: right;">JPMIA0014GB</p>	11.3 V
142 (LG/B)	Ground	Combination switch OUTPUT 5	Output	Combination switch (Wiper intermit- tent dial 4)	All switch OFF	0 V
				Lighting switch 1ST	 <p style="text-align: right;">JPMIA0031GB</p>	10.7 V
				Lighting switch HI		
				Lighting switch 2ND		
				Turn signal switch RH		
143 (L/W)	Ground	Combination switch OUTPUT 1	Output	Combination switch	All switch OFF (Wiper intermittent dial 4)	0 V
				Front wiper switch HI (Wiper intermittent dial 4)	 <p style="text-align: right;">JPMIA0032GB</p>	10.7 V
				Any of the conditions be- low with all switch OFF		
144 (G/B)	Ground	Combination switch OUTPUT 2	Output	Combination switch	All switch OFF (Wiper intermittent dial 4)	0 V
				Front washer switch ON (Wiper intermittent dial 4)	 <p style="text-align: right;">JPMIA0033GB</p>	10.7 V
				Any of the conditions be- low with all switch OFF		

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)				
+	-	Signal name	Input/ Output						
145 (LG/R)	Ground	Combination switch OUTPUT 3	Output	All switch OFF	0 V				
				Front wiper switch INT	<p style="text-align: right; font-size: small;">JPMIA0034GB</p>				
				Front wiper switch LO					
				Lighting switch AUTO					
				Rear fog lamp switch ON					
					10.7 V				
146 (G/Y)	Ground	Combination switch OUTPUT 4	Output	All switch OFF	0 V				
				Front fog lamp switch ON	<p style="text-align: right; font-size: small;">JPMIA0035GB</p>				
				Lighting switch 2ND					
				Lighting switch PASS					
				Turn signal switch LH					
					10.7 V				
150 (SB)	Ground	Driver door switch	Input	Driver door switch	<p style="text-align: right; font-size: small;">JPMIA0011GB</p>				
				OFF (When driver door closes)	11.8 V				
151 (G/R)	Ground	Rear window defogger relay	Output	Rear window defogger	<table border="0"> <tr> <td>Active</td> <td>0 V</td> </tr> <tr> <td>Not activated</td> <td>Battery voltage</td> </tr> </table>	Active	0 V	Not activated	Battery voltage
				Active	0 V				
Not activated	Battery voltage								

NOTE:


*: Without BOSE audio system

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Wiring Diagram - BCM -

INFOID:000000003941297

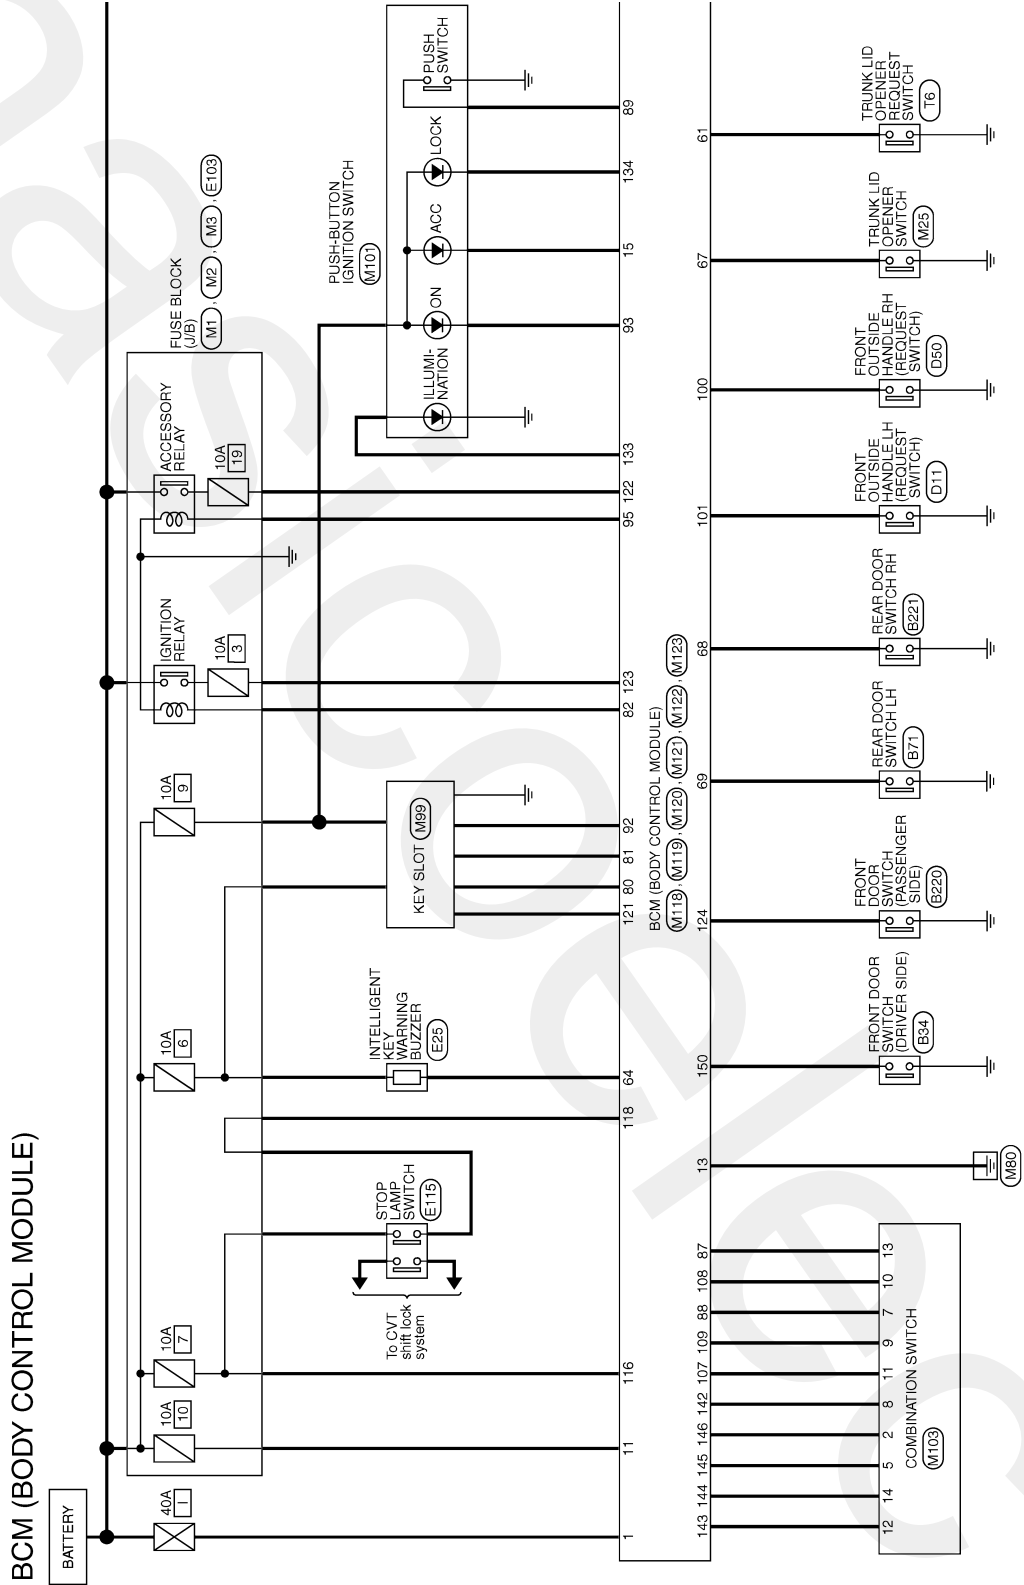

2008/01/23

JCMWM1671G1


A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

V3 : With VQ35 engine
 V2 : With VQ25 engine

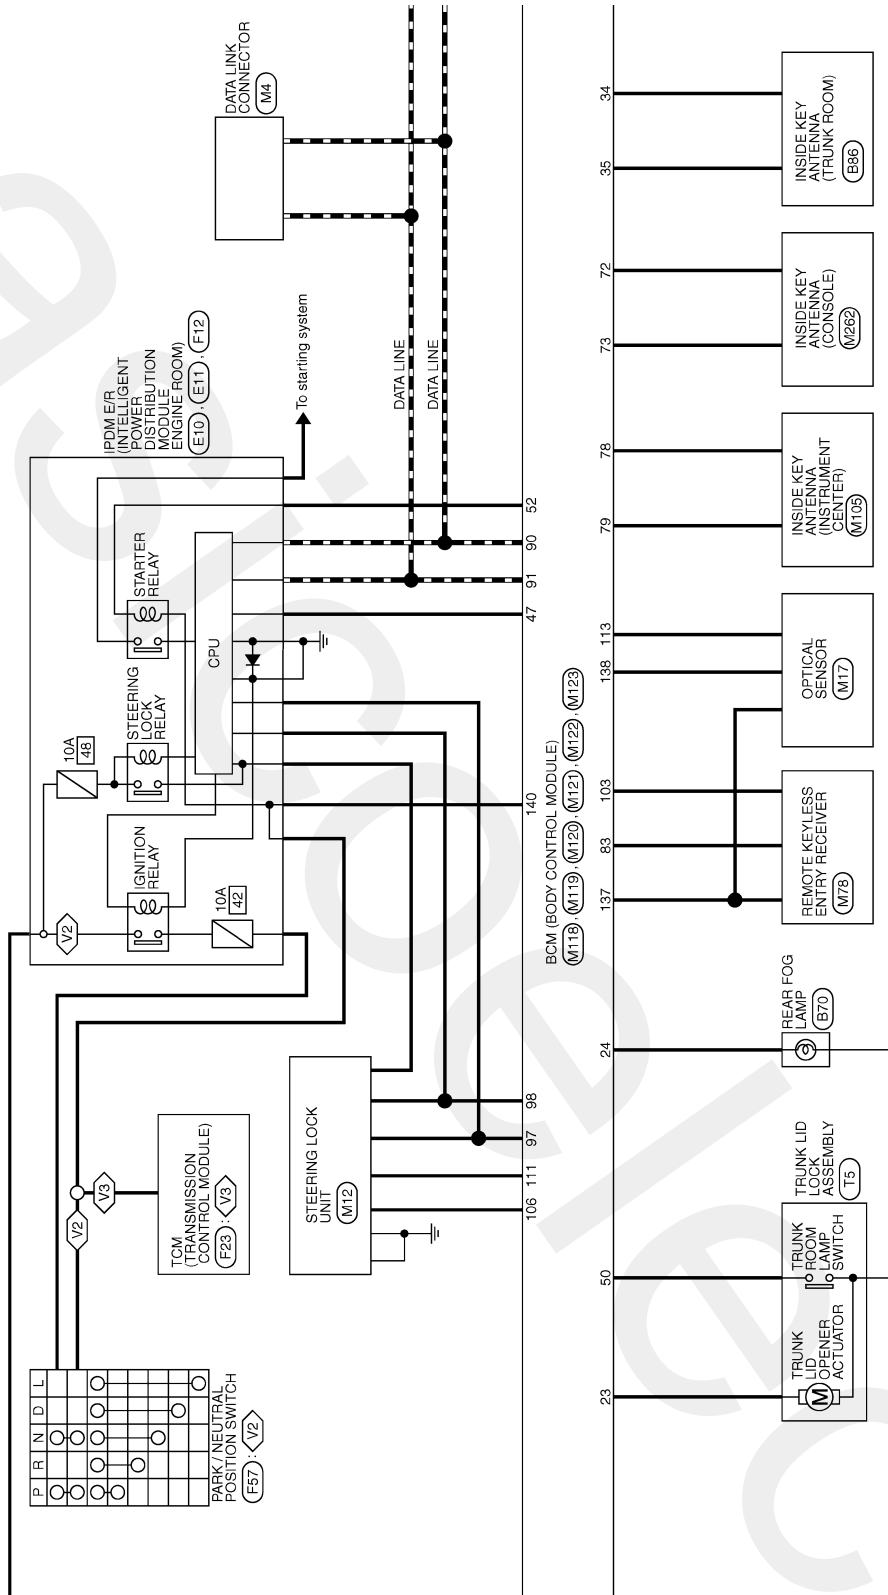


JCMWM1672G

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

- ◀ WV ▶ : With VDC
- ◀ OV ▶ : Without VDC
- ◀ PM ▶ : With automatic drive positioner
- ◀ SO ▶ : With power seat without automatic drive positioner
- ◀ BD ▶ : With BOSE system or base audio and display system
- ◀ SR ▶ : With sunroof
- ◀ FV ▶ : With front ventilation seat
- ◀ OF ▶ : Without front ventilation seat

* : This connector is not shown in "Harness Layout".

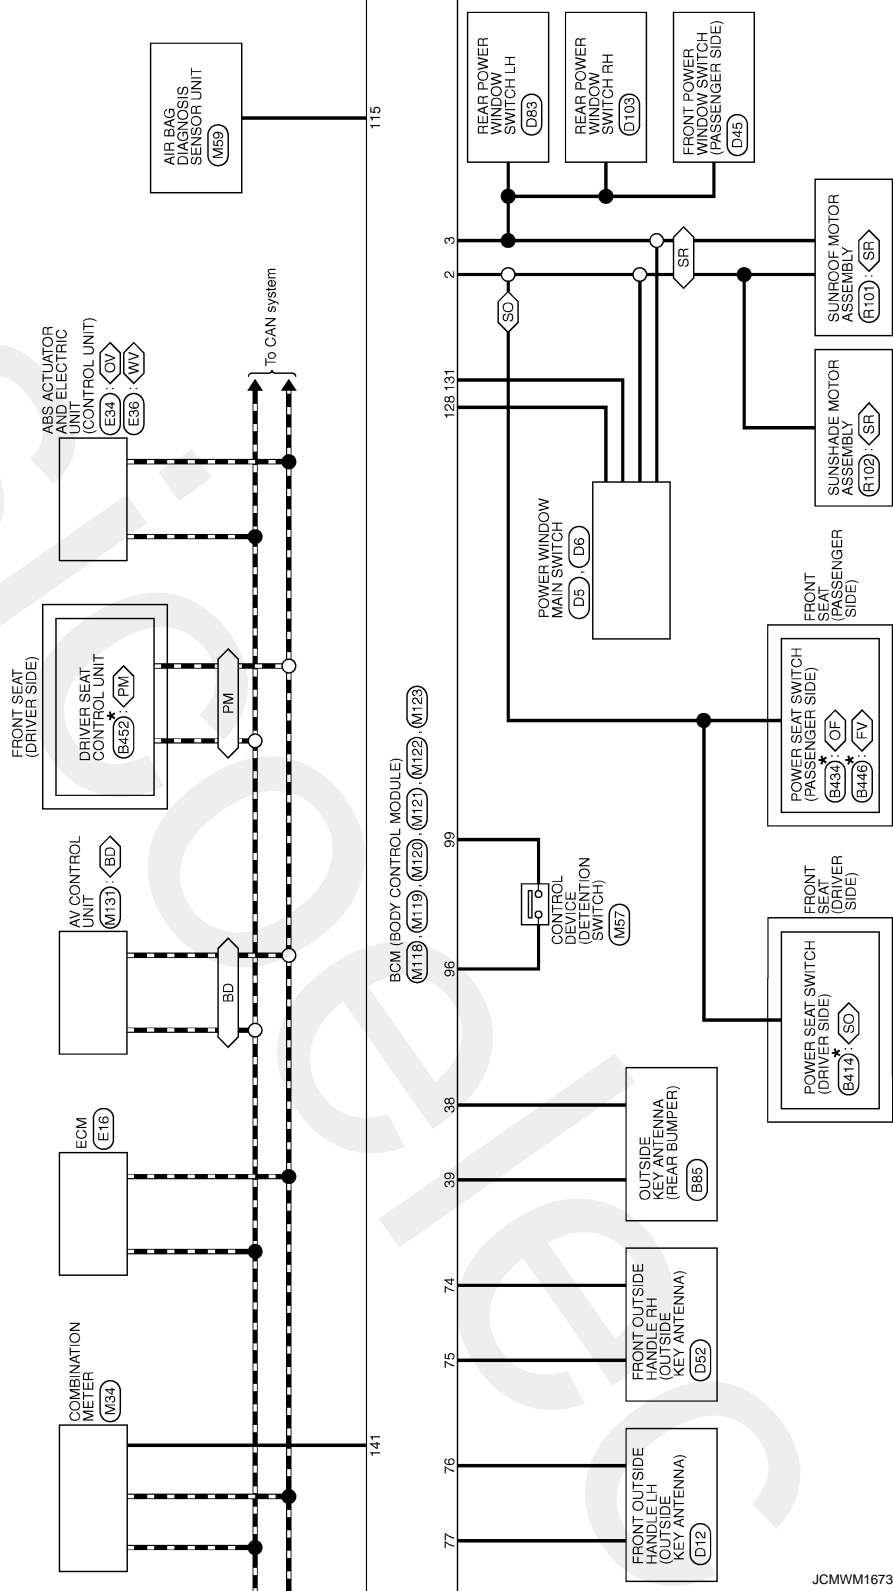

JCMWM1673G1


A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WW

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

<VM> : With vanity mirror lamp

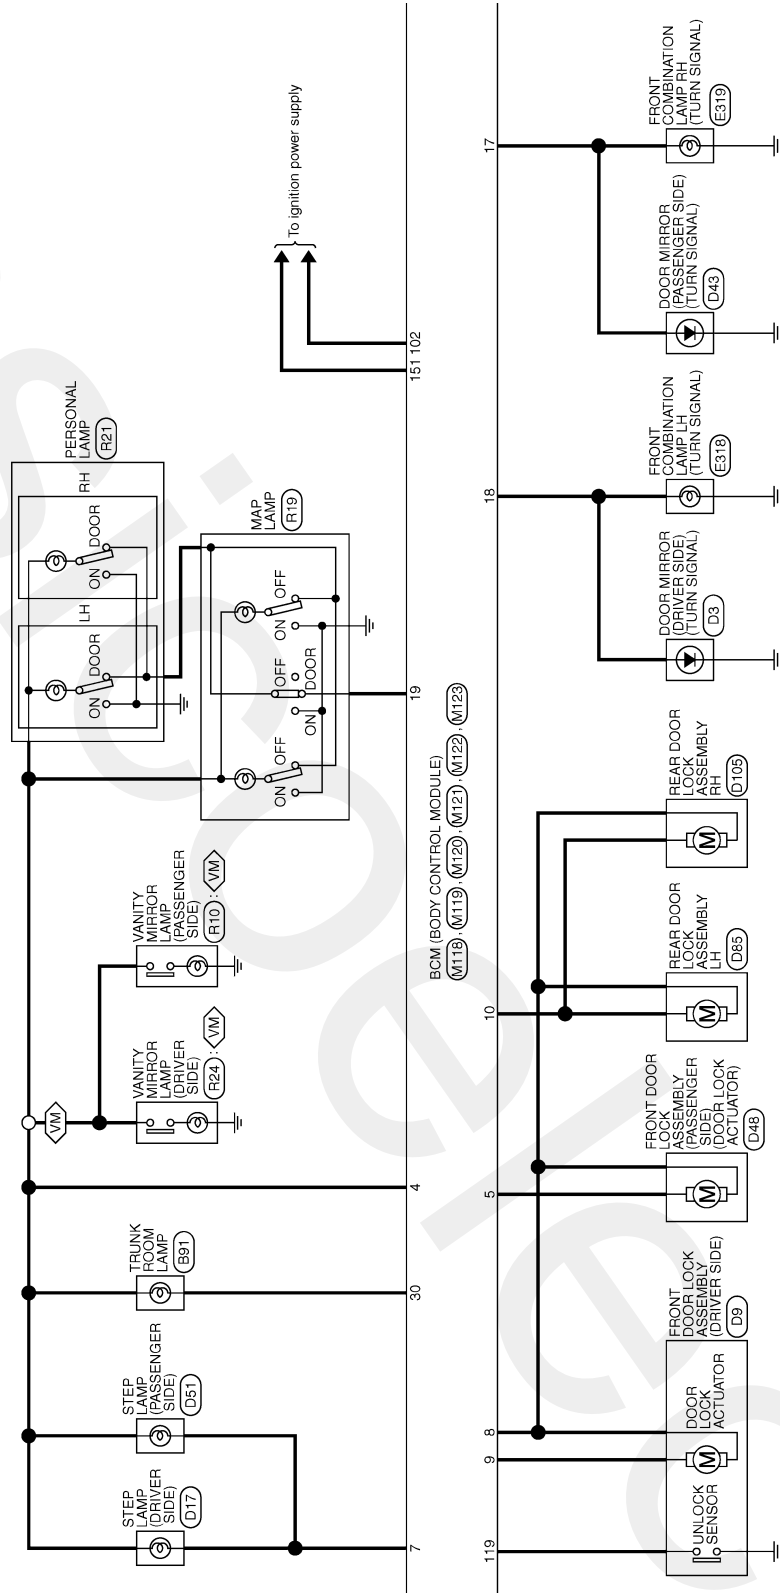


JCMWM1674G

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Ⓞ : Without BOSE system or base audio and display system

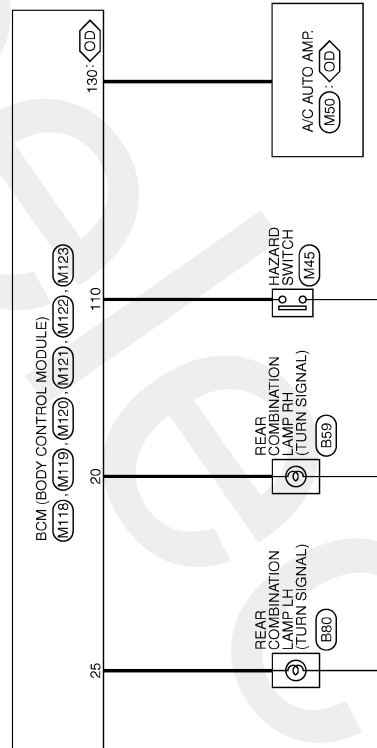

JCMWM1675G1

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P


WW

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

BCM (BODY CONTROL MODULE)

Connector No.	M103
Connector Name	COMBINATION SWITCH
Connector Type	TH16FW-NH




Terminal No.	Color of Wire	Signal Name [Specification]
1	G/Y	OUTPUT 4
2	LG/R	OUTPUT 3
3	R/G	INPUT 3
4	LG/B	OUTPUT 5
5	R/B	INPUT 2
6	P/B	INPUT 4
7	R/W	INPUT 1
8	L/W	OUTPUT 1
9	R/Y	INPUT 5
10	G/B	OUTPUT 2

Connector No.	M120
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS12FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
20	G/B	TURN SIGNAL RH (REAR)
23	R	TRUNK OPEN OUTPUT
24	G	REAR FOG LAMP OUTPUT
25	G/Y	TURN SIGNAL LH (REAR)
30	V/W	TRUNK LAMP OUTPUT

Connector No.	M118
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	M03FB-LC




Terminal No.	Color of Wire	Signal Name [Specification]
1	W/B	BAT (F/L)
2	R/Y	POWER WINDOW POWER SUPPLY (BAT)
3	L/W	POWER WINDOW POWER SUPPLY (IGN)

Connector No.	M121
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH46FGY-NH



Terminal No.	Color of Wire	Signal Name [Specification]
34	B	TRUNK ANT 1 B
35	W	TRUNK ANT 1 A
38	L/O	RR BUMPER ANT B
39	BR/W	RR BUMPER ANT A
47	BR/W	IGN RELAY IPDM E/R CONT
50	W	TRUNK SW
52	R	IGN RELAY IPDM E/R CONT
61	G/R	TRUNK REQUEST SW
64	GR	REQUEST SW BUZZER
67	L/R	INTERIOR TRUNK SW
68	R/W	REAR RH DOOR SW

Connector No.	M119
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	NS16FW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
4	P/W	INTERIOR ROOM LAMP POWER SUPPLY
5	G/Y	PASSENGER DOOR UNLOCK OUTPUT
7	R/W	STEP LAMP OUTPUT
8	V	ALL DOOR LOCK OUTPUT
9	G	DRIVER DOOR UNLOCK OUTPUT
10	G/Y	REAR DOOR UNLOCK OUTPUT
11	Y/R	BAT (L/USE)
13	B	GNL
15	Y	ACC IND
17	G/B	TURN SIGNAL RH (FRONT D/MIRROR)
18	G/Y	TURN SIGNAL LH (FRONT D/MIRROR)

Connector No.	69
Connector Name	REAR LH DOOR SW


JCMWM1676G

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

BCM (BODY CONTROL MODULE)


Connector No.	M122
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FB-NH



Terminal No.	Color of Wire	Signal Name [Specification]
72	B/R	ROOM ANT2-
73	W/R	ROOM ANT2+
74	B/Y	PASSENGER DOOR ANT-
75	B/G	PASSENGER DOOR ANT+
76	V	DRIVER DOOR ANT-
77	P	DRIVER DOOR ANT+
78	R	ROOM ANTI-
79	G	ROOM ANTI+
80	G/O	FOB READER CLOCK
81	O	FOB READER DATA
82	R/B	IGN RELAY (F/B) CONT

83	L/O	KEYLESS ENTRY RECEIVER SIGNAL
87	R/Y	COMBI SW INPUT 5
88	R/G	COMBI SW INPUT 3
89	BR	PUSH SW
90	P	CAN-L
91	L	CAN-H
92	R/L	FOB SLOT ILLUMINATION
93	Y	ON IND
95	L	ACC RELAY CONT
96	Y/R	CONTROL DEVICE POWER SUPPLY
97	L/O	S/L CONDITION 1
98	G/R	S/L CONDITION 2
99	G/B	SHIFT P
100	P/L	PASSENGER DOOR REQUEST SW
101	B/W	DRIVER DOOR REQUEST SW
102	Y	BLOWER FAN MOTOR RELAY CONT
103	L/R	KEYLESS ENTRY RECEIVER POWER SUPPLY
106	G/Y	S/L POWER SUPPLY
107	R/W	COMBI SW INPUT 1
108	P/B	COMBI SW INPUT 4
109	R/B	COMBI SW INPUT 2
110	G/O	HAZARD SW
111	L/Y	S/L COMM

Connector No.	M123
Connector Name	BCM (BODY CONTROL MODULE)
Connector Type	TH40FG-NH



Terminal No.	Color of Wire	Signal Name [Specification]
113	P/B	OPTICAL SENSOR
115	L	SHOCK SENSOR SIGNAL
116	R/W	STOP L LOW SW
118	O/L	STOP L HIGH SW
119	G/W	DR DOOR UNLOCK SENSOR
121	Y	KEY SLOT SW
122	V/R	ACC P/B
123	G/W	IGN P/B
124	R/B	PASSENGER DOOR SW
128	GR	CENTRAL LOCK SW
130	GR/W	REAR DEFOGGER SW

131	GR/R	CENTRAL UNLOCK SW
133	W	PUSH-BUTTON IGNITION SW ILL POWER
134	R	LOCK LED
137	P	RECEIVER SENSOR GND
138	V/W	RECEIVER SENSOR POWER SUPPLY
140	R/G	SHIFT N/P
141	L/O	SECURITY INDICATOR OUTPUT
142	LG/B	COMBI SW OUTPUT 5
143	L/W	COMBI SW OUTPUT 1
144	G/B	COMBI SW OUTPUT 2
145	LG/R	COMBI SW OUTPUT 3
146	G/Y	COMBI SW OUTPUT 4
150	SB	DRIVER DOOR SW
151	G/R	REAR WINDOW DEFOGGER RELAY

Fail-safe

FAIL-SAFE CONTROL BY DTC

BCM performs fail-safe control when any DTC is detected.

JCMWM1677G1

INFOID:000000003941298

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Display contents of CONSULT	Fail-safe	Cancellation
B2013: ID DISCORD BCM-S/L	Inhibit engine cranking	Erase DTC
B2014: CHAIN OF S/L-BCM	Inhibit engine cranking	Erase DTC
B2190: NATS ANTENNA AMP	Inhibit engine cranking	Erase DTC
B2191: DIFFERENCE OF KEY	Inhibit engine cranking	Erase DTC
B2192: ID DISCORD BCM-ECM	Inhibit engine cranking	Erase DTC
B2193: CHAIN OF BCM-ECM	Inhibit engine cranking	Erase DTC
B2557: VEHICLE SPEED	Inhibit steering lock	When normal vehicle speed signals have been received from ABS actuator and electric unit (control unit) for 500 ms
B2560: STARTER CONT RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status has become consistent <ul style="list-style-type: none"> • Starter control relay signal • Starter relay status signal
B2601: SHIFT POSITION	Inhibit steering lock	500 ms after the following signal reception status becomes consistent <ul style="list-style-type: none"> • Selector lever P position switch signal • P range signal (CAN)
B2602: SHIFT POSITION	Inhibit steering lock	5 seconds after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position • Selector lever P position switch signal: Except P position (battery voltage) • Vehicle speed: 4 km/h (2.5 MPH) or more
B2603: SHIFT POSI STATUS	Inhibit steering lock	500 ms after the following BCM recognition conditions are fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position • Selector lever P position switch signal: Except P position (battery voltage) • Selector lever P/N position signal: Except P and N positions (0 V)
B2604: PNP SW	Inhibit steering lock	500 ms after any of the following BCM recognition conditions is fulfilled <ul style="list-style-type: none"> • Status 1 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: P and N position (battery voltage) - P range signal or N range signal (CAN): ON • Status 2 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: Except P and N positions (0 V) - P range signal and N range signal (CAN): OFF
B2605: PNP SW	Inhibit steering lock	500 ms after any of the following BCM recognition conditions is fulfilled <ul style="list-style-type: none"> • Ignition switch is in the ON position <ul style="list-style-type: none"> - Power position: IGN - Selector lever P/N position signal: Except P and N positions (0 V) - Interlock/PNP switch signal (CAN): OFF • Status 2 <ul style="list-style-type: none"> - Ignition switch is in the ON position - Selector lever P/N position signal: P or N position (battery voltage) - PNP switch signal (CAN): ON
B2606: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status has become consistent <ul style="list-style-type: none"> • Steering lock relay signal (Request signal) • Steering lock relay signal (Condition signal)
B2607: S/L RELAY	Inhibit engine cranking	500 ms after the following CAN signal communication status has become consistent <ul style="list-style-type: none"> • Steering lock relay signal (Request signal) • Steering lock relay signal (Condition signal)

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Display contents of CONSULT	Fail-safe	Cancellation
B2608: STARTER RELAY	Inhibit engine cranking	500 ms after the following signal communication status becomes consistent <ul style="list-style-type: none"> • Starter motor relay control signal • Starter relay status signal (CAN)
B2609: S/L STATUS	<ul style="list-style-type: none"> • Inhibit engine cranking • Inhibit steering lock 	When the following steering lock conditions agree <ul style="list-style-type: none"> • BCM steering lock control status • Steering lock condition No. 1 signal status • Steering lock condition No. 2 signal status
B260A: IGNITION RELAY	Inhibit engine cranking	500 ms after the following conditions are fulfilled <ul style="list-style-type: none"> • IGN relay (IPDM E/R) control signal: OFF (Battery voltage) • Ignition ON signal (CAN to IPDM E/R): OFF (Request signal) • Ignition ON signal (CAN from IPDM E/R): OFF (Condition signal)
B260F: ENG STATE SIG LOST	Maintains the power supply position attained at the time of DTC detection	When any of the following conditions is fulfilled <ul style="list-style-type: none"> • Power position changes to ACC • Receives engine status signal (CAN)
B2612: S/L STATUS	<ul style="list-style-type: none"> • Inhibit engine cranking • Inhibit steering lock 	When any of the following conditions is fulfilled <ul style="list-style-type: none"> • Steering lock unit status signal (CAN) is received normally • The BCM steering lock control status matches the steering lock status recognized by the steering lock unit status signal (CAN from IPDM E/R)
B2617: STARTER RELAY CIRC	Inhibit engine cranking	1 second after the starter motor relay control inside BCM becomes normal
B2618: BCM	Inhibit engine cranking	1 second after the ignition relay (IPDM E/R) control inside BCM becomes normal
B2619: BCM	Inhibit engine cranking	1 second after the steering lock unit power supply output control inside BCM becomes normal
B261E: VEHICLE TYPE	Inhibit engine cranking	BCM initialization
B26E1: ENG STATE NO RES	Inhibit engine cranking	When any of the following conditions is fulfilled <ul style="list-style-type: none"> • Power position changes to ACC • Receives engine status signal (CAN)
B26E9: S/L STATUS	<ul style="list-style-type: none"> • Inhibit engine cranking • Inhibit steering lock 	When BCM transmits the LOCK request signal to steering lock unit, and receives LOCK response signal from steering lock unit, the following conditions is fulfilled <ul style="list-style-type: none"> • Steering condition No. 1 signal: LOCK (0 V) • Steering condition No. 2 signal: LOCK (Battery voltage)

HIGH FLASHER OPERATION

BCM detects the turn signal lamp circuit status by the current value.

BCM increases the turn signal lamp blinking speed if the bulb or harness open is detected with the turn signal lamp operating.

NOTE:

The blinking speed is normal while activating the hazard warning lamp.

DTC Inspection Priority Chart

INFOID:000000003941299

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

Priority	DTC
1	B2562: LOW VOLTAGE
2	<ul style="list-style-type: none"> • U1000: CAN COMM CIRCUIT • U1010: CONTROL UNIT (CAN)
3	<ul style="list-style-type: none"> • B2190: NATS ANTENNA AMP • B2191: DIFFERENCE OF KEY • B2192: ID DISCORD BCM-ECM • B2193: CHAIN OF BCM-ECM

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

Priority	DTC
4	<ul style="list-style-type: none"> • B2013: ID DISCORD BCM-S/L • B2014: CHAIN OF S/L-BCM • B2553: IGNITION RELAY • B2555: STOP LAMP • B2556: PUSH-BTN IGN SW • B2557: VEHICLE SPEED • B2560: STARTER CONT RELAY • B2601: SHIFT POSITION • B2602: SHIFT POSITION • B2603: SHIFT POSI STATUS • B2604: PNP SW • B2605: PNP SW • B2606: S/L RELAY • B2607: S/L RELAY • B2608: STARTER RELAY • B2609: S/L STATUS • B260A: IGNITION RELAY • B260B: STEERING LOCK UNIT • B260C: STEERING LOCK UNIT • B260D: STEERING LOCK UNIT • B260F: ENG STATE SIG LOST • B2612: S/L STATUS • B2614: ACC RELAY CIRC • B2615: BLOWER RELAY CIRC • B2616: IGN RELAY CIRC • B2617: STARTER RELAY CIRC • B2618: BCM • B2619: BCM • B261A: PUSH-BTN IGN SW • B261E: VEHICLE TYPE • B26E1: ENG STATE NO RES • B26E9: S/L STATUS • B26EA: KEY REGISTRATION • U0415: VEHICLE SPEED SIG
5	<ul style="list-style-type: none"> • B2621: INSIDE ANTENNA • B2622: INSIDE ANTENNA • B2623: INSIDE ANTENNA

DTC Index

INFOID:000000003941300

NOTE:

The details of time display are as follows.

- CRNT: A malfunction is detected now.
- PAST: A malfunction was detected in the past.

IGN counter is displayed on Freeze Frame Data. For details of Freeze Frame Data and IGN Counter, refer to [WW-12, "COMMON ITEM : CONSULT-III Function \(BCM - COMMON ITEM\)"](#).

CONSULT display	Fail-safe	Freeze Frame Data	Intelligent Key warning lamp ON	Reference page
No DTC is detected. further testing may be required.	—	—	—	—
U1000: CAN COMM CIRCUIT	—	—	—	BCS-33
U1010: CONTROL UNIT (CAN)	—	—	—	BCS-34
U0415: VEHICLE SPEED SIG	—	—	—	BCS-35
B2013: ID DISCORD BCM-S/L	×	×	—	SEC-46
B2014: CHAIN OF S/L-BCM	×	×	—	SEC-47
B2190: NATS ANTENNA AMP	×	—	—	SEC-39
B2191: DIFFERENCE OF KEY	×	—	—	SEC-42

BCM (BODY CONTROL MODULE)

< ECU DIAGNOSIS >

CONSULT display	Fail-safe	Freeze Frame Data	Intelligent Key warning lamp ON	Reference page	
B2192: ID DISCORD BCM-ECM	×	—	—	SEC-43	A
B2193: CHAIN OF BCM-ECM	×	—	—	SEC-45	B
B2553: IGNITION RELAY	—	×	—	PCS-49	B
B2555: STOP LAMP	—	×	—	SEC-50	
B2556: PUSH-BTN IGN SW	—	×	×	SEC-52	C
B2557: VEHICLE SPEED	×	×	×	SEC-54	
B2560: STARTER CONT RELAY	×	×	×	SEC-55	
B2562: LOW VOLTAGE	—	×	—	BCS-36	D
B2601: SHIFT POSITION	×	×	×	SEC-56	
B2602: SHIFT POSITION	×	×	×	SEC-59	E
B2603: SHIFT POSI STATUS	×	×	×	SEC-61	
B2604: PNP SW	×	×	×	SEC-64	F
B2605: PNP SW	×	×	×	SEC-67	F
B2606: S/L RELAY	×	×	×	SEC-69	
B2607: S/L RELAY	×	×	×	SEC-70	G
B2608: STARTER RELAY	×	×	×	SEC-72	G
B2609: S/L STATUS	×	×	×	SEC-74	
B260A: IGNITION RELAY	×	×	×	PCS-51	H
B260B: STEERING LOCK UNIT	—	×	×	SEC-78	
B260C: STEERING LOCK UNIT	—	×	×	SEC-79	I
B260D: STEERING LOCK UNIT	—	×	×	SEC-80	
B260F: ENG STATE SIG LOST	×	×	×	SEC-81	J
B2612: S/L STATUS	×	×	×	SEC-85	J
B2614: ACC RELAY CIRC	—	×	×	PCS-53	
B2615: BLOWER RELAY CIRC	—	×	×	PCS-55	K
B2616: IGN RELAY CIRC	—	×	×	PCS-57	K
B2617: STARTER RELAY CIRC	×	×	×	SEC-89	
B2618: BCM	×	×	×	PCS-59	WW
B2619: BCM	×	×	×	SEC-91	
B261A: PUSH-BTN IGN SW	—	×	×	SEC-92	
B261E: VEHICLE TYPE	×	×	× (Turn ON for 15 seconds)	SEC-95	M
B2621: INSIDE ANTENNA	—	×	—	DLK-50	
B2622: INSIDE ANTENNA	—	×	—	DLK-52	N
B2623: INSIDE ANTENNA	—	×	—	DLK-54	
B26E1: ENG STATE NO RES	×	×	×	SEC-82	O
B26E9: S/L STATUS	×	×	× (Turn ON for 15 seconds)	SEC-83	
B26EA: KEY REGISTRATION	—	×	× (Turn ON for 15 seconds)	SEC-84	P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Reference Value

INFOID:000000003941302

VALUES ON THE DIAGNOSIS TOOL

Monitor Item	Condition		Value/Status
MOTOR FAN REQ	Engine idle speed	Changes depending on engine coolant temperature, air conditioner operation status, vehicle speed, etc.	1/2/3/4
AC COMP REQ	Engine running	A/C switch OFF	Off
		A/C switch ON (Compressor is operating)	On
TAIL&CLR REQ	Lighting switch OFF		Off
	Lighting switch 1ST, 2ND, HI or AUTO (Light is illuminated)		On
HL LO REQ	Lighting switch OFF		Off
	Lighting switch 2ND HI or AUTO (Light is illuminated)		On
HL HI REQ	Lighting switch OFF		Off
	Lighting switch HI		On
FR FOG REQ	Lighting switch 2ND or AUTO (Light is illuminated)	Front fog lamp switch OFF	Off
		Front fog lamp switch ON	On
FR WIP REQ	Ignition switch ON	Front wiper switch OFF	Stop
		Front wiper switch INT	1LOW
		Front wiper switch LO	Low
		Front wiper switch HI	Hi
WIP AUTO STOP	Ignition switch ON	Front wiper stop position	STOP P
		Any position other than front wiper stop position	ACT P
WIP PROT	Ignition switch ON	Front wiper operates normally	Off
		Front wiper stops at fail-safe operation	BLOCK
IGN RLY1 -REQ	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
IGN RLY	Ignition switch OFF or ACC		Off
	Ignition switch ON		On
PUSH SW	Release the push-button ignition switch		Off
	Press the push-button ignition switch		On
INTER/NP SW	Ignition switch ON	Selector lever in any position other than P or N	Off
		Selector lever in P or N position	On
ST RLY CONT	Ignition switch ON		Off
	At engine cranking		On
IHBT RLY -REQ	Ignition switch ON		Off
	At engine cranking		On

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

Monitor Item	Condition	Value/Status
ST/INHI RLY	Ignition switch ON	Off
	At engine cranking	INHI → ST
	The status of starter relay or starter control relay cannot be recognized by the battery voltage malfunction, etc. when the starter relay is ON and the starter control relay is OFF	UNKWN
DETENT SW	Ignition switch ON <ul style="list-style-type: none"> • Press the selector button with selector lever in P position • Selector lever in any position other than P 	Off
	Release the selector button with selector lever in P position	On
S/L RLY -REQ	None of the conditions below are present	Off
	<ul style="list-style-type: none"> • Open the driver door after the ignition switch is turned OFF (for a few seconds) • Press the push-button ignition switch when the steering lock is activated 	On
S/L STATE	Steering lock is activated	LOCK
	Steering lock is deactivated	UNLOCK
	[DTC: B210A] is detected	UNKWN
DTRL REQ	NOTE: The item is indicated, but not monitored.	Off
OIL P SW	Ignition switch OFF, ACC or engine running	Open
	Ignition switch ON	Close
HOOD SW	Close the hood	Off
	Open the hood	On
HL WASHER REQ	Not operating	Off
	Headlamp washer operating	On
THFT HRN REQ	Not operating	Off
	Horn is activated with vehicle security (theft warning) system	On
HORN CHIRP	Not operating	Off
	<ul style="list-style-type: none"> • Door locking with Intelligent Key (horn chirp mode) • Door locking with key fob (horn chirp mode) 	On
CRNRNG LMP REQ	NOTE: The item is indicated, but not monitored.	Off

A

B

C

D

E

F

G

H

I

J

K

WW

M

N


O

P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

TERMINAL LAYOUT

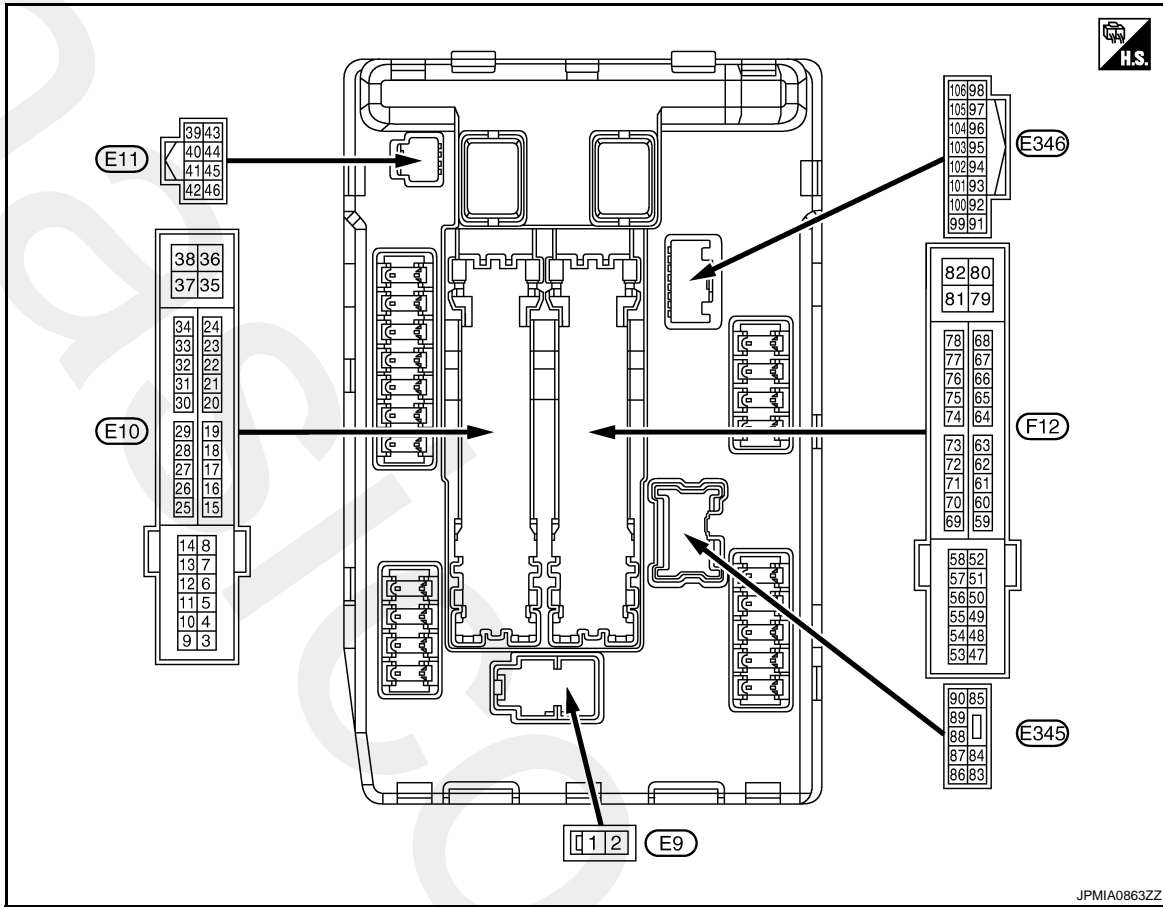

PHYSICAL VALUES

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
1 (R)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
2 (L)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
4 (LG)	Ground	Front wiper LO	Output	Ignition switch ON	Front wiper switch OFF	0 V
				Ignition switch OFF	Front wiper switch LO	Battery voltage
5 (Y)	Ground	Front wiper HI	Output	Ignition switch ON	Front wiper switch OFF	0 V
				Ignition switch OFF	Front wiper switch HI	Battery voltage
7 (GR)	Ground	Tail, license plate lamps & illuminations	Output	Ignition switch ON	Lighting switch OFF	0 V
				Ignition switch OFF	Lighting switch 1ST	Battery voltage
10 (BR)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)		0 V
				<ul style="list-style-type: none"> Ignition switch ON Ignition switch OFF (For a few seconds after turning ignition switch OFF) 		Battery voltage

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
11 (P)	Ground	Steering lock unit power supply	Output	Ignition switch OFF	A few seconds after opening the driver door	Battery voltage
				Ignition switch LOCK	Press the push-button ignition switch	Battery voltage
				Ignition switch ACC or ON		0 V
12 (B/W)	Ground	Ground	—	Ignition switch ON		0 V
13 (SB)	Ground	Fuel pump power supply	Output	Approximately 1 second or more after turning the ignition switch ON		0 V
				<ul style="list-style-type: none"> Approximately 1 second after turning the ignition switch ON Engine running 		Battery voltage
15 (W)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
16 (R)	Ground	Front wiper auto stop	Input	Ignition switch ON	Front wiper stop position	0 V
					Any position other than front wiper stop position	Battery voltage
17 (V)	Ground	Headlamp washer relay control	Input	Ignition switch ON	Headlamp washer deactivated	Battery voltage
					Headlamp washer activated	0 V
19 (Y)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
20 (B)	Ground	Ambient sensor ground	Output	Ignition switch ON		0 V
21 (O)	Ground	Ambient sensor	Input	Ignition switch ON NOTE: Changes depending to ambient temperature		<p style="text-align: right;">JSNIA0014GB</p>
22 (SB)	Ground	Refrigerant pressure sensor ground	Output	Engine running	<ul style="list-style-type: none"> Warm-up condition Idle speed 	0 V
23 (GR)	Ground	Refrigerant pressure sensor	Output	Engine running	<ul style="list-style-type: none"> Warm-up condition Both A/C switch and blower fan motor switch ON (Compressor operates) 	1.0 - 4.0 V
24 (G)	Ground	Refrigerant pressure sensor power supply	Input	Ignition switch OFF		0 V
				Ignition switch ON		5.0 V
25 (GR)	Ground	Ignition relay power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		Battery voltage
27 (W)	Ground	Ignition relay monitor	Input	Ignition switch OFF or ACC		Battery voltage
				Ignition switch ON		0 V

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
28 (SB)	Ground	Push-button ignition switch	Input	Press the push-button ignition switch		0 V
				Release the push-button ignition switch		Battery voltage
30 (BR)	Ground	Starter relay control	Input	Ignition switch ON	Selector lever in any position other than P or N	0 V
					Selector lever P or N	Battery voltage
32 (V)	Ground	Steering lock unit condition-1	Input	Steering lock is activated		0 V
				Steering lock is deactivated		Battery voltage
33 (G)	Ground	Steering lock unit condition-2	Input	Steering lock is activated		Battery voltage
				Steering lock is deactivated		0 V
34 (O)	Ground	Cooling fan relay-3 control	Input	Cooling fan stopped		Battery voltage
				Cooling fan at HI operation		0 V
35 (P)	Ground	Cooling fan relay-1 power supply	Input	Cooling fan stopped		Battery voltage
				Cooling fan at LO operation		6.0 V
36 (G)	Ground	Battery power supply	Input	Ignition switch OFF		Battery voltage
38 (GR)	Ground	Cooling fan relay-1 power supply	Output	Cooling fan not operating		0 V
				Cooling fan at LO operation		6.0 V
39 (P)	—	CAN-L	Input/ Output	—		—
40 (L)	—	CAN-H	Input/ Output	—		—
41 (B)	Ground	Ground	—	Ignition switch ON		0 V
42 (SB)	Ground	Cooling fan relay-2 control	Input	Cooling fan stopped		Battery voltage
				<ul style="list-style-type: none"> Cooling fan MID operating Cooling fan HI operating 		0 V
43 (Y)	Ground	Control device (Detention switch)	Input	Ignition switch ON	Press the selector button (selector lever P)	Battery voltage
					<ul style="list-style-type: none"> Selector lever in any position other than P Release the selector button (selector lever P) 	0 V
44 (G)	Ground	Horn relay control	Input	The horn is deactivated		Battery voltage
				The horn is activated		0 V
45 (O)	Ground	Horn switch	Input	The horn is deactivated		Battery voltage
				The horn is activated		0 V
46 (BR)	Ground	Starter relay control	Input	Ignition switch ON	Selector lever in any position other than P or N	0 V
					Selector lever P or N	Battery voltage
48 (Y/R)	Ground	A/C relay power supply	Output	Engine running	A/C switch OFF	0 V
					A/C switch ON (A/C compressor is operating)	Battery voltage

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition	Value (Approx.)
+	-	Signal name	Input/ Output		
49 (R/B)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V
				<ul style="list-style-type: none"> Ignition switch ON Ignition switch OFF (For a few seconds after turning ignition switch OFF) 	Battery voltage
51 (LG)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
52 (Y/G)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
53 (R/W)	Ground	ECM relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V
				<ul style="list-style-type: none"> Ignition switch ON Ignition switch OFF (For a few seconds after turning ignition switch OFF) 	Battery voltage
54 (G/W)	Ground	Throttle control motor relay power supply	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	0 V
				<ul style="list-style-type: none"> Ignition switch ON Ignition switch OFF (For a few seconds after turning ignition switch OFF) 	Battery voltage
55 (W/L)	Ground	ECM power supply	Output	Ignition switch OFF	Battery voltage
56 (R/Y)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
57 (O)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
58 (Y)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage
69 (W/B)	Ground	ECM relay control	Output	Ignition switch OFF (More than a few seconds after turning ignition switch OFF)	Battery voltage
				<ul style="list-style-type: none"> Ignition switch ON Ignition switch OFF (For a few seconds after turning ignition switch OFF) 	0 - 1.5 V
70 (O)	Ground	Throttle control motor relay control	Output	Ignition switch ON → OFF	0 - 1.0 V ↓ Battery voltage ↓ 0 V
				Ignition switch ON	0 - 1.0 V
72 (R/B)	Ground	Starter relay control	Input	Ignition switch ON	0 V
				Selector lever in any position other than P or N	Battery voltage
74 (Y)	Ground	Ignition relay power supply	Output	Ignition switch OFF	0 V
				Ignition switch ON	Battery voltage

A

B

C

D

E

F

G

H

I

J

K

WW

M




N

O

P

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

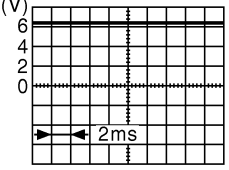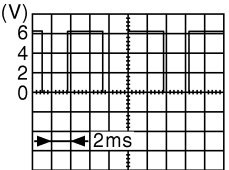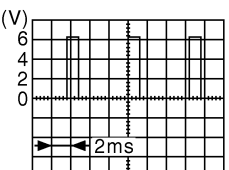Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
75 (P/L)	Ground	Oil pressure switch	Input	Ignition switch ON	Engine stopped	0 V
					Engine running	Battery voltage
76 (SB)	Ground	Power generation command signal	Output	Ignition switch ON		 <p style="text-align: right;">JPMIA0001GB</p> <p style="text-align: center;">6.3 V</p>
				40% is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE"		 <p style="text-align: right;">JPMIA0002GB</p> <p style="text-align: center;">3.8 V</p>
				80% is set on "ACTIVE TEST", "ALTERNATOR DUTY" of "ENGINE"		 <p style="text-align: right;">JPMIA0003GB</p> <p style="text-align: center;">1.4 V</p>
77 (GR)	Ground	Fuel pump relay control	Output	<ul style="list-style-type: none"> Approximately 1 second after turning the ignition switch ON Engine running 		0 - 1.5 V
				Approximately 1 second or more after turning the ignition switch ON		Battery voltage
80 (B/W)	Ground	Starter motor	Output	At engine cranking		Battery voltage
83 (Y)	Ground	Headlamp LO (RH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 2ND	Battery voltage
84 (SB)	Ground	Headlamp LO (LH)	Output	Ignition switch ON	Lighting switch OFF	0 V
					Lighting switch 2ND	Battery voltage
86 (L)	Ground	Front fog lamp (RH)	Output	Lighting switch 2ND	<ul style="list-style-type: none"> Front fog lamp switch ON Daytime running light activated (Only for Canada) 	Battery voltage
					Front fog lamp switch OFF	0 V
87 (R)	Ground	Front fog lamp (LH)	Output	Lighting switch 2ND	<ul style="list-style-type: none"> Front fog lamp switch ON Daytime running light activated (Only for Canada) 	Battery voltage
					Front fog lamp switch OFF	0 V

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

Terminal No. (Wire color)		Description		Condition		Value (Approx.)
+	-	Signal name	Input/ Output			
88 (P)	Ground	Washer pump power supply	Output	Ignition switch ON		Battery voltage
89 (W)	Ground	Headlamp HI (RH)	Output	Ignition switch ON	• Lighting switch HI • Lighting switch PASS	Battery voltage
					Lighting switch OFF	0 V
90 (O)	Ground	Headlamp HI (LH)	Output	Ignition switch ON	• Lighting switch HI • Lighting switch PASS	Battery voltage
					Lighting switch OFF	0 V
91 (O)	Ground	Parking lamp (RH)	Output	Ignition switch ON	Lighting switch 1ST	Battery voltage
					Lighting switch OFF	0 V
92 (L)	Ground	Parking lamp (LH)	Output	Ignition switch ON	Lighting switch 1ST	Battery voltage
					Lighting switch OFF	0 V
93 (BR)	Ground	Headlamp aiming motor (RH)	Output	Ignition switch ON	Lighting switch 1ST	Battery voltage
					Lighting switch OFF	0 V
94 (Y)	Ground	Headlamp aiming motor (LH)	Output	Ignition switch ON	Lighting switch 1ST	Battery voltage
					Lighting switch OFF	0 V
99 (W)	Ground	Ambient sensor ground	Input	Ignition switch ON		0 V
100 (SB)	Ground	Ambient sensor	Output	Ignition switch ON NOTE: Changes depending to ambient temperature		<p>JSNIA0014GB</p>
101 (GR)	Ground	Refrigerant pressure sensor ground	Input	Engine running	• Warm-up condition • Idle speed	0 V
102 (R)	Ground	Refrigerant pressure sensor	Input	Engine running	• Warm-up condition • Both A/C switch and blower fan motor switch ON (Compressor operates)	1.0 - 4.0 V
103 (P)	Ground	Refrigerant pressure sensor power supply	Output	Ignition switch OFF		0 V
				Ignition switch ON		5.0 V
104 (LG)	Ground	Hood switch	Output	Close the hood		Battery voltage
				Open the hood		0 V

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P


WW

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

Wiring Diagram - IPDM E/R -

INFOID:000000003941303

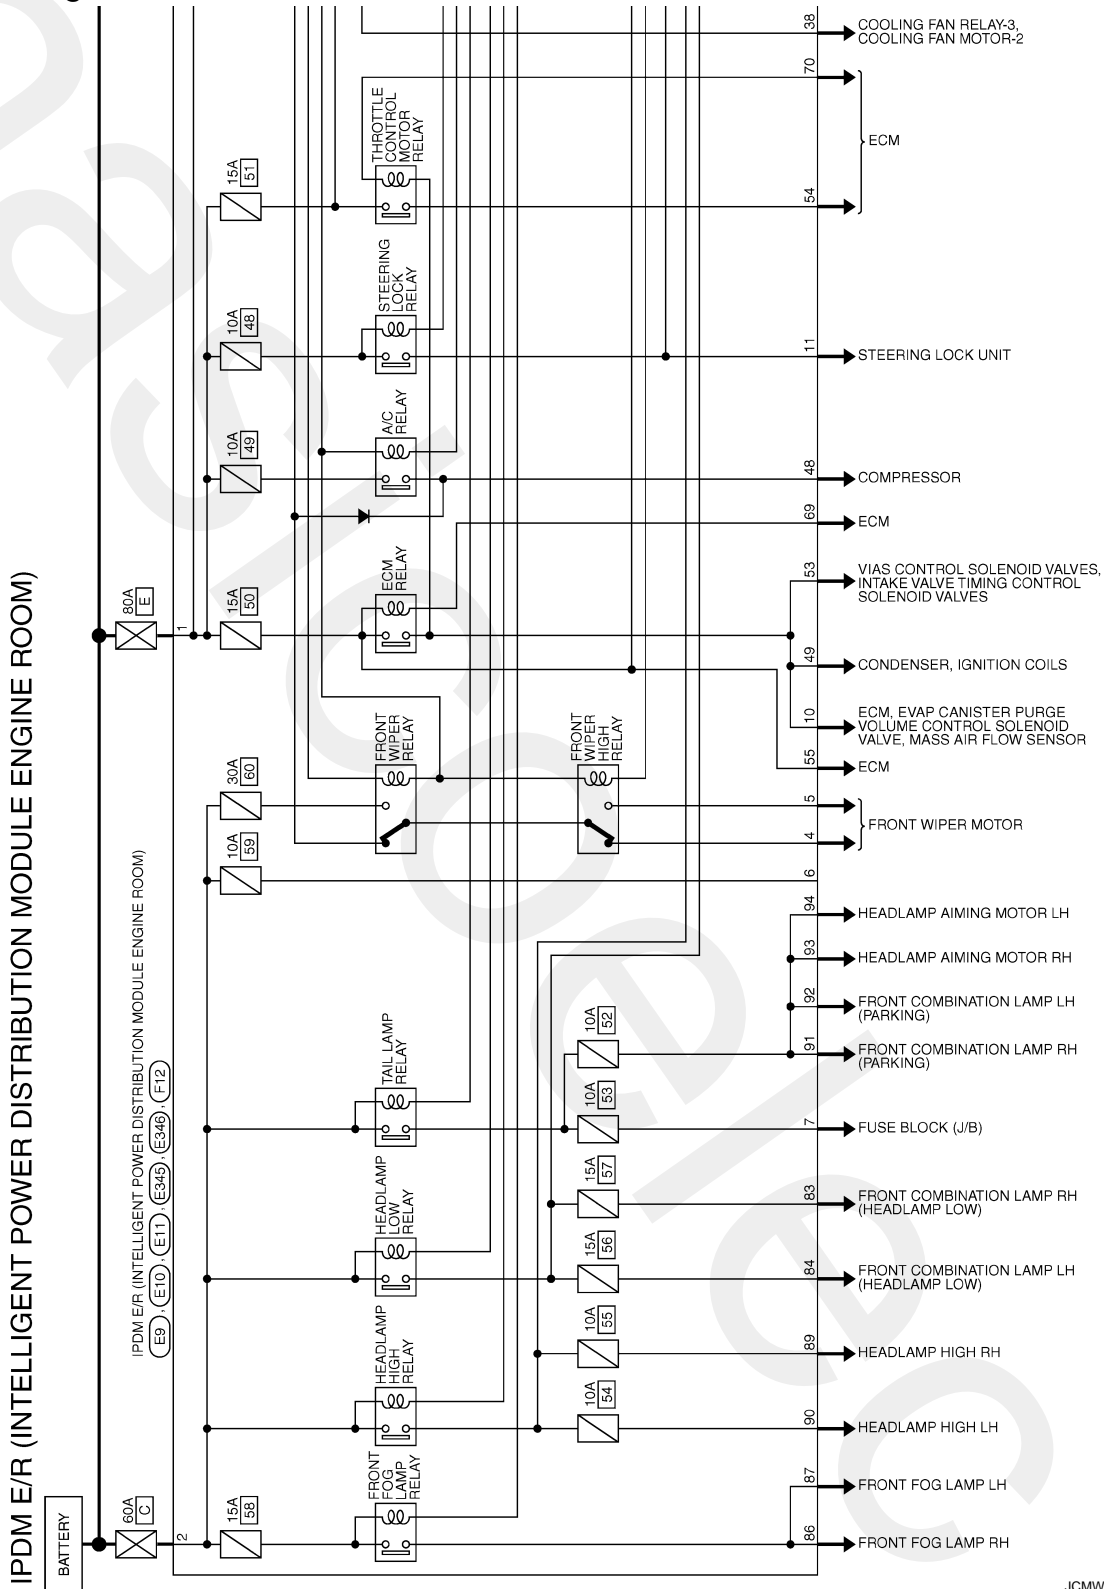


2008/01/23

JCMWM1682G

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

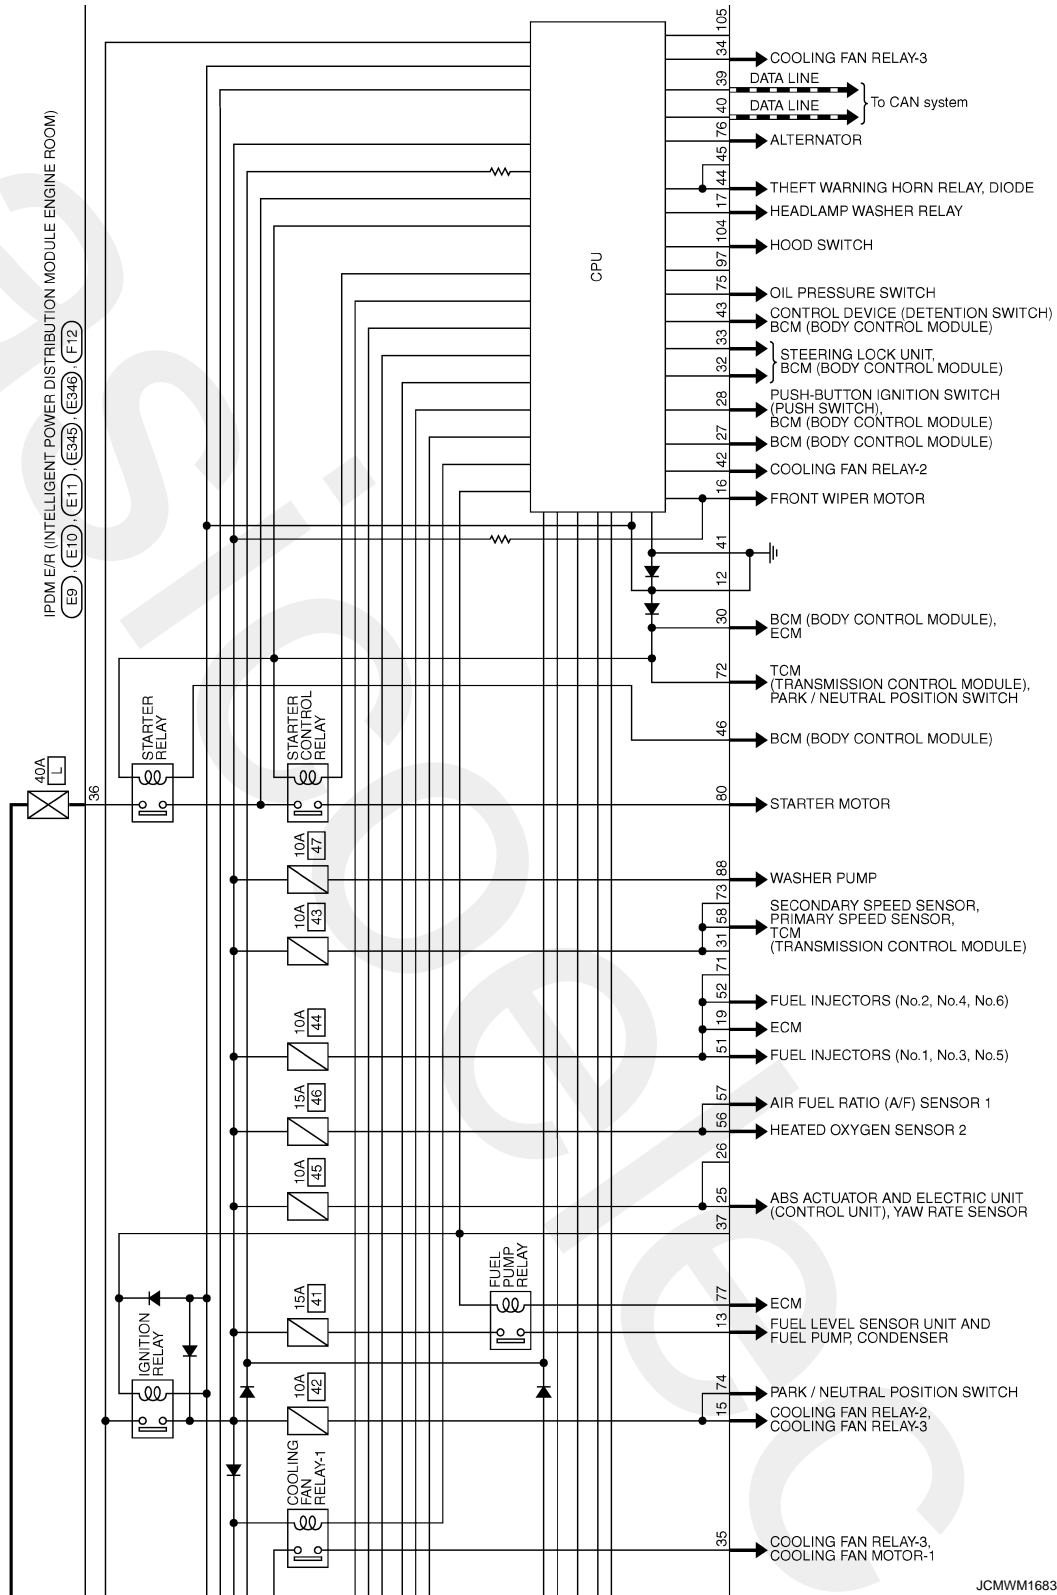

JCMWM1683GI


A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

IPDM E/R
(INTELLIGENT POWER
DISTRIBUTION MODULE
ENGINE ROOM)
(E9) (E10) (E11)
(E345) (E349) (F12)

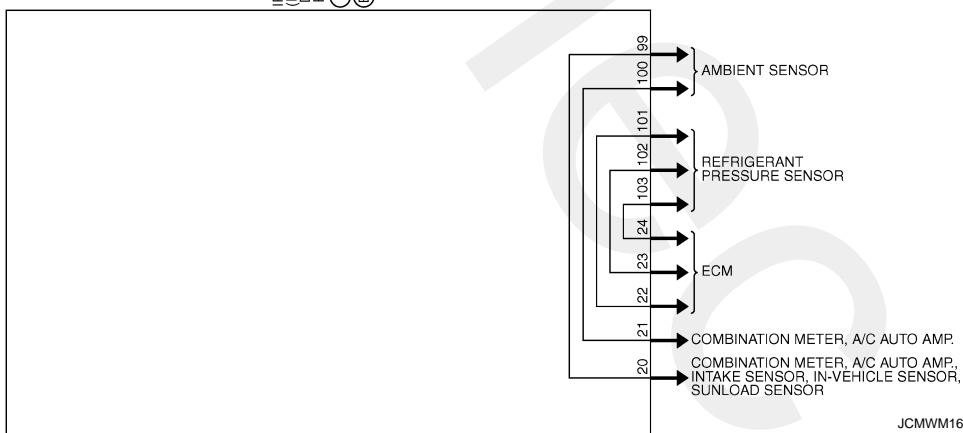

JCMWM1684G

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >


IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

Connector No.	E9
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	LOPE-MC



Terminal No.	Color of Wire	Signal Name [Specification]
1	R	
2	L	

Connector No.	E10
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	TH2JPFV-CS12-M4-1V




Terminal No.	Color of Wire	Signal Name [Specification]
4	LG	
5	Y	
7	GR	
10	BR	
11	P	
12	B/W	
13	SB	
15	W	
16	R	
17	V	
19	Y	

20	B	
21	O	
22	SB	
23	GR	
24	G	
25	GR	
27	W	
28	SB	
30	BR	
32	V	
33	G	
34	O	
35	P	
36	G	
38	GR	



Terminal No.	Color of Wire	Signal Name [Specification]
39	P	
40	L	
41	B	
42	SB	
43	Y	
44	G	
46	BR	

Connector No.	E345
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	NS2BFW-CS



Terminal No.	Color of Wire	Signal Name [Specification]
83	Y	
84	SB	
86	L	
87	R	
88	P	
89	W	
90	O	

Connector No.	E346
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	TH1BFW-NH



Terminal No.	Color of Wire	Signal Name [Specification]
91	O	
92	L	
93	BR	
94	Y	
99	W	
100	SB	
101	GR	
102	R	
103	P	
104	LG	

Connector No.	F12
Connector Name	IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)
Connector Type	TH2JPFV-CS12-M4



Terminal No.	Color of Wire	Signal Name [Specification]
48	Y/R	
49	R/B	
51	LG	
52	Y/G	
53	R/W	
54	G/W	
55	W/L	
56	R/Y	
57	O	
58	Y	
69	W/B	

Fail-safe

CAN COMMUNICATION CONTROL

When CAN communication with ECM and BCM is impossible, IPDM E/R performs fail-safe control. After CAN communication recovers normally, it also returns to normal control.

If No CAN Communication Is Available With ECM

JCMWM1685G1

INFOID:000000003941304

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P



IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

Control part	Fail-safe operation
Cooling fan	<ul style="list-style-type: none"> • Turns ON the cooling fan relay-2 and the cooling fan relay-3 when ignition switch is turned ON (Cooling fan operates at HI) • Turns OFF the cooling fan relay-1, the cooling fan relay-2 and the cooling fan relay-3 when the ignition switch is turned OFF (Cooling fan does not operate)
A/C compressor	A/C relay OFF
Alternator	Outputs the power generation command signal (PWM signal) 0%

If No CAN Communication Is Available With BCM

Control part	Fail-safe operation
Headlamp	<ul style="list-style-type: none"> • Turns ON the headlamp low relay when the ignition switch is turned ON • Turns OFF the headlamp low relay when the ignition switch is turned OFF • Headlamp high relay OFF
<ul style="list-style-type: none"> • Parking lamps • License plate lamps • Illuminations • Tail lamps 	<ul style="list-style-type: none"> • Turns ON the tail lamp relay when the ignition switch is turned ON • Turns OFF the tail lamp relay when the ignition switch is turned OFF
Front wiper	<ul style="list-style-type: none"> • The status just before activation of fail-safe control is maintained until the ignition switch is turned OFF while the front wiper is operating at LO or HI speed. • The wiper is operated at LO speed until the ignition switch is turned OFF if the fail-safe control is activated while the front wiper is set in the INT mode and the front wiper motor is operating.
Front fog lamps	Front fog lamp relay OFF
Horn	Horn OFF
Ignition relay	The status just before activation of fail-safe is maintained.
Starter motor	Starter control relay OFF
Steering lock unit	Steering lock relay OFF
Headlamp washer relay	Headlamp washer relay OFF

IGNITION RELAY MALFUNCTION DETECTION FUNCTION

- IPDM E/R monitors the voltage at the contact circuit and excitation coil circuit of the ignition relay inside it.
- IPDM E/R judges the ignition relay error if the voltage differs between the contact circuit and the excitation coil circuit.
- If the ignition relay cannot turn OFF due to contact seizure, it activates the tail lamp relay for 10 minutes to alert the user to the ignition relay malfunction when the ignition switch is turned OFF.

Voltage judgment		IPDM E/R judgment	Operation
Ignition relay contact side	Ignition relay excitation coil side		
ON	ON	Ignition relay ON normal	—
OFF	OFF	Ignition relay OFF normal	—
ON	OFF	Ignition relay ON stuck	<ul style="list-style-type: none"> • Detects DTC "B2098: IGN RELAY ON" • Turns ON the tail lamp relay for 10 minutes
OFF	ON	Ignition relay OFF stuck	Detects DTC "B2099: IGN RELAY OFF"

FRONT WIPER CONTROL

IPDM E/R detects front wiper stop position by a front wiper auto stop signal.

When a front wiper auto stop signal is in the conditions listed below, IPDM E/R stops power supply to wiper after repeating a front wiper 10 seconds activation and 20 seconds stop five times.

IPDM E/R (INTELLIGENT POWER DISTRIBUTION MODULE ENGINE ROOM)

< ECU DIAGNOSIS >

Ignition switch	Front wiper switch	Front wiper auto stop signal
ON	OFF	The front wiper auto stop signal (stop position) cannot be input for 10 seconds.
	ON	The front wiper auto stop signal does not change for 10 seconds.

NOTE:

This operation status can be confirmed on the IPDM E/R “Data Monitor” that displays “BLOCK” for the item “WIP PROT” while the wiper is stopped.

STARTER MOTOR PROTECTION FUNCTION

IPDM E/R turns OFF the starter control relay to protect the starter motor when the starter control relay remains active for 90 seconds.

DTC Index

INFOID:000000003941305

NOTE:

- The details of time display are as follows.
 - CRNT: A malfunction is detected now
 - PAST: A malfunction was detected in the past.
- IGN counter is displayed on FFD (Freeze Frame data).
 - The number is 0 when is detected now
 - The number increases like 1 → 2 ... 38 → 39 after returning to the normal condition whenever IGN OFF → ON.
 - The number is fixed to 39 until the self-diagnosis results are erased if it is over 39.

x: Applicable

CONSULT display	Fail-safe	Refer to
No DTC is detected. further testing may be required.	—	—
U1000: CAN COMM CIRCUIT	x	PCS-16
B2098: IGN RELAY ON	x	PCS-17
B2099: IGN RELAY OFF	—	PCS-18
B2108: STRG LCK RELAY ON	—	SEC-96
B2109: STRG LCK RELAY OFF	—	SEC-97
B210A: STRG LCK STATE SW	—	SEC-98
B210B: START CONT RLY ON	—	SEC-102
B210C: START CONT RLY OFF	—	SEC-103
B210D: STARTER RELAY ON	—	SEC-104
B210E: STARTER RELAY OFF	—	SEC-105
B210F: INTRLCK/PNP SW ON	—	SEC-107
B2110: INTRLCK/PNP SW OFF	—	SEC-109

FRONT WIPER AND WASHER SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

SYMPTOM DIAGNOSIS

FRONT WIPER AND WASHER SYSTEM SYMPTOMS

Symptom Table

INFOID:000000003774629

CAUTION:

Perform the self-diagnosis with CONSULT-III before performing the diagnosis by symptom. Perform the diagnosis by DTC if DTC is detected.

Symptom	Probable malfunction location	Inspection item	
Front wiper does not operate.	HI only	<ul style="list-style-type: none"> Combination switch Harness between combination switch and BCM BCM 	Combination switch Refer to BCS-76, "Symptom Table" .
		<ul style="list-style-type: none"> IPDM E/R Harness between IPDM E/R and front wiper motor Front wiper motor 	Front wiper motor (HI) circuit Refer to WW-25, "Component Function Check" .
		Front wiper request signal <ul style="list-style-type: none"> BCM IPDM E/R 	IPDM E/R DATA MONITOR "FR WIP REQ"
	LO and INT	<ul style="list-style-type: none"> Combination switch Harness between combination switch and BCM BCM 	Combination switch Refer to BCS-76, "Symptom Table" .
		<ul style="list-style-type: none"> IPDM E/R Harness between IPDM E/R and front wiper motor Front wiper motor 	Front wiper motor (LO) circuit Refer to WW-23, "Component Function Check" .
		Front wiper request signal <ul style="list-style-type: none"> BCM IPDM E/R 	IPDM E/R DATA MONITOR "FR WIP REQ"
	INT only	<ul style="list-style-type: none"> Combination switch Harness between combination switch and BCM BCM 	Combination switch Refer to BCS-76, "Symptom Table" .
		Front wiper request signal <ul style="list-style-type: none"> BCM IPDM E/R 	IPDM E/R DATA MONITOR "FR WIP REQ"
	HI, LO and INT	SYMPTOM DIAGNOSIS "FRONT WIPER DOES NOT OPERATE" Refer to WW-93, "Diagnosis Procedure" .	

FRONT WIPER AND WASHER SYSTEM SYMPTOMS

< SYMPTOM DIAGNOSIS >

Symptom	Probable malfunction location	Inspection item	
Front wiper does not stop.	HI only	<ul style="list-style-type: none"> Combination switch BCM 	Combination switch Refer to BCS-76, "Symptom Table" .
		<ul style="list-style-type: none"> Front wiper request signal BCM IPDM E/R 	IPDM E/R DATA MONITOR "FR WIP REQ"
		IPDM E/R	—
	LO only	<ul style="list-style-type: none"> Combination switch BCM 	Combination switch Refer to BCS-76, "Symptom Table" .
		<ul style="list-style-type: none"> Front wiper request signal BCM IPDM E/R 	IPDM E/R DATA MONITOR "FR WIP REQ"
		IPDM E/R	—
	INT only	<ul style="list-style-type: none"> Combination switch BCM 	Combination switch Refer to BCS-76, "Symptom Table" .
		<ul style="list-style-type: none"> Front wiper request signal BCM IPDM E/R 	IPDM E/R DATA MONITOR "FR WIP REQ"
	Front wiper does not operate normally.	Intermittent adjustment cannot be performed.	<ul style="list-style-type: none"> Combination switch Harness between combination switch and BCM BCM
BCM			—
Intermittent control linked with vehicle speed cannot be performed.		Check the vehicle speed detection wiper setting. Refer to WW-13, "WIPER : CONSULT-III Function (BCM - WIPER)" . NOTE: Factory setting of the front wiper intermittent operation is the operation without vehicle speed.	
Wiper is not linked to the washer operation.		<ul style="list-style-type: none"> Combination switch Harness between combination switch and BCM BCM 	Combination switch Refer to BCS-76, "Symptom Table" .
		BCM	—
Does not return to stop position [Repeatedly operates for 10 seconds and then stops for 20 seconds. After that, it stops the operation. (Fail-safe)]	<ul style="list-style-type: none"> IPDM E/R Harness between IPDM E/R and front wiper motor Front wiper motor 	Front wiper auto stop signal circuit Refer to WW-27, "Component Function Check" .	
Headlamp washer does not operate.	<ul style="list-style-type: none"> Combination switch Harness between combination switch and BCM BCM Headlamp washer pump 	Combination switch Refer to BCS-76, "Symptom Table" .	
		<ul style="list-style-type: none"> Fusible link Harness between fusible link and headlamp washer relay Headlamp washer relay Harness between headlamp washer relay and IPDM E/R IPDM E/R Harness between headlamp washer relay and headlamp washer pump Harness between headlamp washer pump and ground Headlamp washer pump 	Headlamp washer circuit Refer to WW-32, "Component Function Check" .
	BCM	—	

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

NORMAL OPERATING CONDITION

< SYMPTOM DIAGNOSIS >

NORMAL OPERATING CONDITION

Description

INFOID:000000003761617

FRONT WIPER MOTOR PROTECTION FUNCTION

- IPDM E/R may stop the front wiper to protect the front wiper motor if any obstruction (operation resistance) such as a large amount of snow is detected during the front wiper operation.
- At that time turn OFF the front wiper and remove the foreign object. Then wait for approximately 20 seconds or more and reactivate the front wiper. The wiper will operate normally.

FRONT WIPER DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

FRONT WIPER DOES NOT OPERATE

Description

INFOID:000000003761613

The front wiper does not operate under any operating conditions.

Diagnosis Procedure

INFOID:000000003761614

1. CHECK WIPER RELAY OPERATION

IPDM E/R AUTO ACTIVE TEST

1. Start IPDM E/R auto active test. Refer to [PCS-11, "Diagnosis Description"](#).
2. Check that the front wiper operates at the LO/Hi operation.

CONSULT-III ACTIVE TEST

1. Select "FRONT WIPER" of IPDM E/R active test item.
2. With operating the test item, check front wiper operation.

Lo : Front wiper LO operation

Hi : Front wiper HI operation

Off : Stop the front wiper.

Is front wiper operation normally?

YES >> GO TO 5.

NO >> GO TO 2.

2. CHECK FRONT WIPER MOTOR FUSE

1. Turn the ignition switch OFF.
2. Check that the front wiper motor 30A (#60) fuse is not fusing.

Is the fuse fusing?

YES >> Replace the fuse after repairing the applicable circuit.

NO >> GO TO 3.

3. CHECK FRONT WIPER MOTOR (GND) OPEN CIRCUIT

1. Disconnect front wiper motor connector.
2. Check continuity between front wiper motor harness connector and ground.

Front wiper motor		Ground	Continuity
Connector	Terminal		Existed
E12	2		

Does continuity exist?

YES >> GO TO 4.

NO >> Repair the harness or connector.

4. CHECK FRONT WIPER MOTOR OUTPUT VOLTAGE

CONSULT-III ACTIVE TEST

1. Disconnect front wiper motor connector.
2. Turn the ignition switch ON.
3. Select "FRONT WIPER" of IPDM E/R active test item.
4. With operating the test item, check voltage between IPDM E/R harness connector and ground.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

FRONT WIPER DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

Terminals		Test item	Voltage (Approx.)		
(+)	(-)				
IPDM E/R		FRONT WIPER			
Connector	Terminal				
E10	4			Lo	Battery voltage
	5			Off	0 V
Ground		Hi	Battery voltage		
		Off	0 V		

Is the measurement normal?

- YES >> Replace front wiper motor.
 NO >> Replace IPDM E/R.

5.CHECK FRONT WIPER REQUEST SIGNAL INPUT

ⓐCONSULT-III DATA MONITOR

1. Select "FR WIP REQ" of IPDM E/R data monitor item.
2. Switch the front wiper switch to HI and LO.
3. With operating the front wiper switch, check the monitor status.

Monitor item	Condition	Monitor status	
FR WIPER REQ	Front wiper switch HI	ON	Hi
		OFF	Stop
	Front wiper switch LO	ON	Low
		OFF	Stop

Is the status of item normal?

- YES >> Replace IPDM E/R.
 NO >> GO TO 6.

6.CHECK COMBINATION SWITCH

Perform the inspection of the combination switch. Refer to [BCS-76. "Symptom Table"](#).

Is combination switch normal?

- YES >> Replace BCM. Refer to [BCS-78. "Exploded View"](#).
 NO >> Repair or replace the applicable parts.

HEADLAMP WASHER DOES NOT OPERATE

< SYMPTOM DIAGNOSIS >

HEADLAMP WASHER DOES NOT OPERATE

Description

INFOID:000000003774630

Headlamp washer does not operate linked to front washer operation.

Diagnosis Procedure

INFOID:000000003774631

1. CHECK IPDM E/R

CONSULT-III DATA MONITOR

1. Turn the lighting switch 2ND.
2. Select "HL WASHER REQ" of IPDM E/R data monitor item.
3. Operate the headlamp washer.
4. Check the status of "HL WASHER REQ".

Monitor item	Condition	Monitor status
HL WASHER REQ	Headlamp washer	Operating On
		Stopped Off

Is the status of item normal?

- YES >> Refer to [WW-32, "Component Function Check"](#).
NO >> GO TO 2.

2. CHECK COMBINATION SWITCH

Perform the inspection of the combination switch. Refer to [BCS-76, "Symptom Table"](#).

Is combination switch normal?

- YES >> Replace BCM. Refer to [BCS-78, "Exploded View"](#).
NO >> Repair or replace the applicable parts.

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW

PRECAUTIONS

< PRECAUTION >

PRECAUTION

PRECAUTIONS

Precaution for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

INFOID:000000003761618

The Supplemental Restraint System such as "AIR BAG" and "SEAT BELT PRE-TENSIONER", used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the "SRS AIRBAG" and "SEAT BELT" of this Service Manual.


WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the "SRS AIRBAG".
- Never use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Precaution for Procedure without Cowl Top Cover

INFOID:000000003761619

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc.

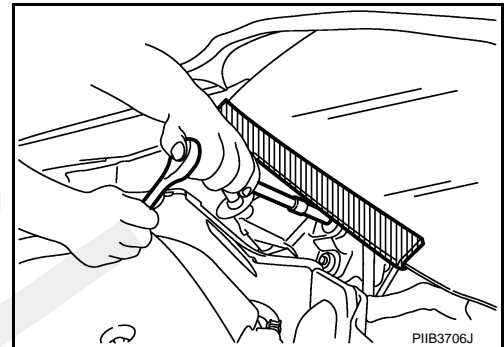

HEADLAMP WASHER NOZZLE AND TUBE


< ON-VEHICLE REPAIR >

ON-VEHICLE REPAIR

HEADLAMP WASHER NOZZLE AND TUBE

Exploded View


INFOID:000000003761621

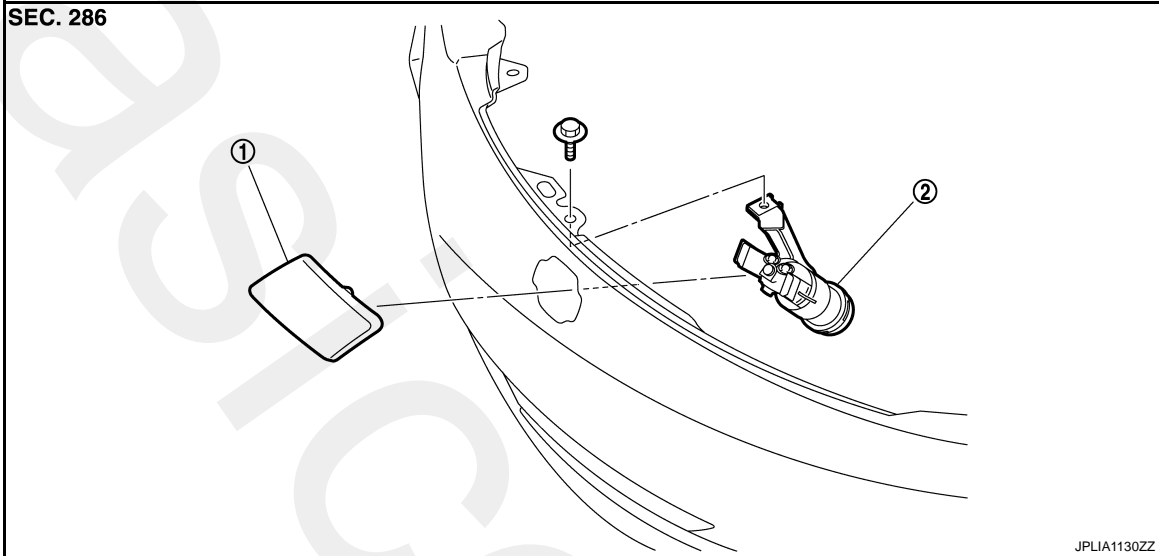

1. Headlamp washer nozzle cover
2. Headlamp washer nozzle assembly

Hydraulic Layout

INFOID:000000003761622

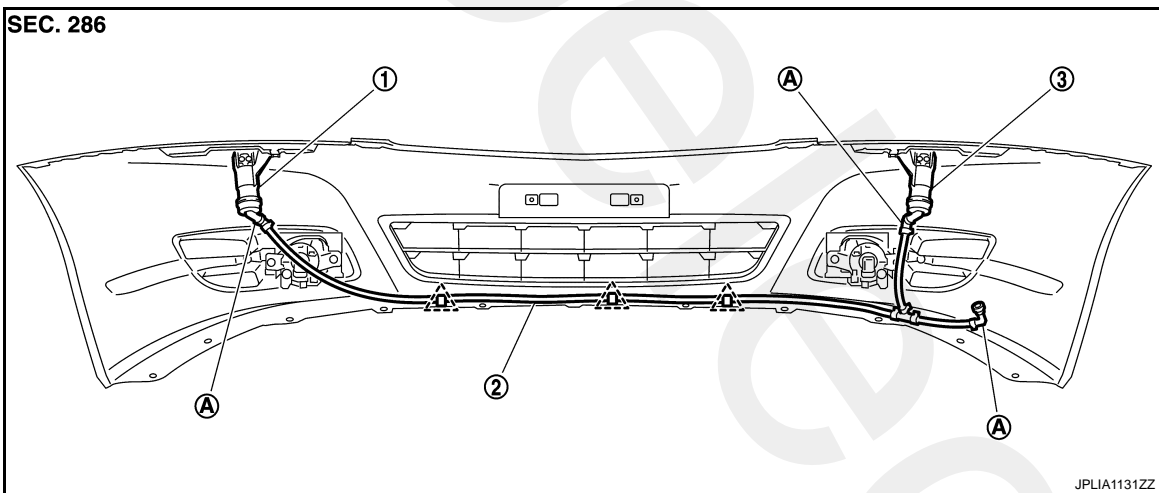

1. Headlamp washer nozzle assembly (LH)
 2. Headlamp washer tube
 3. Headlamp washer nozzle assembly (RH)
- A. Headlamp washer tube joint

△ : Clip

Removal and Installation


INFOID:000000003761623

REMOVAL

HEADLAMP WASHER NOZZLE AND TUBE

< ON-VEHICLE REPAIR >

1. Push pawl (A), and remove the headlamp washer nozzle cover (1).
2. Remove the front bumper fascia. Refer to [EXT-11. "Exploded View"](#).
3. Disconnect the headlamp washer tube from the headlamp washer nozzle assembly.
4. Remove the headlamp washer nozzle mounting bolt.
5. Remove the headlamp washer nozzle assembly from the front bumper fascia.

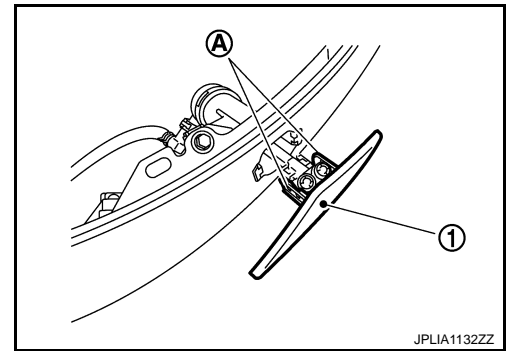

INSTALLATION


Install in the reverse order of removal.

Inspection

INFOID:000000003761624

HEADLAMP WASHER NOZZLE SPRAY POSITION INSPECTION

Check that the headlamp washer injection is certainly on the headlamp illuminating area. If the injection is out of the area, check the headlamp washer tube and headlamp washer nozzle leakages.

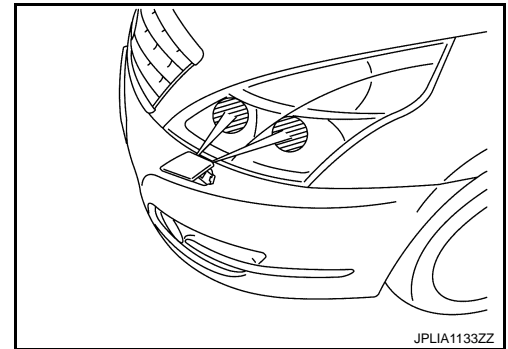


WASHER TANK

< ON-VEHICLE REPAIR >

WASHER TANK

Exploded View

INFOID:000000003761625

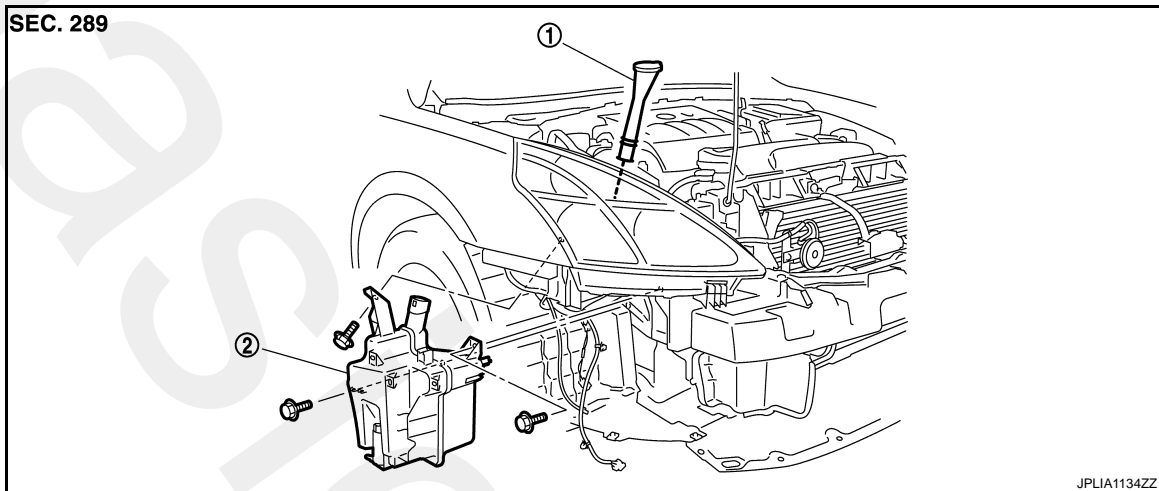

1. Washer tank inlet

2. Washer tank

Removal and Installation

INFOID:000000003761626

REMOVAL

1. Pull out the washer tank inlet from the washer tank.
2. Remove the front bumper fascia. Refer to [EXT-11, "Exploded View"](#).
3. Disconnect the washer pump connector.
4. Disconnect the headlamp washer pump connector.
5. Disconnect the washer tube.
6. Disconnect the headlamp washer tube.
7. Remove the washer tank mounting bolts.
8. Remove the washer tank from the vehicle.

INSTALLATION

Install in the reverse order of removal.

CAUTION:

Add water up to the top of the washer tank inlet after installing. Check that there is no leakage.

A

B

C

D

E

F

G

H

I

J

K

WW

M

N

O

P


WASHER PUMP

< ON-VEHICLE REPAIR >

WASHER PUMP

Exploded View

INFOID:000000003761627

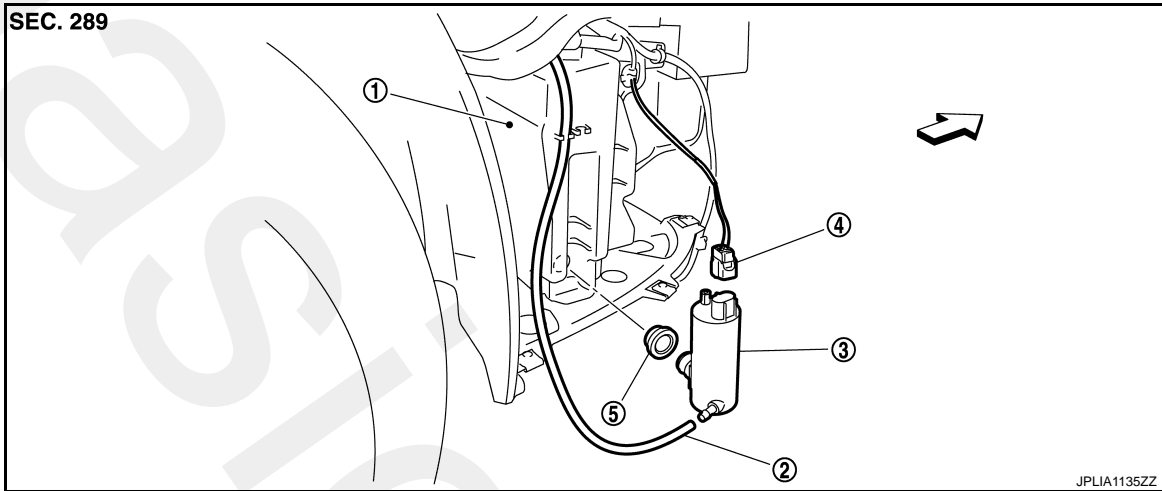

- | | | |
|--------------------------|----------------|----------------|
| 1. Washer tank | 2. Washer tube | 3. Washer pump |
| 4. Washer pump connector | 5. Packing | |

⇨ : Vehicle front

Removal and Installation

INFOID:000000003761628

REMOVAL

1. Remove the fender protector RH (front). Refer to [EXT-22, "FENDER PROTECTOR : Exploded View"](#).
2. Disconnect the washer pump connector.
3. Disconnect the washer tube.
4. Remove the washer pump from the washer tank.
5. Remove the packing from the washer tank.

INSTALLATION

Install in the reverse order of removal.

CAUTION:

Never twist the packing when installing the washer pump.


HEADLAMP WASHER PUMP

< ON-VEHICLE REPAIR >

HEADLAMP WASHER PUMP

Exploded View

INFOID:000000003761629

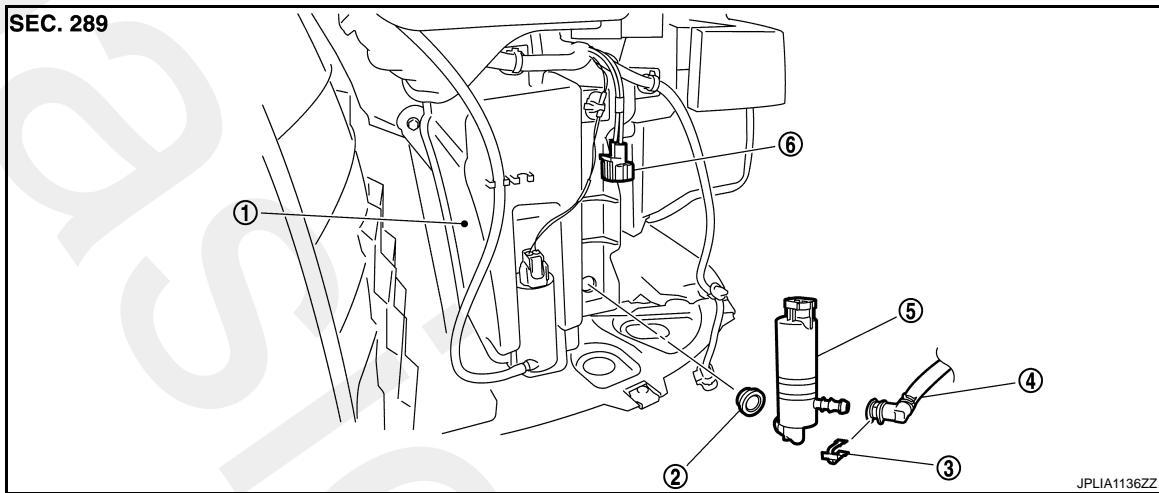

- | | | |
|-------------------------|-------------------------|-----------------------------------|
| 1. Washer tank | 2. Packing | 3. Clip |
| 4. Headlamp washer tube | 5. Headlamp washer pump | 6. Headlamp washer pump connector |

Removal and Installation

INFOID:000000003761630

REMOVAL

1. Remove the fender protector RH (front). Refer to [EXT-22, "FENDER PROTECTOR : Exploded View"](#).
2. Disconnect the headlamp washer pump connector.
3. Disconnect the headlamp washer tube.
4. Remove the headlamp washer pump from the washer tank.
5. Remove the packing from the washer tank.

INSTALLATION

Install in the reverse order of removal.

CAUTION:

Never twist the packing when installing the headlamp washer pump.

A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P

WW


FRONT WASHER NOZZLE AND TUBE

< ON-VEHICLE REPAIR >

FRONT WASHER NOZZLE AND TUBE

Hydraulic Layout

INFOID:000000003761632

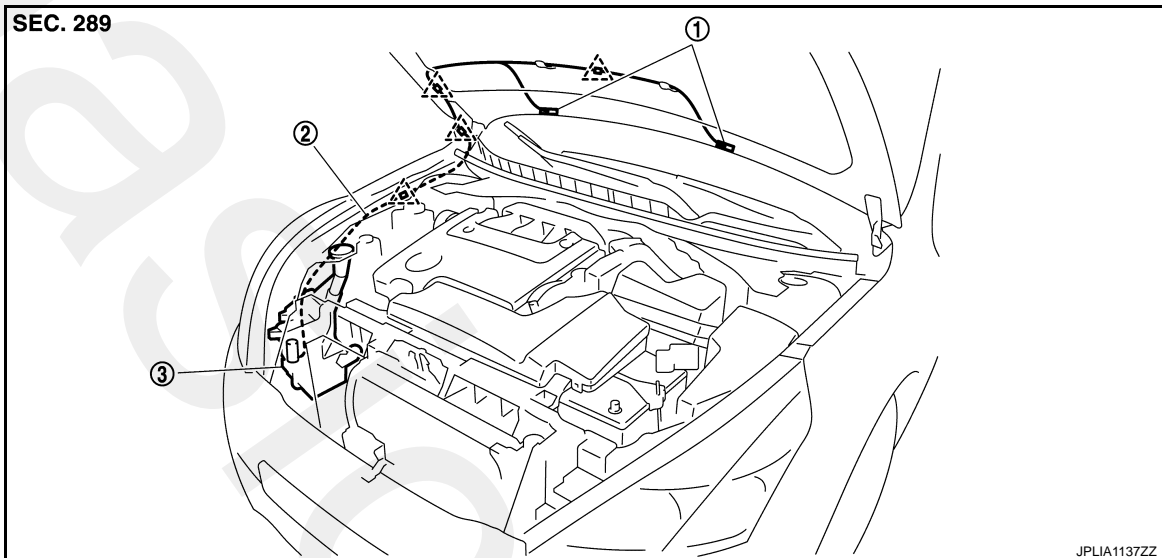

1. Washer nozzle

2. Washer tube

3. Washer tank

: Clip

Removal and Installation


INFOID:000000003761633

REMOVAL

1. Open the hood.
2. Remove the washer nozzle in numerical order shown in the figure.

: Vehicle front

3. Disconnect the washer tube from the washer nozzle.

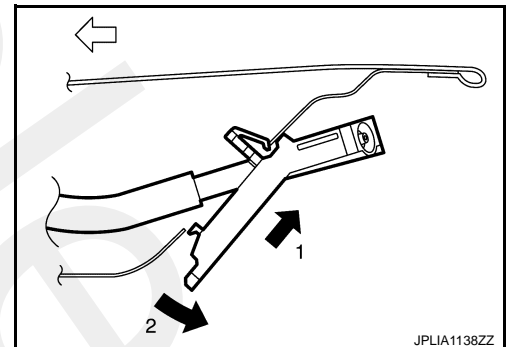

INSTALLATION

1. Connect the washer tube into the washer nozzle.
2. Fix the pawl-side behind the washer nozzle first, then push the resin clip-side.
3. Adjust the washer nozzle spray position. Refer to [WW-102, "Inspection and Adjustment"](#).

CAUTION:

The spray positions differ. Check that left and right nozzles are installed correctly.

Inspection and Adjustment

INFOID:000000003761634


INSPECTION

Washer Nozzle Inspection

FRONT WASHER NOZZLE AND TUBE

< ON-VEHICLE REPAIR >


Check that air can pass through the hose by blowing forward (toward the nozzle), and check that air cannot pass through by sucking.

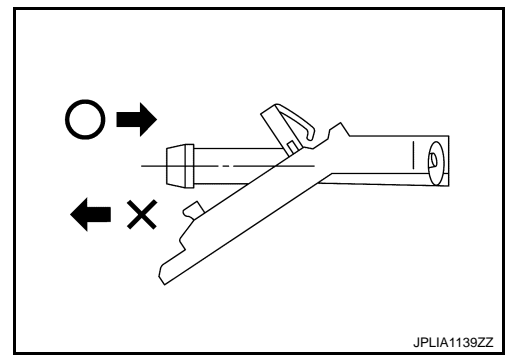

ADJUSTMENT


Washer Nozzle Spray Position Adjustment

Adjust spray positions to match the positions shown in the figure.

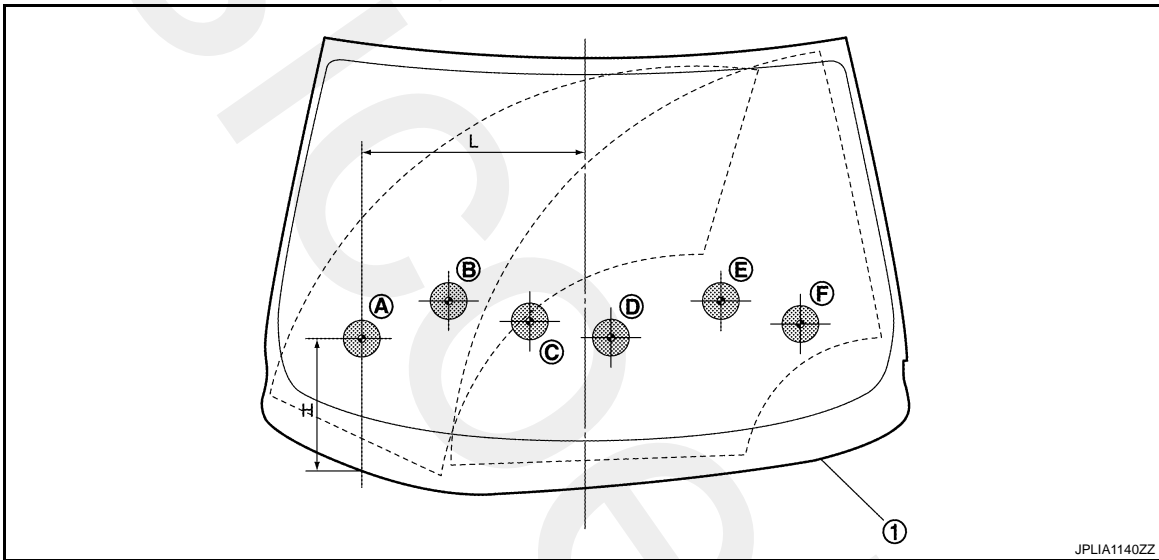

1. End of cowl top cover

 : Spray area

 : Target spray position

Unit: mm (in)

Spray position	H (Height)	L (Width)	Spray area
A	293.2 (11.54)	490.7 (19.32)	φ 80 (3.15)
B	422.0 (16.61)	298.6 (11.76)	φ 80 (3.15)
C	376.2 (14.81)	121.5 (4.78)	φ 80 (3.15)
D	327.9 (12.91)	56.3 (2.22)	φ 80 (3.15)
E	383.1 (15.08)	300 (11.81)	φ 80 (3.15)
F	305.7 (12.04)	475.1 (18.70)	φ 80 (3.15)

A
B
C
D
E
F
G
H
I
J
K
M
N
O
P

WW


FRONT WASHER NOZZLE AND TUBE

< ON-VEHICLE REPAIR >

Insert a needle or similar object (A) into the spray opening (1) and move up/down and left/right to adjust the spray position.

NOTE:

If wax or dust gets into the nozzle, remove wax or dust with a needle or small pin.

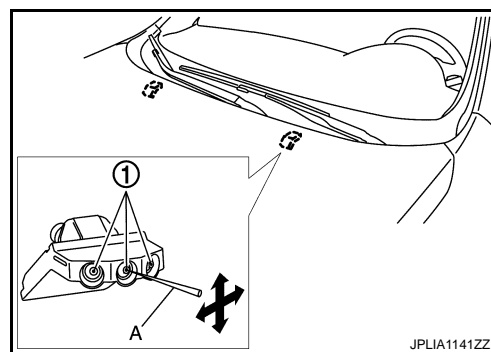


FRONT WIPER ARM

< ON-VEHICLE REPAIR >

FRONT WIPER ARM

Exploded View

INFOID:000000003761635

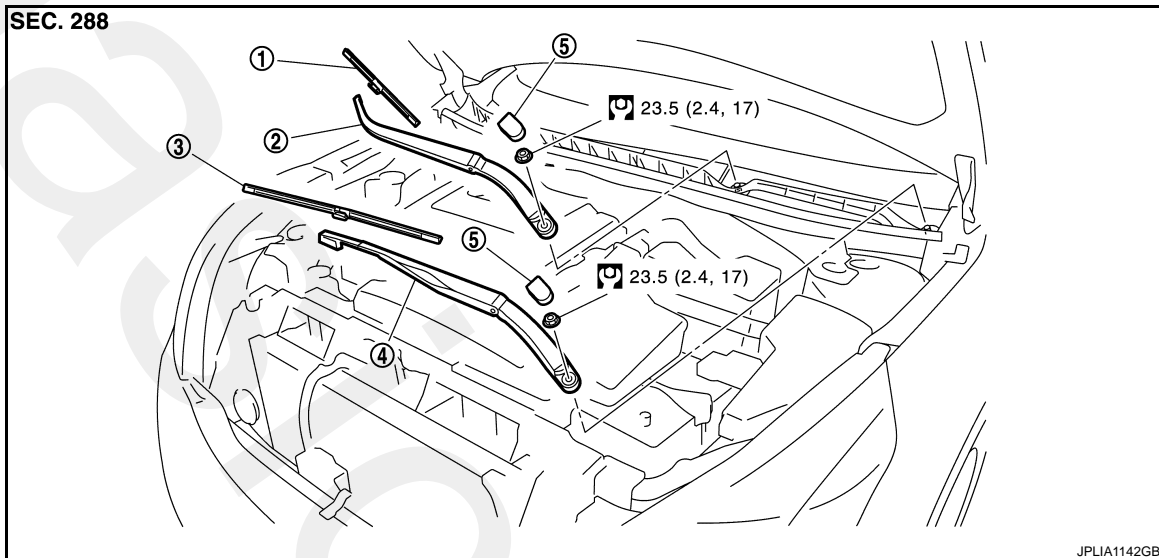

- 1. Wiper blade (RH)
- 2. Wiper arm (RH)
- 3. Wiper blade (LH)
- 4. Wiper arm (LH)
- 5. Wiper arm cap

Refer to [GI-4, "Components"](#) for symbols in the figure.

Removal and Installation


INFOID:000000003761636

REMOVAL

1. Operate the front wiper to move it to the auto stop position.
2. Open the hood.
3. Remove the wiper arm cap.
4. Remove the wiper arm mounting nut.
5. Raise wiper arm, and remove the wiper arm from the vehicle.

INSTALLATION

1. Clean wiper arm mount as shown in the figure to prevent nuts from being loosened.
2. Operate the front wiper motor to move the wiper to the auto stop position.
3. Adjust the wiper blade position. Refer to [WW-105, "Adjustment"](#).
4. Install the wiper arm by tightening the mounting nut.
5. Inject the washer fluid.
6. Operate the front wiper to move it to the auto stop position.
7. Check that the wiper blades stop at the specified position.
8. Install the wiper arm cap.

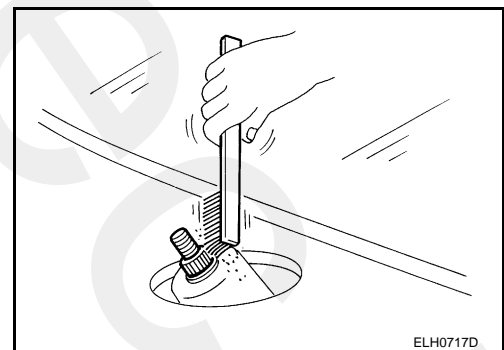

Adjustment

INFOID:000000003761637

WIPER BLADE POSITION ADJUSTMENT

Clearance between the end of cowl top cover and the top of wiper blade center


FRONT WIPER ARM

< ON-VEHICLE REPAIR >

Standard clearance

R : 47.6 ± 7.5 mm (1.874 ± 0.295 in)

L : 60.5 ± 7.5 mm (2.382 ± 0.295 in)

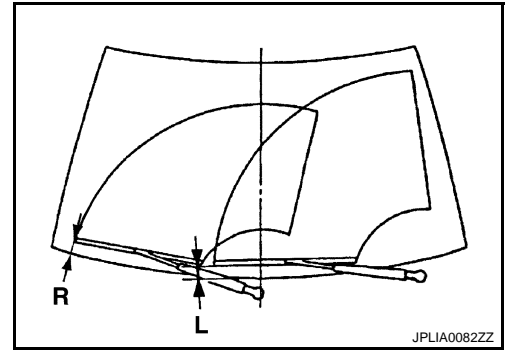

FRONT WIPER DRIVE ASSEMBLY


< ON-VEHICLE REPAIR >

FRONT WIPER DRIVE ASSEMBLY

Exploded View


INFOID:000000003761638

REMOVAL VIEW

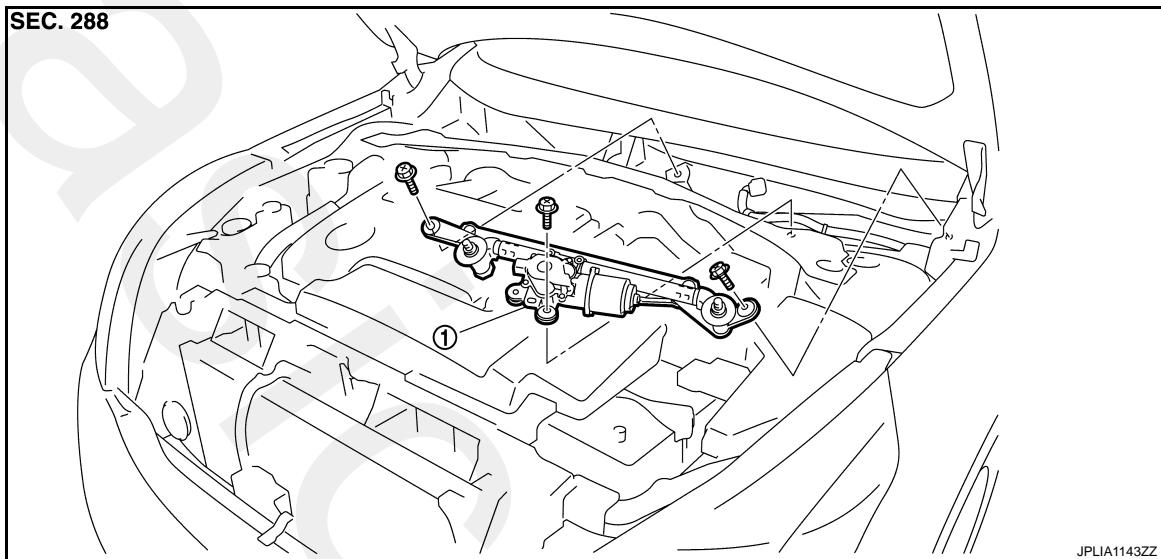


1. Front wiper drive assembly

DISASSEMBLY VIEW

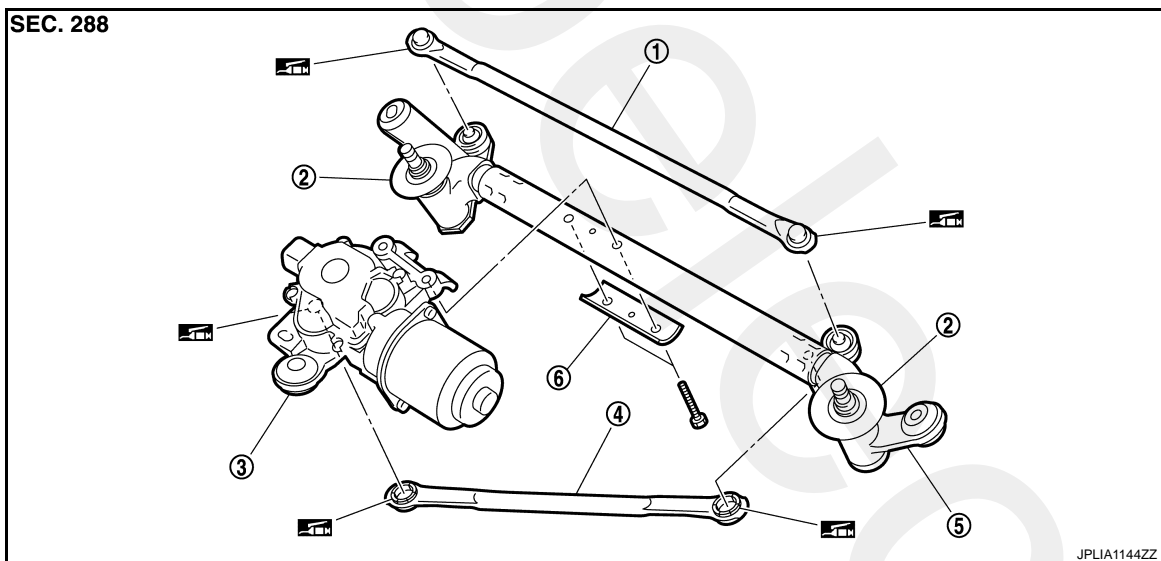

1. Wiper linkage 1
2. Shaft seal
3. Front wiper motor
4. Wiper linkage 2
5. Wiper frame
6. Bracket

: Multi-purpose grease or an equivalent.

Removal and Installation

INFOID:000000003761639

REMOVAL

1. Remove the wiper arm. Refer to [WW-105, "Exploded View"](#).
2. Remove the cowl top cover. Refer to [EXT-20, "Exploded View"](#).
3. Remove bolts from the front wiper drive assembly.

FRONT WIPER DRIVE ASSEMBLY

< ON-VEHICLE REPAIR >

4. Disconnect the front wiper motor connector.
5. Remove the front wiper drive assembly from the vehicle.

INSTALLATION

1. Install the front wiper drive assembly to the vehicle.
2. Connect the front wiper motor connector.
3. Operate the front wiper to move it to the auto stop position.
4. Install the cowl top cover. Refer to [EXT-20, "Exploded View"](#).
5. Install the wiper arms. Refer to [WW-105, "Exploded View"](#).

Disassembly and Assembly

INFOID:000000003761640

DISASSEMBLY

1. Remove the wiper linkage 1 and 2 from the front wiper drive assembly.
CAUTION:
Do not bend the linkage or damage the plastic part of the ball joint when removing the wiper linkage.
2. Remove the front wiper motor mounting bolts, and then remove the front wiper motor from the wiper frame.

ASSEMBLY

1. Connect the front wiper motor connector.
2. Operate the front wiper to move it to the auto stop position.
3. Disconnect the front wiper motor connector.
4. Install the front wiper motor to wiper frame.
5. Install the wiper linkage 2 to the wiper motor and the wiper frame.
6. Install the wiper linkage 1 to the wiper frame.
CAUTION:
 - Do not drop front wiper motor or cause it to come into contact with other parts.
 - Be careful for the grease condition at the wiper motor and wiper linkage joint (retainer). Apply Multi-purpose grease or an equivalent if necessary.

FRONT WIPER AND WASHER SWITCH

< ON-VEHICLE REPAIR >

FRONT WIPER AND WASHER SWITCH

Exploded View

INFOID:000000003761641

Refer to [BCS-79](#). "Exploded View".

A

B

C

D

E

F

G

H

I

J

K

WW

M

N

O

P